RG COLORADO 7

OWNER'S HANDBOOK

HOLDEN

GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

Change of name, address or ownership

In the event of a Safety Recall, or for various reasons, Holden may need to contact you as the owner of this vehicle.

If you have recently changed your address, or name, or purchased this vehicle second-hand, please help us to help you by taking a few minutes to fill in and mail the forms at the beginning of the Service/warranty booklet.

For information about GM Holden's privacy policy or to update owner details online, please visit Holden's website at www.holden.com.au

Note Please refer to the inside front cover of the Service/warranty booklet for the Vehicle Identification Certificate.

Printed in Australia
Part No. 92271685
December 2013 (MY14 RG Colorado 7. Print 2)

© 2013 GM Holden Ltd
Reproduction in whole or part is prohibited without written approval from GM Holden Ltd, ABN 84 006 893 232

Introduction 2
In brief 4
Keys, doors, and windows 16
Seats, restraints 29
Storage 53
Instruments and controls 61
Lighting 88
Infotainment system 94
Climate control 143
Driving and operating 153
Vehicle care 187
Service and maintenance 230
Technical data 232
Customer information 238
Index 240

Introduction

We thank you for choosing Holden and want to assure you of our continuing interest in your driving pleasure and satisfaction.

This handbook applies to the current Colorado 7 model. Therefore, due to different models and options, you may find reference in this Handbook to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this Handbook are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.

Introduction

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Handbook provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

Using this manual

- The In brief section will give you an initial overview.
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.
- Depending on the model variant, integrated special equipment and accessories, the scope of equipment of your vehicle can differ from the descriptions in this Owner's Handbook.
- The *Bluetooth*® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.
- iPod® is a registered trademark of Apple Inc.
- ESP® is a registered trademark of Daimler Chrysler AG.

Danger, warnings and cautions

⚠Danger

Text marked ⚠ **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

⚠Warning

Text marked ⚠ **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

In brief

Initial drive information

Locking/unlocking the vehicle

Remote keyless entry

- The key operates all doors and the ignition.
- Unlock all doors and the tailgate by pressing once.

  The hazard lamps flash twice.
- Press to lock all doors and the tailgate.

  The hazard lamps flash once.

Central locking system, see page 18.

Seat adjustment

Seat positioning

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Seat adjustment, see page 31.

Seat backrests

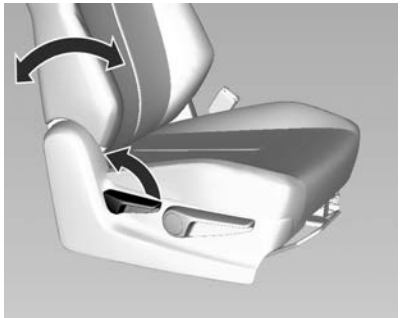

1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note
Do not lean on the seat when adjusting.

Seat adjustment, see page 31.

Seat height

The vehicle may have seat height adjustment.

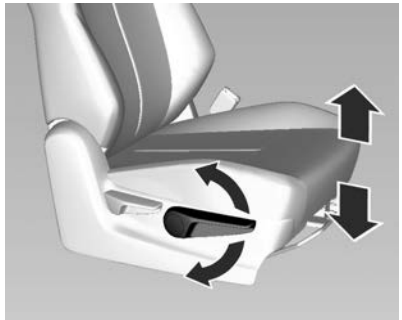

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

Seats adjustment, see page 31.

Power seat adjustment

Seat positioning

The vehicle may have power seat adjustment.

- Move the seat forwards or backwards by sliding the switch.

Seat adjustment, see page 31.

Seat backrests

- Recline the seatback by sliding the switch forwards or rearwards.

Seat adjustment, see page 31.

Seat height

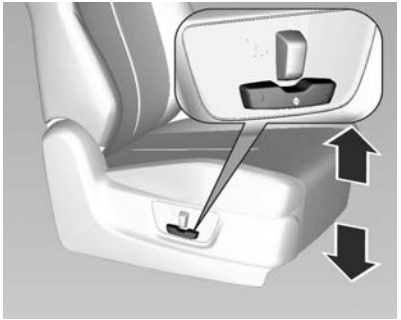

- To lower the seat cushion, push the switch downwards.
- To raise the seat cushion, pull the switch upwards.

Seats adjustment, see page 31.

Head restraint adjustment

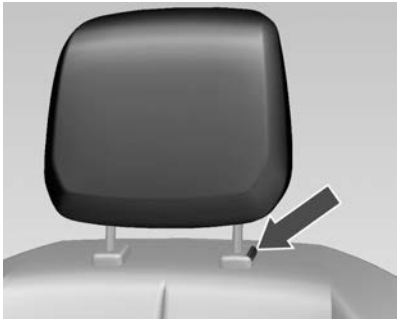

- To raise the head restraint, pull the head restraint upwards.
- To lower the head restraint, press the button and push the head restraint downwards.

Head restraints, see page 29.

Seat belts

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

Seat belts, see page 40.

Airbag system, see page 43.

Mirror adjustment

Interior mirrors

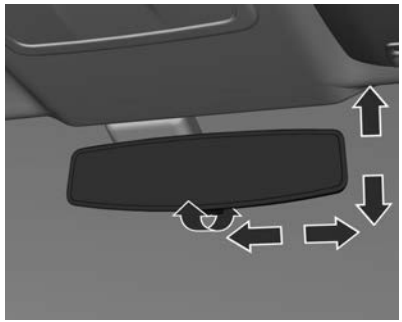

- To reduce headlamp glare from following vehicles, push the lever towards the front of the vehicle.

Interior mirrors, see page 25.

Exterior mirrors

The vehicle may have power mirrors.

L: Left side mirror selected

R: Right side mirror selected

●: No mirrors selected

To adjust an exterior mirror:

1. Push the switch to **L** or **R**.
2. Press the directional switch to adjust the angle of the mirror.

Exterior mirrors, see page 24.

Steering wheel adjustment

The vehicle may have steering wheel adjustment.

1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

Steering wheel adjustment, see page 61.

Ignition positions, see page 156.

Airbag system, see page 43.

Instrument panel overview

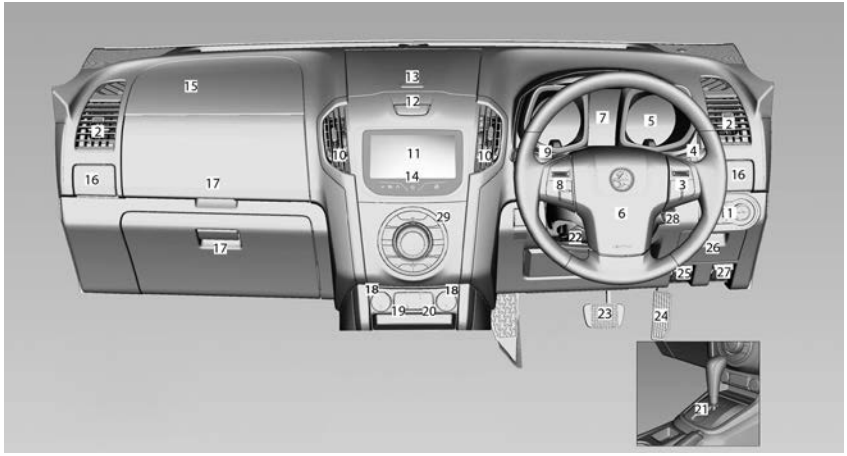

1 Exterior lamp control ... 88
2 Side air vents ... 151
3 Steering wheel controls (cruise control) ... 172
4 Turn signals, headlamp flash, low beam and high beam ... 88
Driver Information Centre switch ... 76
5 Warning light, gauges and indicators ... 66
6 Horn ... 62
Driver's airbag ... 43
7 Driver Information Centre (DIC) ... 76
8 Steering wheel controls (audio and phone) ... 96
9 Windscreen wiper, windscreen washer system ... 62
10 Central air vents ... 150
11 Infotainment system display ... 95
12 Hazard warning flashers ... 89
13 Instrument panel storage compartment ... 53
14 Infotainment system controls ... 95
15 Passenger airbag ... 43
16 Cup holder and storage ... 55
17 Glove box ... 55
Instrument panel storage ... 53
18 Power outlets ... 65
19 Traction control system off ... 168
Electronic stability control off ... 169
20 Descent Control System (DCS) ... 170

21 Shift lever 159
22 Steering wheel adjustment 61
23 Brake pedal 166
24 Accelerator pedal 153
25 Bonnet release lever 189
26 Instrument panel fuse box (behind storage compartment) 211
27 Fuel tank door release lever 179
28 Ignition switch/lock 156
29 Climate control 143

Exterior lighting

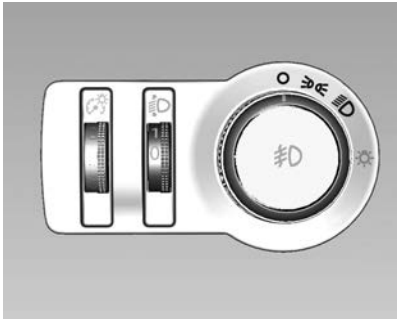

O (OFF): Rotate to turn all lamps and lights off.

(Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

D (Headlamps): Turns on the headlamps and all park lamps.

D (Fog lamps): Press to turn the front fog lamps on or off, when the park lamps or headlamps are on, while the ignition is on.

Exterior lighting, see page 88.

High/low beam

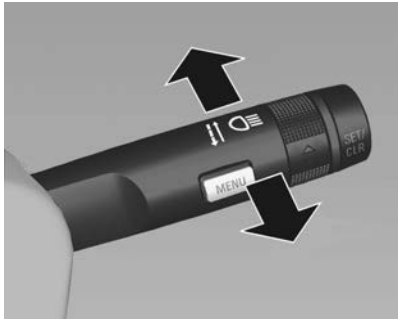

- To flash the headlamps, pull the lever.
- To switch from low to high beam, push the lever.
- To switch to low beam, push again or pull the lever.

Exterior lighting, see page 88.

Hazard warning flashers

- Press ⚠ to turn the hazard warning flasher on or off, when the ignition is in any position.

Exterior lighting, see page 88.

Turn and lane-change signals

- Push the lever in the direction the steering wheel is turned.
- A green arrow on the instrument panel flashes when the lamps are in operation.

Exterior lighting, see page 88.

Horn

Press .

Washer and wiper systems

Windscreen wiper

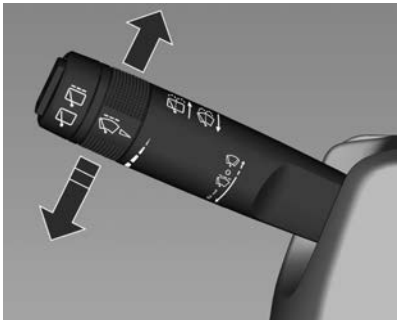

O: Off

: Intermittent operation

1: Continuous wipe, slow speed

2: Continuous wipe, fast speed

For a single wipe when the windscreen wipers are off, lightly move the lever up and release it.

Windscreen wiper/washer, see page 62.

Windscreen washer

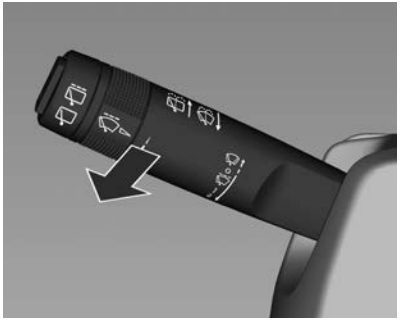

- Pull the lever rearwards to wash the windscreen.

  Washer fluid is sprayed onto the windscreen and the wipers operate.

Windscreen wiper/washer, see page 62.

Washer fluid, see page 196.

Rear window wiper/washer

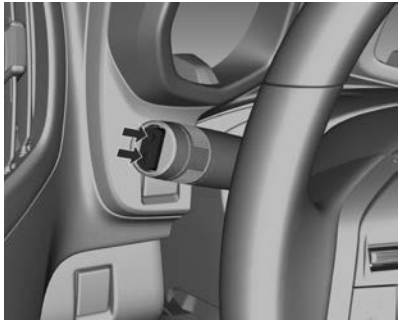

To activate the rear window wiper/washer:

- Press the lower position for continuous operation
- Press the upper position for intermittent operation
- Press the middle position to turn off

To wash the rear window:

- Push the lever forwards.

  Washer fluid is sprayed onto the rear window and the wiper operates.

Climate control

The climate control panel is located in the centre of the instrument panel.

Climate control, see page 143.

Transmission

P: Park

R: Reverse

N: Neutral

D: Drive

The shift lever can only be moved out of **P** when the ignition is on and the brake pedal is applied.

To engage **P** or **R**, push the release button on the front of the shift lever.

Manual mode: Move the shift lever to position **D**, then push to the left.

+ : higher gear

– : lower gear

Automatic transmission, see page 159.

Four-wheel drive, see page 162.

Starting off

Check before starting

- Check that windows, mirrors and lamps are clean.
- Visually check tyre inflation. Check the tyre pressures weekly.
- Ensure that all doors are closed and secured.
- Position your seat for comfortable driving.
- Adjust rear view mirrors.
- Fasten seat belts.
- Check that the warning indicators illuminate when turning the ignition on.

Warning lights, gauges and indicators, see page 66.

Driving and operating, see page 153.

Starting the engine

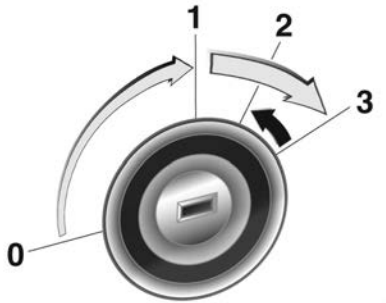

⚠Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) Turn the key to this position for preheating, until ϖ goes out.

When the key is in this position, the engine is ready to start and all electrical systems are active.

Do not leave the switch in this position for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

3: (START) Turn the key to this position and release when the engine is running.

Ignition positions, see page 156.

Automatic transmission, see page 159.

Parking

1. Apply the park brake.
2. Select position **P**.
3. Shut all windows.
4. Keep the engine running for about 1 to 2 minutes to protect the turbocharger.

   Turn the ignition off and remove the key.
5. Press on the key to lock all doors.

Driving and operating, see page 153.

Keys, doors and windows

Keys and locks 16
Doors 19
Vehicle security 22
Exterior mirrors 24
Interior mirrors 25
Windows 26

Keys and locks

Keys

- The key operates all doors and the ignition.
- Unlock all doors and the tailgate by pressing once.

  The hazard lamps flash twice.
- Press to lock all doors and the tailgate.

  The hazard lamps flash once.

See Central locking system on page 18.

See Tailgate on page 21.

Foldaway key blade

1. Press button to extend the key blade.
2. To retract the key blade, press the button and fold the blade into the key.

Infocard

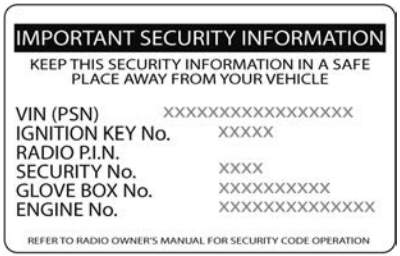
IMPORTANT SECURITY INFORMATION

KEEP THIS SECURITY INFORMATION IN A SAFE PLACE AWAY FROM YOUR VEHICLE

VIN (PSN) XXXXXXXXXXXXXXXXX
IGNITION KEY No. XXXXX
RADIO P.I.N.
SECURITY No. XXXX
GLOVE BOX No. XXXXXXXXXX
ENGINE No. XXXXXXXXXXXXXX

REFER TO RADIO OWNER'S MANUAL FOR SECURITY CODE OPERATION

The security card lists various security numbers for the vehicle, including key numbers.

Keep the card in a safe place, away from the vehicle.

If a key is lost, a replacement can be ordered through any Holden Dealer by quoting the key code number, security code number and providing proof of ownership.

About the keys

- The remote control has a range of up to 20 metres.
- The range depends on the charge of the key battery, on ambient conditions, the key's location and the area between them.
- Take care that no button is pressed unintentionally, especially when the vehicle is out of sight.
- Protect from moisture and high temperatures.

The key buttons may not work if:

- More than 20 metres from the vehicle.
- Battery voltage is too low. See Battery replacement on page 18.
- The key buttons are operated repeatedly while not in range of the vehicle.
- The central locking system is operated at frequent intervals.
- The power supply is interrupted for a short time.
- The vehicle is parked near strong radio activity.

Replacement keys

If a key is lost, a replacement can be ordered through any Holden Dealer by quoting the key code number. The number is printed on the infocard.

Radio remote control

Battery replacement

As soon as the range of the remote control reduces, replace the battery:

Replace battery in remote key is also displayed on the instrument panel when the battery requires replacing.

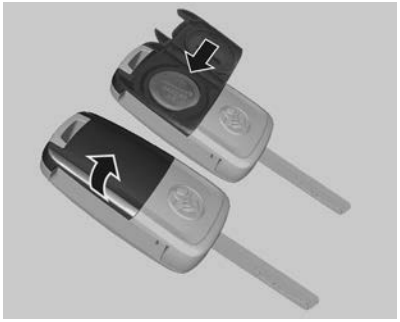

Use CR2032 (or equivalent) battery.

1. Open the cover.
2. Remove the used battery.
3. Install the new battery.

   Place the negative side (-) down towards the base.
4. Close the cover.
5. Check the key operation.

Note

- Batteries do not belong in household waste. Dispose of at an appropriate recycling collection point.
- Avoid dropping the transmitter.
- Do not place heavy objects on the transmitter.
- Keep the transmitter away from water and direct sunlight.

  If the transmitter gets wet, wipe it with a soft cloth.

Caution
Avoid touching the flat surfaces of the battery, the circuit board and other components inside the remote control with bare fingers. Handling will shorten battery life.

Central locking system

Doors may be locked and unlocked by pressing buttons on:

- The driver's door
- The key from inside or outside the vehicle

Note

- The driver's door must be closed for the driver's door to lock.
- Pulling on an interior door handle will not unlock a door unless an unlock button has been pressed.

To customise features, see Vehicle personalisation on page 85.

Central locking button

Locks and unlocks all doors.

- To lock, press on the front section of the switch.
- To unlock, press on the rear section of the switch.

Doors

Manual door locks

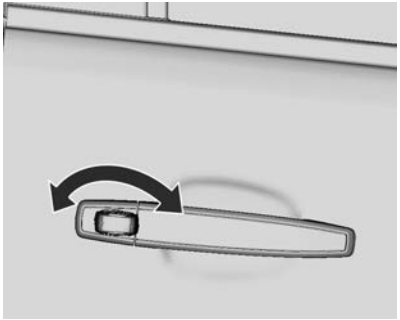

- Insert the key into the door lock.
- Turn the key clockwise to lock.
- Turn the key anticlockwise to unlock the driver's door.

Note
Tap the key slot or heat the key if the door does not open in cold weather.

Door lock snibs

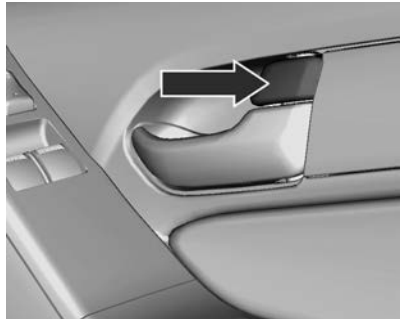

- To lock any door from the inside, push the door lock snib so it is flush with the door handle.
- To unlock any door from the inside, pull the door lock snib outwards.
- The driver's door lock snib does not operate when the door is open.

Note
Do not operate the switches constantly.

Child security rear door locks

The vehicle has child security rear door locks.

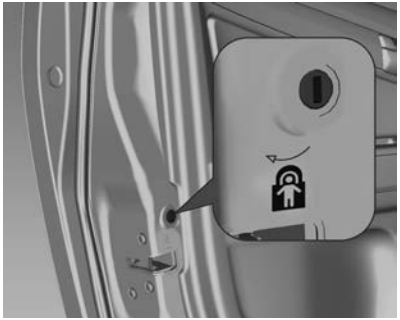

⚠Warning

Use the child security door locks whenever children are occupying the rear seats.

The child security rear door locks prevent the rear doors from being opened from the inside.

Rotate the switch using a key or suitable screwdriver.

To activate:

- Rotate the switch in a clockwise direction.

To open a door when the child security rear door lock is activated:

- Open the door from the outside.

Side steps

The vehicle may have side steps.

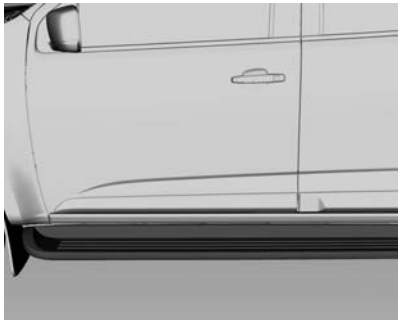

The side steps provide an extra foothold for accessing the front or rear doors.

Tailgate

⚠Danger

It can be very dangerous to drive with the tailgate open. Carbon monoxide (CO) gas can enter into the vehicle. You can not see or smell CO. It can cause unconsciousness and even death.

If you must drive with the tailgate open, make sure all other windows are closed and switch the fan on to the highest speed using any setting that brings in outside air. Doing this will force outside air into the vehicle.

Caution

Before opening the tailgate, check the area above and behind for obstructions, to avoid damage to the tailgate.

Note
Adding heavy accessories to the tailgate may affect its ability to remain open.

Opening

1. Push the touchpad button on the tailgate.
2. Pull the handle upwards to open.

Note
If the tailgate is open when the ignition is turned on, a message is displayed in the DIC and a chime sounds.

Closing

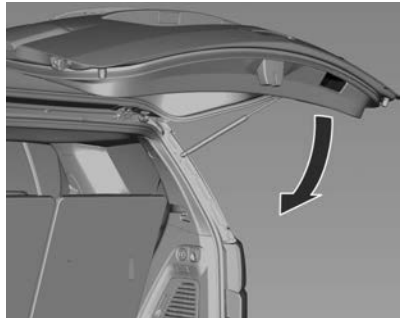

- Pull the interior handle downwards so the tailgate latches securely.

Note
Do not operate the touchpad button below the number plate while closing, as this will unlatch the tailgate or open it again.

Manual tailgate release

If the battery has been disconnected or is flat the tailgate unlock button will not operate.

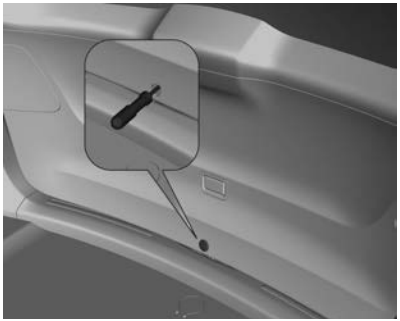

To open the tailgate:

1. Remove the interior trim cover from the central latch area.
2. Using a screwdriver, push inwards as far as possible and turn anticlockwise.

Vehicle security

Anti-theft alarm system

The system monitors the doors, ignition, bonnet and tailgate.

The system is activated:

- Thirty seconds after locking the vehicle.
- Alternatively, by pressing a second time.

The system is deactivated by:

- Pressing on the key.

Note

- If the driver's door is opened manually, while the alarm is activated, the key needs to be inserted into the ignition within 10 seconds to avoid triggering the alarm. During the 10 seconds, the horn sounds and the hazard warning flashers activate.
- When the alarm is triggered, the horn sounds and the hazard warning flashers activate for 30 seconds.
- If the alarm was triggered during alarm activation, the horn will sound three times and the hazard warning flashers will activate three times.

Status LED

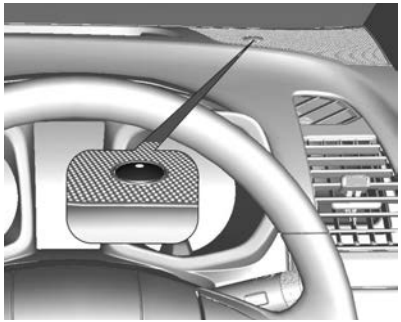

The status LED is located on top of the instrument panel.

During the first 30 seconds of system activation:

- LED illuminates (test, arming delay).
- LED flashes quickly (doors or bonnet are not completely closed, or there is a system fault).

When the system is armed:

- LED flashes slowly.

If a fault occurs, contact a Holden Dealer.

Immobiliser

The immobiliser prevents unauthorised engine starting.

- If an invalid key is inserted into the ignition switch/lock, an indicator on the instrument panel will flash.

  The vehicle will not start.
- The engine is automatically immobilised after the key is turned to LOCK and has been removed from the ignition switch/lock.
- Only valid ignition keys can be used to start the engine.
- If flashes or illuminates when the ignition is on, there is a fault in the system. The engine cannot be started. Turn the ignition off and on again.

  If the control indicator continues to flash or illuminate, try to start the engine using the spare key.

  Have the vehicle checked by a Holden Dealer.

Note
The immobiliser does not lock the doors.

See Vehicle security on page 22.

See Control indicators on page 69.

Exterior mirrors

Convex mirror

The convex exterior mirrors provide a wider view of the road and traffic.

⚠Warning

Objects seen in these mirrors are closer than they appear.

Manual mirrors

The vehicle may have manual mirrors.

- Press the edges to adjust the angle of the mirror.

Power mirrors

The vehicle may have power mirrors.

Adjust the driver or passenger side mirror.

L: Left side mirror selected

R: Right side mirror selected

●: No mirrors selected

To adjust an exterior mirror:

1. Push the switch to **L** or **R**.
2. Press the directional switch to adjust the angle of the mirror.

Folding mirrors

Manual folding

The vehicle may have manual folding mirrors.

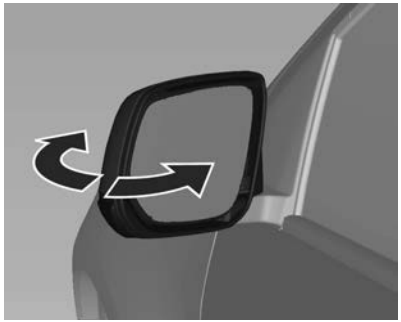

When the vehicle is parked, the mirrors may be folded flat against the side of the vehicle.

Electric folding

The vehicle may have electric folding mirrors.

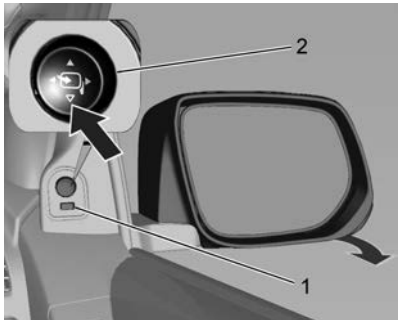

1. Push the switch (1) to the central position ●.
2. Push the directional switch (2) downwards.

   Both exterior mirrors fold inwards.
3. Push the directional switch (2) down again.

   Both exterior mirrors return to their original position.

Note

If one mirror is manually extended or folded, by pressing the directional switch (2) down, the other mirror will be extended or folded.

⚠Warning

Always extend mirrors outwards for driving to increase visibility.

Do not drive while either exterior mirror is folded against the vehicle.

Interior mirrors

Rear view mirror

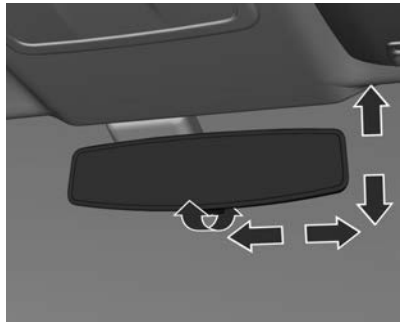

Adjust the rear view mirror to provide a clear view behind the vehicle.

To reduce headlamp glare from following vehicles, push the lever towards the front of the vehicle.

Note

The rear view clarity is reduced when the mirror is set to the anti-glare position.

Return the lever back to its original position as soon as the glare has disappeared.

Windows

Power windows

⚠Warning

Before operating the power windows, check they are free of obstructions and that passengers and pets are not in the proximity of the moving window.

- The power windows can be operated when the ignition is turned on.
- The switches can be operated for up to 10 minutes, after turning the ignition off.
- After turning the ignition off, window operation is disabled when either the driver or passenger door is opened.

Note
If the windows are operated repeatedly, window operation is disabled for some time.

Operation

- To open a window, press the switch down.
- To close a window, pull the switch up.
- The window stops moving up as soon as the button is released.

Auto up/down

The driver's window has an auto up/down function.

- To open the window automatically, press the switch fully down.
- To close the window automatically, pull the switch fully up.
- The window will open or close fully when the switch is released.
- Press or pull the switch to interrupt automatic operation.

Anti-pinch function

If the driver's window encounters any resistance during auto closing, it will stop immediately and open again.

Safety override function

If a window becomes difficult to close, possibly due to frost:

1. Pull the switch upwards and hold.
   The window moves up without the anti-pinch function.
2. Release the switch to stop window movement.
3. Operate the switch once more in the same direction, to continue closing.

Initialising the power windows

If the driver's window cannot be closed automatically, e.g. after disconnecting the battery, operate the window as follows:

1. Turn the ignition on.
2. Press the switch down for 2 seconds to move the window down.
3. Pull the switch up to move the window up and close it completely, holding the switch up for an additional 2 seconds after the window stops.

Child safety switch

Press ⛌ to activate/deactivate the front passenger and rear door power window switches.

Heated rear window

The vehicle has a heated rear window. See Climate control on page 143.

Sun visors

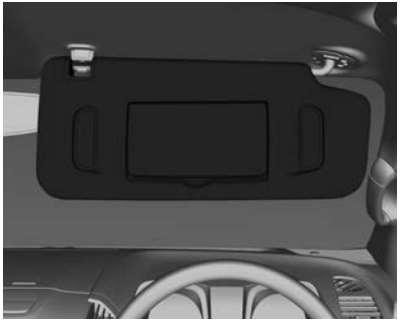

- The sun visors can be folded down or folded outwards over the side window, to prevent glare.
- Close the mirror cover before driving.

⚠Warning

Do not place the sun visor in such a position that it reduces visibility of the roadway, traffic or other objects.

Assist grips

- Assist grips are located above the doors to assist passengers getting in and out of the vehicle.
- The assist grips above each rear door include a coat hook.

Seats, restraints

Head restraints 29
Front seats 31
Rear seats 34
Seat belts 40
Airbag system 43
Child restraints 47

Head restraints

⚠Warning

This safety feature is not intended to rest the head upon. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.

The centre of the head restraint should be at eye level, never at neck level.

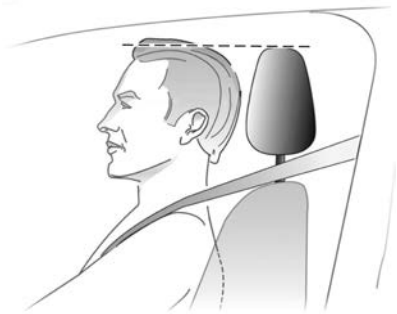

Height adjustment

Head restraints on front seats

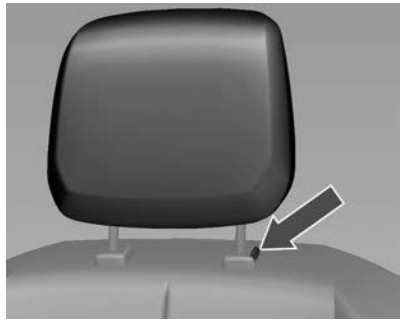

- Pull the head restraint up.
- To move down, press the locking button and push the head restraint downwards.

Head restraints on rear seats

⚠Warning

The centre of the head restraint should be at eye level, never at neck level.

Height adjustment second row seats

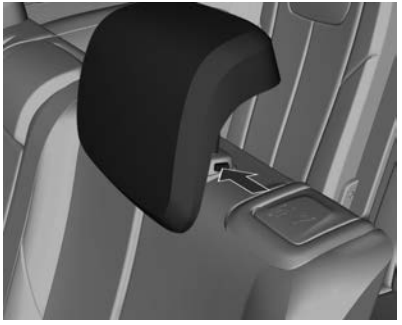

- Pull the head restraint up.
- To move down, press the locking button and push the head restraint downwards.

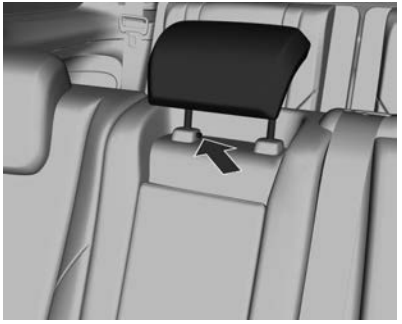

- Pull the head restraint up.
- To move down, press the locking button and push the head restraint downwards.

Height adjustment third row seats

- Pull the head restraint up.
- To move down, press the locking button and push the head restraint downwards.

Front seats

Seat position

⚠Warning

To avoid reducing the effectiveness of seat belts, seatbacks should only be upright or at most semi-reclined when the vehicle is moving.

- Sit centrally in the seat.
- Use the backrest and cushion for support.
- Adjust the seat so that your legs are slightly angled when against the pedals.
- Adjust the backrest angle to easily reach the steering wheel with arms slightly bent. See Steering wheel adjustment on page 61.
- Maintain contact between shoulders and the backrest when turning the steering wheel.
- Adjust the head restraint. See Head restraints on page 29.
- Slide the passenger seat as far back as possible.

Seat adjustment

⚠Danger

Do not sit nearer than 25 cm from the steering wheel, to allow safe airbag deployment.

⚠Warning

Do not adjust the driver’s seat when the vehicle is moving as the seat could move suddenly causing the driver to lose control.

Seat positioning

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Seat backrests

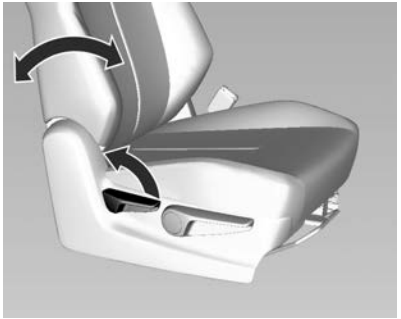

1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note
Do not lean on the seat when adjusting.

Seat height

The vehicle may have seat height adjustment.

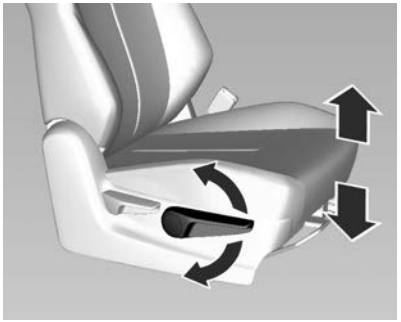

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

Power seat adjustment

Seat positioning

The vehicle may have power seat adjustment.

- Move the seat forwards or backwards by sliding the switch.

Seat backrests

- Recline the seatback by sliding the switch forwards or rearwards.

Seat height

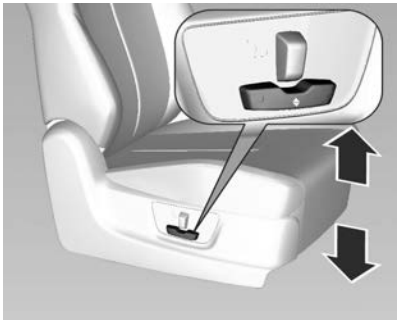

- To lower the seat cushion, push the switch downwards.
- To raise the seat cushion, pull the switch upwards.

Rear seats

⚠Danger

Ensure the rear seatbacks are securely in place.

Ensure the head restraints are adjusted correctly. The centre of the head restraint should be at eye level, never at neck level.

Do not adjust the rear seatback while the vehicle is moving. This could cause damage or injuries to the occupants.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback could be thrown within or ejected from the vehicle in a sudden stop or accident.

Ensure all luggage and objects in the passenger compartment are secured.

Caution

Do not trap the seat belt when returning the seatback to the upright position.

Second row seats

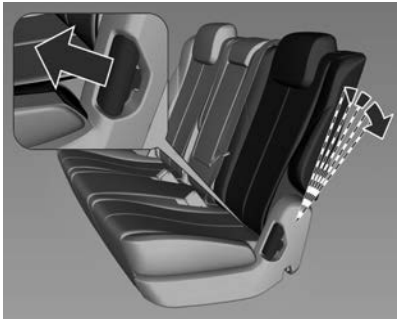

To adjust the seatback:

1. Pull the lever.
2. Adjust the seatback.
3. Release the lever and allow the seatback to engage.

⚠Warning

When second row seats are being adjusted, folded or tumbled, keep hands, arms, legs and feet away from moving parts.

Ensure seats are fully engaged before driving.

Caution

Never sit on or place objects higher than the seats, when in the tumbled position.

To allow access to the third row seats, fold the second row seats forwards:

1. Push the head restraints down to their lowest position.

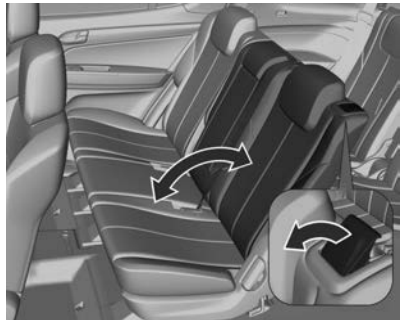

2. Unhook the seat belts and return to their stowed position.
3. Pull the release lever and fold the seatback forwards.

Caution

Do not fold the seatbacks when the seat belts are buckled or pulled out.

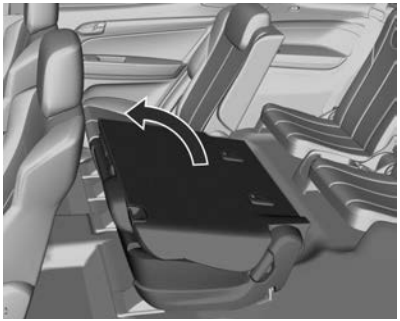

4. Move the seat towards the front.
5. Fold up against the front seats.

Seat position instructions are displayed on the back of the seats.

Note

- Do not place feet or legs on a folded seat (1).
- Do not keep the second row folded when passengers are seated in the third row or while the vehicle is moving (2).
- Be careful when tumbling the second row seats when passengers are seated in the third row (3).
- Correct position of the second and third row seats when travelling (4).

To raise the second row seats:

1. Raise the seatback rearwards.

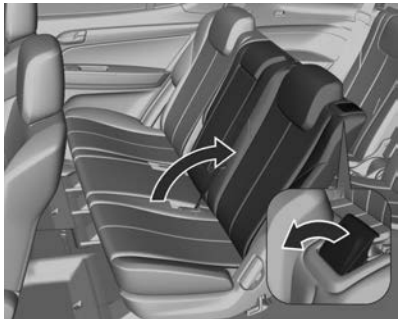

2. Pull the release lever and raise the seatback until it engages.
3. Adjust the head restraints. See Head restraints on page 29.

Third row seats

To fold the third row seats forwards:

1. Push the head restraints down to their lowest position.
2. Unbuckle the seat belts and return them to their stowed position.

Caution
Do not fold the seatback when the seat belts are buckled or pulled out.

3. Guide the seat belts through the belt holders.

Note

If the third row seats are unoccupied, guide the seat belts through the belt holders to avoid rattling while driving.

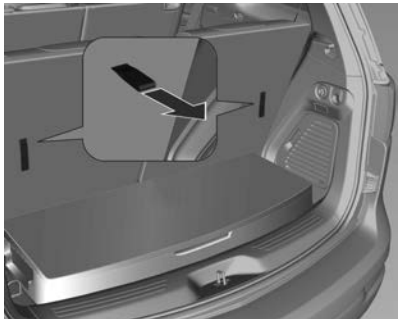

4. From the rear of the vehicle, pull the strap and release.

⚠Warning

Do not hang or load objects on the straps.

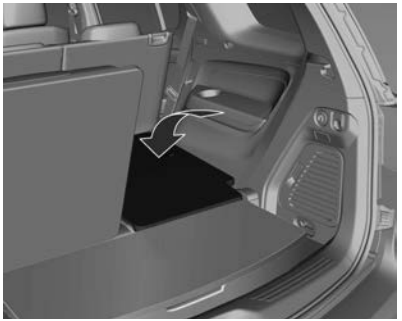

5. Push the seatback forwards.

To raise the third row seats:

1. Guide the seat belts through the belt holders.

⚠Warning

Ensure the seat belts are removed from the belt holders when the seat is occupied.

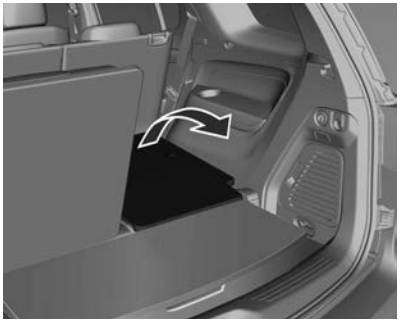

2. From the rear of the vehicle, pull the strap rearwards until the seatback engages.
3. Adjust the head restraints. See Head restraints on page 29.

⚠Warning

Removing second and/or third row seats is not recommended. If the seats must be removed, contact a Holden Dealer. Incorrect disassembly may cause serious injuries.

If a cargo barrier is installed, the third row seats should not be occupied.

Seat positioning

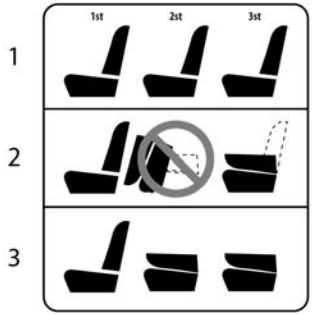

- The correct seat configuration for passengers (1).
- This configuration should only be used for access to the third row seats (2).
- The correct configuration for cargo placement (3).

Armrest

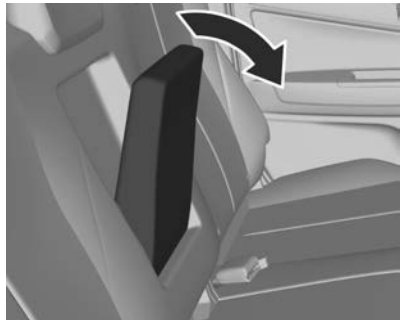

Unfold the armrest by pulling downwards from the top.

Seat belts

⚠Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant. It is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

The belts lock during heavy acceleration or deceleration for the safety of the occupants.

Belt force limiters

On front seat three point belts, stress on the body is reduced by the gradual release of the belt during a collision.

Belt tensioners

In the event of a front, side or rear collision of a certain severity, the driver's and/or front passenger's three point seat belts are tightened.

⚠Warning

Incorrect handling (e.g. removal or fitting of belts or belt buckles) can deploy the belt tensioners with risk of injury.

- When the belt tensioners have been deployed, illuminates on the instrument panel. See Seat belt reminders on page 70.
- Deployed belt tensioners must be replaced.
- Belt tensioners are only triggered once.

⚠Warning

Do not attach or install objects that may interfere with the operation of the belt tensioners.

Do not make any modifications to belt tensioner components.

Three point belt

Fitting

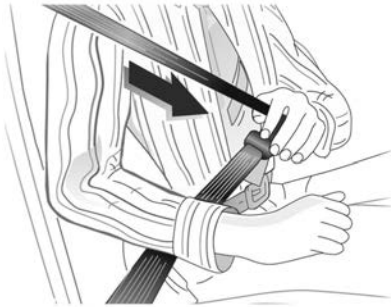

The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

Do not place objects such as handbags or mobile phones between the belt and your body.

⚠Warning

The belt must not rest against hard or fragile objects in the pockets of your clothing.

Note

If the shoulder portion of a passenger seat belt is pulled out all the way, a locking feature may be engaged. If this happens, let the belt go back all the way and start again.

Height adjustment

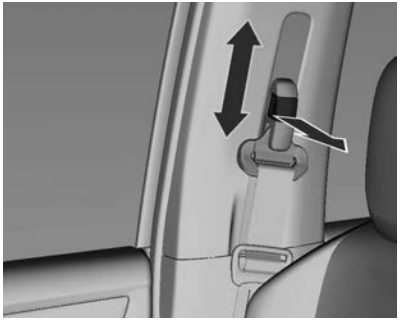

1. Pull the belt out slightly.
2. Pull the button outwards.
3. Move up and down as required.
4. Ensure that the anchor clicks into position.

⚠Warning

Do not adjust the belt while driving.

The belt must lie across the shoulder. It must not lie across the throat or upper arm.

Removing

1. Press the red button on the buckle.
2. Allow the belt to retract.
3. Check that it fully retracts without twisting or turning.

Seat belt use during pregnancy

⚠Warning

The lap belt must be positioned as low as possible across the pelvis to prevent pressure on the abdomen.

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.

Seat belt care

⚠Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Replacing seat belts after a crash

⚠Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Airbag system

When deployed, airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

⚠Danger

Do not make any modifications to the airbag system.

The driver should sit back as far as possible while still maintaining control of the vehicle. Sitting too close to the airbag can cause death or serious injury when it inflates.

Always wear a seat belt.

⚠Warning

WARNING – EXTREME HAZARD!

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats. See Child restraints on page 47.

⚠Warning

Airbags are part of the supplemental restraint system (SRS) as they assist, but do not replace seat belts. Airbags do not deploy in every accident. Various factors dictate whether they deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving.

Airbags inflate with great force. If you are too close to an inflating airbag it may cause injury. Seat belts help keep you in position for airbag inflation in the event of a collision.

See Airbag and belt tensioners light on page 71.

Front airbag system

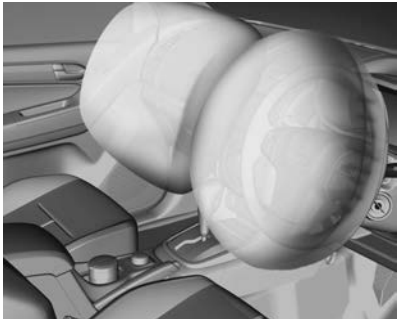

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger side. These are identified by the word **AIRBAG**.

⚠Warning

The horn pad must not be covered with adhesive or any other material.

The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

⚠Warning

Do not place any objects on or over the instrument panel or between an airbag and yourself.

Do not hang anything from the sun visor or mirror.

Passengers must not rest their feet on the instrument panel.

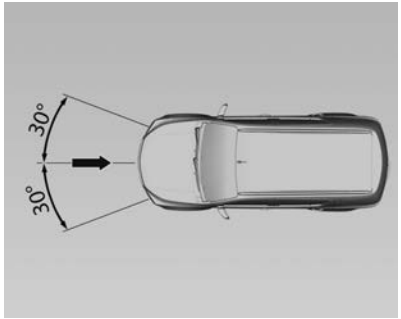

Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or in rollovers. Always wear a seat belt.

Side airbag system

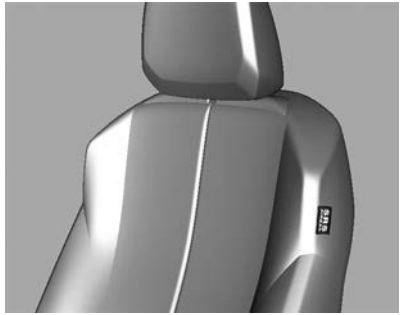

Side Impact Airbags (SIAB) are stored in the sides of the front seats, the side closest to the door.

SIAB are identified by the labels with the words **SRS AIRBAG** on the seatback.

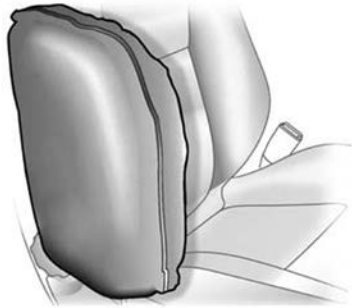

SIAB deploy in most, but not all, severe side impacts.

Because there is limited time available to detect some side impacts, it is not possible to deploy the SIAB in all serious accidents.

A SIAB will deploy in certain severe side impacts. SIAB are not designed to inflate if the vehicle is struck from the front, rear, or in rollovers. Always wear a seat belt.

⚠Warning

Do not fit unauthorised seat covers as they may impair the deployment of the Side Impact Airbags (SIAB).

Do not position your body or any object (including pillows) between front seats and doors.

Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.

Curtain airbag system

- Curtain airbags are stored in the roof on each side of the vehicle.
- They can be identified by the word **AIRBAG** on the roof pillars.

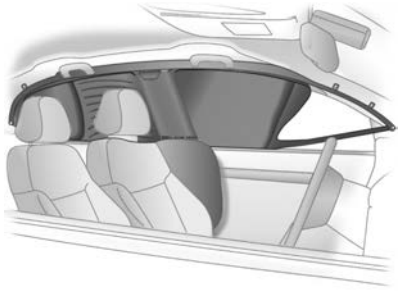

- The curtain airbags deploy in most, but not all severe side impacts.
- The risk of injury to the head in the event of a side impact is considerably reduced.

⚠Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates. Refer to the illustration.

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.

Replacing airbag system parts after a crash

Note
After an accident where airbags have deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The airbag system should also be inspected after an accident if:

- The instrument panel area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a Holden Dealer or approved repairer.

Child restraints

⚠Warning

WARNING – EXTREME HAZARD!
Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.
The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.
Remember that it is safest for children to be seated in the rear seats.
Never carry a child while travelling in the vehicle.

⚠Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers are suitably restrained. In most States and Territories of Australia and New Zealand, specific laws may exist which require children to be seated in approved child restraints.

Holden strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint is suitable for your child.

⚠Warning

Always ensure that the seat belt fits firmly around the child restraint.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

Child restraint seat belt locking feature

The second row seat belts have a child restraint locking feature.

When engaged, this feature prevents the seat belt from being loosened without releasing the buckle.

To engage:

1. Clip the metal tongue into the buckle.
2. Pull the shoulder belt all the way out of the retractor to set the lock. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.
3. To tighten the belt around the installed child seat, push down on the child restraint, pull the shoulder portion of the belt to tighten the lap portion of the belt and feed the shoulder belt back into the retractor.

4. Try to pull the belt out of the retractor to make sure the retractor is locked. If the retractor is not locked, repeat Steps 2 to 4.
5. To remove, press the release button on the buckle and allow the belt to fully retract.

Selecting the right system

Infants

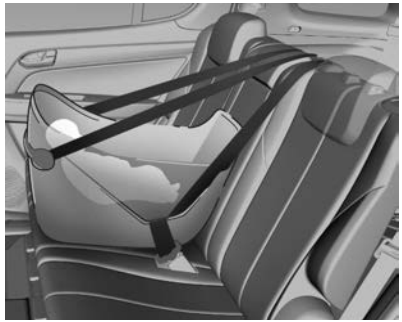

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

Young children

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

Booster seats

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

⚠Warning

Always move the passenger seat as far back as it will go before installing a booster seat. This locates the child as far from the passenger airbag as possible.

Remember that it is safest for children to be seated in the rear seats.

Older children

A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.

Where to put the restraint

⚠Warning

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Only child restraints that have clips to attach to the vehicle's anchorage fittings are to be used. Earlier types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

The child restraint must be attached to the child restraint anchorage points, located behind the second row rear seatbacks.

Do not place child restraints on the third row seats.

Remember, it is safest for children to be seated in the rear seat.

Note
If unsure about installing a child restraint, contact an approved restraint fitting station or a Holden Dealer.

ISOFIX child restraint systems

Fasten vehicle-approved ISOFIX child restraint systems to the ISOFIX mounting brackets.

Note Ensure that seat belt buckles are placed out of the way of the child seat.

ISOFIX mounting brackets are indicated by a label on the seatback, as shown. In addition to the ISOFIX mounting, fasten the top-tether straps to the top-tether anchorage points. See Top-tether child restraint systems on page 51.

Top-tether child restraint systems

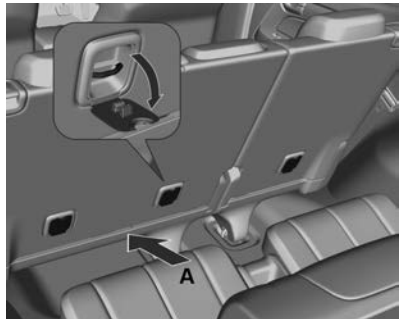

A. Front of vehicle

The child restraint tether anchors are located at the rear of the second row rear seats in line with the three rear seating positions.

Note
Use the child restraint anchors for their designed purpose only.

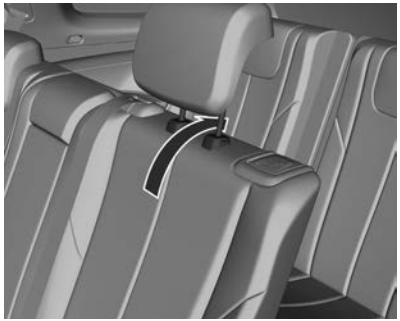

Note
Always pass the child restraint tether anchor between the head restraint and seatback.

Child restraint installation

When using a child restraint, read the installation instructions supplied with the child restraint and follow the directions for fitment carefully.

The child restraint system should be secured in conjunction with the vehicle's seat belt.

Secure the child in the restraint in accordance with the manufacturer's instructions.

If unsure about installing a child restraint anchor fitting, contact an approved restraint fitting station or a Holden Dealer.

Storage

Storage compartments 53
Additional storage features 58
Roof rack system 60
Loading information 60

Storage compartments

Instrument panel storage

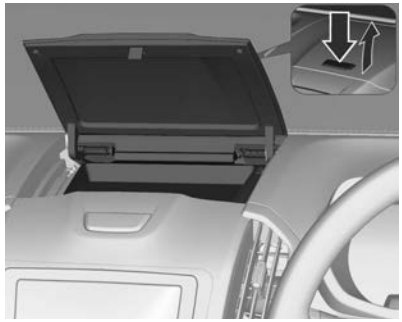

The vehicle may have a storage compartment located in the centre of the instrument panel.

- To open, press the button.
- To close, push the lid down until it latches into position.

Caution

Do not leave glasses or flammable items, such as a cigarette lighter, in the compartment when parked in direct sunlight or in hot weather, as they may become very hot.

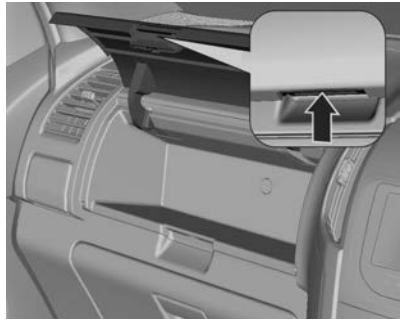

A storage compartment is located on top of the glove box.

- To open, press the button on the lower front of the lid.
- To close, push the lid down until it latches into position.

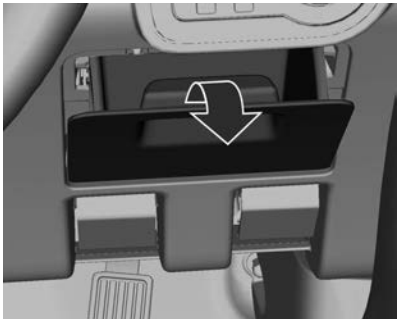

A storage compartment is located under the light switch, on the driver side.

- To open, pull the lid rearwards.
- To close, push the lid until it latches into position.

Front storage

A storage compartment is located within each door.

The compartment has a bottle holder.

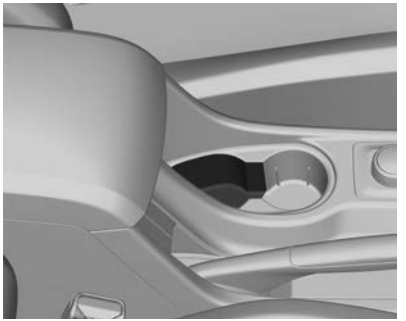

The vehicle may have a storage compartment located between the front seats.

Glove box

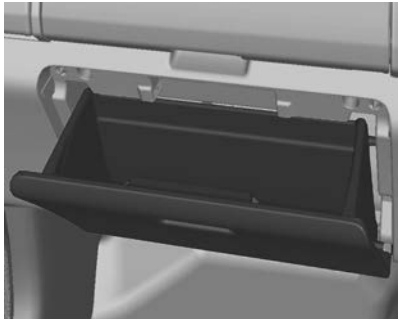

The glove box is located in the instrument panel, in front of the passenger's seat.

- To open, pull the handle rearwards.
- To close, push the lid firmly back into place.

⚠Warning

To reduce the risk of injury, always keep the glove box door closed when driving.

Cup holders

⚠Warning

To avoid scalding, never place hot drinks in the cup holders.

Do not place uncovered containers of liquid in the cup holder while the vehicle is in motion.

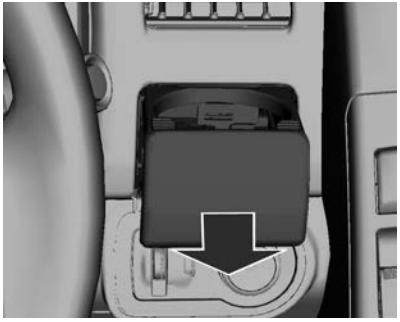

A cup holder is located under each side air vent.

- Pull to open.
- Push to close.

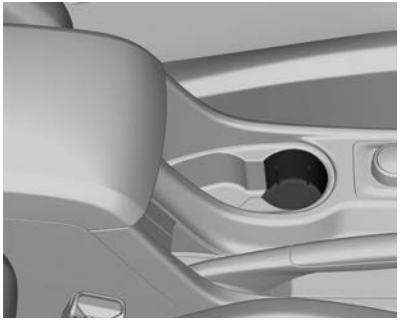

The vehicle may have cup holders located in the centre console, between the front seats.

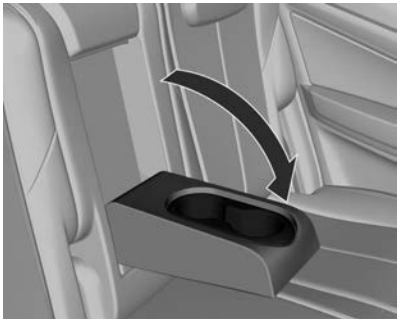

Cup holders are located within the second row armrest.

To access, fold the armrest down.

Cup holders are located at each side of the third row.

Sunglasses holder

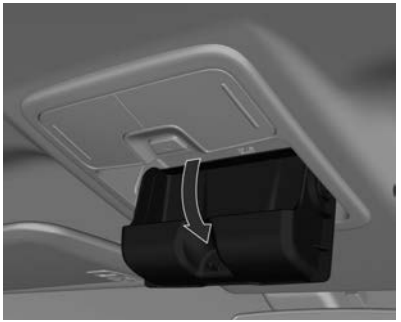

- To open, push the rear part of the cover.
- To close, pull the cover up and push until it latches into place.

Note
Do not use to store heavy objects.

Armrest storage

The vehicle may have a storage compartment located within the armrest.

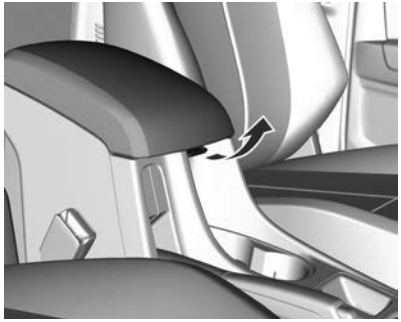

1. To open, lift the latch.
2. Lift the armrest lid upwards.

The USB/AUX socket is located inside the storage compartment.

Third row storage

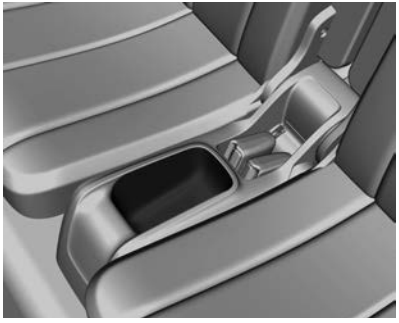

Storage compartments are located in the third row.

Load compartment storage box

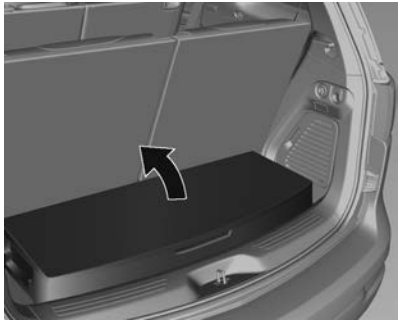

- To open, lift the lid.
- The load compartment cover can be stored inside the storage box when not in use.

Additional storage features

Load compartment cover

The vehicle may have a load compartment cover.

⚠Warning

Do not place any items on top of the cargo blind.

Do not allow any items underneath to contact the cargo blind.

1. Guide the seat belts through the belt holders.

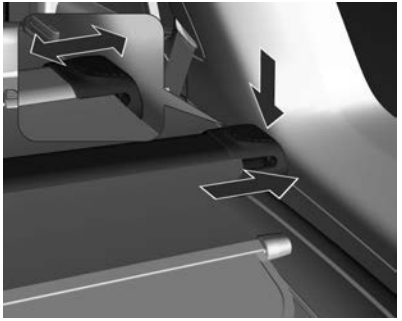

To install the cover:

2. Fold the third row of seats.
3. Insert the cover into the recess on the driver side.
4. Insert the cover into the recess on the passenger side to engage.

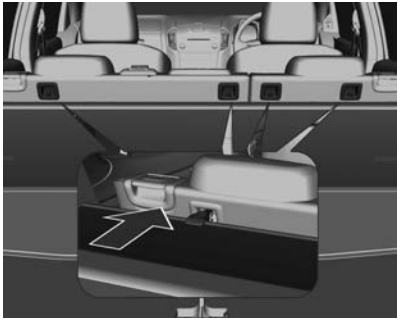

5. Push the cover forwards and engage it in the hooks on the back of the second row seats.

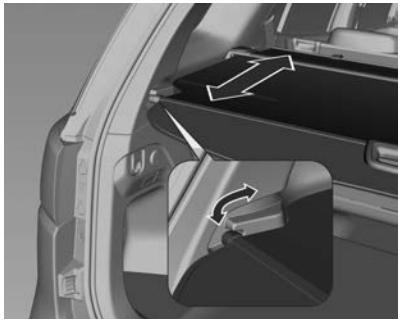

To extend the cover:

6. Use the handle to pull the cover rearwards.
7. Engage the cover in the latches on each side.

To retract the cover:

8. Use the handle to pull the cover rearwards slightly.
9. Gently roll the cover up while holding the handle.

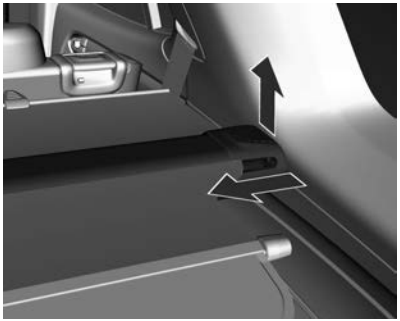

To remove the cover:

10. Retract the cover.
11. Pull the bar at each side of the cover towards the centre.
12. Lift and remove the cover from the side recesses.

To stow the cover:
When not in use, stow the cover in the recess in the load compartment storage box.

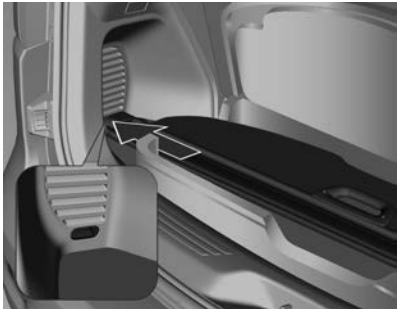

13. Retract the cover.
14. Ensure the top is facing upwards then insert the cover into the recess on the passenger side.
15. Insert the cover into the recess on the driver side to engage.

Note Pull the cover handle rearwards to fit the cover into the storage box, to allow the lid to close.

16. To release the cover remove one side of the cover, then the other side.

Roof rack system

- Distribute the load evenly and secure tightly with straps.
- When carrying loads on the roof rack (elevated load), avoid hard braking, abrupt swerving or sharp steering.

  Roof rack elevated loads alter the handling of a vehicle.

⚠Warning

The total elevated load, including the weight of the cross bars, must not exceed 100 kg. Distribute the load evenly.

Note
The weight of the cross bars and the load must be included when calculating the total vehicle load.

Loading information

⚠Danger

Do not stack objects higher than the front seats.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Serious injuries or death can result.

- Secure objects to prevent from sliding or being thrown out.
- Distribute load weight evenly.
- Adjust the tyre pressures and vehicle speed according to the load conditions. Check and retighten the straps frequently. See Tyre pressure on page 237.
- Place heavier objects at the bottom.
- Do not drive with the tailgate open.
- Do not exceed the maximum load weights. See Axle loads on page 236.
- Do not place any objects on the instrument panel.
- Ensure the backrests are securely engaged.
- Do not place unsecured objects in the passenger compartment.

Instruments and controls

Controls 61
Warning lights, gauges and indicators 66
Information displays..... 76
Vehicle personalisation..... 85

Controls

Steering wheel adjustment

⚠Warning

Do not attempt to adjust the steering wheel while driving.

The vehicle may have steering wheel adjustment.

1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

Steering wheel controls

The vehicle has steering wheel controls which can be used to operate the infotainment system.

See Steering wheel remote controls on page 96.

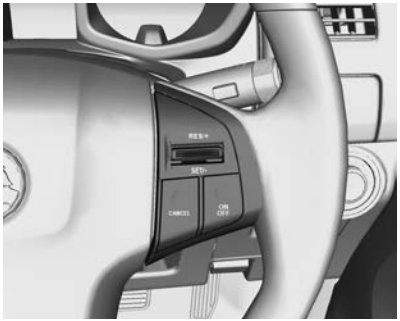

The vehicle has cruise control which can be operated by using the controls on the steering wheel.

See Cruise control on page 172.

Horn

Press .

Windscreen wiper/washer

Windscreen wiper

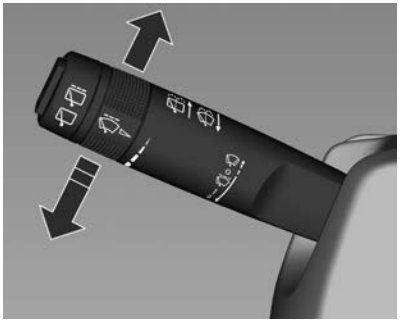

Caution
Do not operate the wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

O: Off

: Intermittent operation

1: Continuous wipe, slow speed

2: Continuous wipe, fast speed

For a single wipe of the windscreen, when the windscreen wipers are off, push the lever upwards.

Adjustable wiper interval

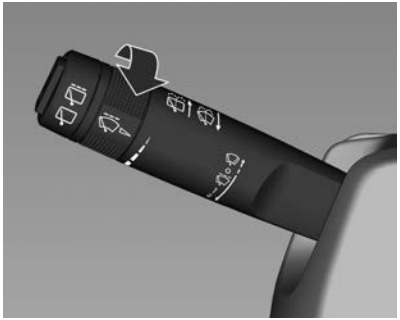

During intermittent operation, adjust the frequency of the wiper intervals:

- For frequent intervals, rotate the wheel downwards.
- For longer intervals, rotate the wheel upwards.

Windscreen washer

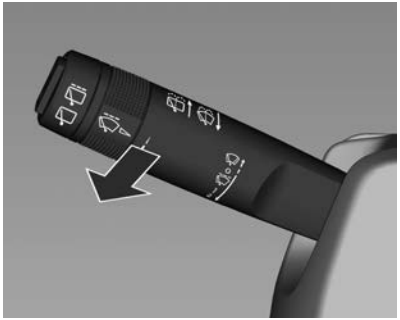

- Pull the lever rearwards to wash the windscreen.

  Washer fluid is sprayed onto the windscreen and the wipers operate.

Caution

Do not operate the windscreen washer for more than a few seconds or when the washer fluid reservoir is empty.

Do not spray washer fluid on the windscreen in freezing weather.

Switch the wipers off when in a car wash.

Rear window wiper/washer

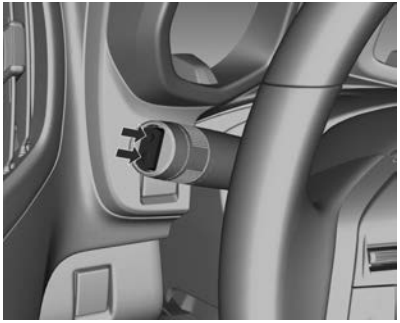

To activate the rear window wiper/washer:

- Press the lower position for continuous operation.
- Press the upper position for intermittent operation.
- Return to the middle position to turn off.

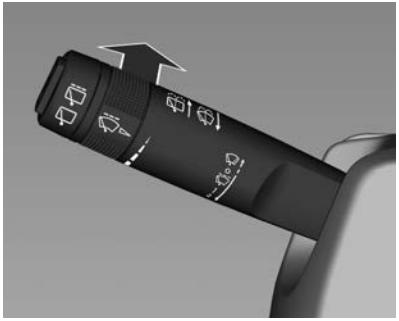

To wash the rear window:

- Push the lever forwards.

  Washer fluid is sprayed onto the rear window and the wipers operate.

Note

- The rear window wiper comes on automatically when the windscreen wiper is on and reverse gear is engaged. See Auto wipe in reverse gear under Vehicle personalisation on page 85.

Caution

Do not use the rear window wiper/washer if the rear window is frozen.

Switch the wipers off when in a car wash.

Power outlets

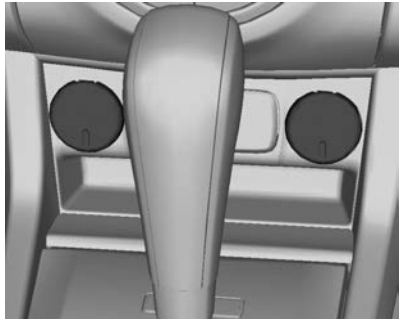

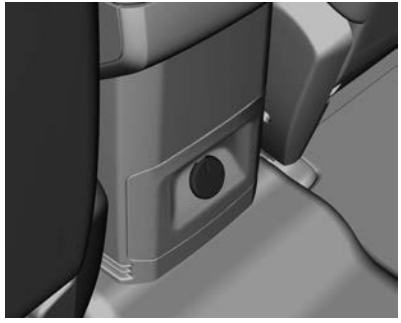

The 12V power outlets are located in front of the shift lever and at the rear of the centre console.

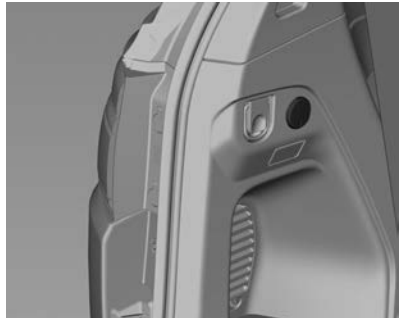

A power outlet is located on the passenger side of the load compartment.

Pull the cap outwards to use and replace when not in use.

⚠Warning

It is dangerous for the driver of a vehicle to attach or remove accessories from the power socket while driving. It may distract the driver's attention, putting the occupants of the vehicle and other road users at risk.

- Do not exceed the maximum power consumption of 120 watts.
- The power outlet is deactivated 10 minutes after the ignition is turned off or a door is opened.
- The power outlet does not operate if the battery voltage is low.
- Do not connect electrical charging devices or batteries.

Warning lights, gauges and indicators

Speedometer

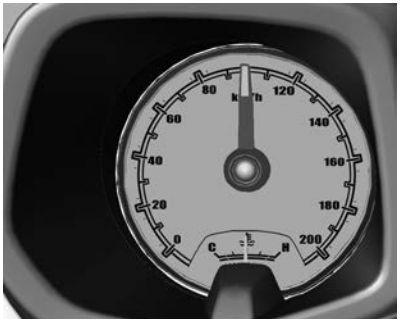

Shows vehicle speed in kilometres per hour (km/h).

Odometer

Shows distance travelled in kilometres.

Tachometer

Shows engine speed in thousands of revolutions per minute (RPM).

Drive at a low engine speed/range for each gear, as much as possible.

⚠Warning

Do not allow the needle to remain in the warning/red zone.

Fuel gauge

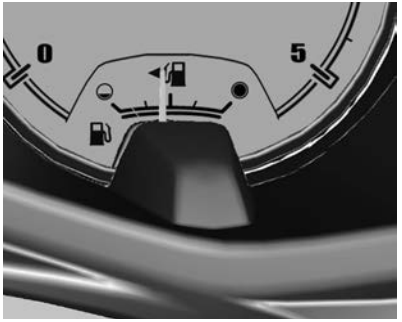

Shows the level of fuel in the tank.

If the fuel level is low:

- ⛽ illuminates.
- A chime sounds.
- A message is displayed. Refuel immediately.

⚠Danger

Before refuelling, stop the vehicle and switch the engine off.

Note

- The arrow on the fuel gauge symbol indicates the side of the vehicle the fuel door is on.
- Never run the tank dry.
- If you operate the ignition switch while refuelling, the fuel gauge may not indicate the correct fuel level.
- On inclines, the fuel gauge may not indicate the correct fuel level due to movement of the fuel in the tank.

Engine coolant temperature gauge

Shows the engine coolant temperature.

(**C** = cold, **H** = hot)

If the gauge reading moves towards **H**, the engine is too hot:

- The chime sounds.
- A message is displayed in the Driver Information Centre (DIC). Contact a Holden Dealer. See Driver Information Centre (DIC) on page 76.

⚠Warning

Do not continue driving with the temperature gauge needle in the red area. The engine is too hot.

Continued operation of an overheated engine will result in severe engine damage. See Engine coolant on page 194.

Control indicators

1 Electronic Stability Control (ESC)/Traction Control (TC) ...73
2 Tail lamp.....75
3 Tachometer.....67
4 Immobiliser 75
5 Turn signal right 70
6 High beam 75
7 Turn signal left 70
8 Airbag and belt tensioners.....71
9 Seat belt reminders.....70
10 Speedometer 66
11 Malfunction indicator light 72
12 Charging system.....72
13 Four-wheel drive light 74
14 Engine coolant temperature gauge 68
15 Antilock Brake System (ABS) 73
16 Brake system warning light.....72
17 Engine oil pressure.....74
18 Driver Information Centre (DIC) 76

19 Cruise control....76
20 Low fuel....75
21 Fuel gauge....67
22 Descent Control System (DCS)....73
23 Electronic stability control off....74
24 Front fog light....75
25 Preheating system light....74

The following warning lights and reminders may appear on the instrument panel.

A chime sounds with most warning lights and reminders.

Turn signal

- Push the lever in the same direction the steering wheel is turned.
- ⇦⇨ flashes.

  ⇦⇨ also flashes when the hazard warning is activated.
- If ⇦⇨ flashes quickly, see Bulb replacement on page 199.

See Electrical system on page 208.

See Turn and lane change signals on page 90.

Seat belt reminders

Driver's seat belt reminder

: Driver's seat belt reminder.

When the ignition is turned to the ON position:

- illuminates until the seat belt is fastened.

When the engine is running:

- flashes until the seat belt is fastened.
- If the vehicle reaches a specific distance or speed and the seat belt is unfastened, will flash and the chime will sound for a few seconds, or until the seat belt is fastened.

Front passenger's seat belt reminder

: Front passenger's seat belt reminder.

When the ignition is turned to the ON position:

- illuminates.
- extinguishes if the front passenger's seat is not occupied.

If the front passenger's seat is occupied when the engine is started:

- illuminates until the front passenger's seat belt is fastened.
- If the vehicle reaches a specific distance or speed and the seat belt is unfastened, will flash and the chime will sound for a few seconds, or until the seat belt is fastened.

Note

When objects are placed on the front passenger seat, may illuminate and/or a chime may sound.

Remove objects from the front passenger seat or fasten the front passenger seat belt.

See Three point belt on page 41.

Airbag and belt tensioners light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the warning light does not illuminate, does not extinguish after few seconds or illuminates while driving, there is a problem with the airbag or belt tensioner system.

⚠Warning

Have any fault in the airbag or belt tensioner system repaired immediately by a Holden Dealer.

See Airbag system on page 43.

See Belt tensioners on page 40.

Charging system light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the warning light illuminates while the engine is running, there is a problem with the charging system:
  1. Stop the vehicle and switch off the engine.
  2. Contact a Holden Dealer.

Malfunction indicator light

- The warning light illuminates when the ignition is turned on to show that the light is working.
- If the warning light illuminates or flashes while driving, there is a problem with the emission monitoring system.
- To avoid serious damage to the vehicle; reduce vehicle speed, avoid hard acceleration, avoid steep uphill slopes and if towing a trailer, reduce the amount of cargo as soon as possible.
- Contact a Holden Dealer.

Brake system warning light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The warning light illuminates when the park brake is applied. See Park brake on page 167.

⚠Warning

Do not drive while the brake system warning light is on.

Have the brake system checked immediately by a Holden Dealer if this occurs.

If the warning light does not extinguish or illuminates while driving and the park brake is released, there is a problem with the brakes:

- Stop the vehicle as soon as it is safe to do so.
- Check the brake fluid level. See Brake fluid on page 196.
- Do not proceed until satisfied that braking is possible or that the cause of the problem has been repaired.
- If necessary contact a Holden Dealer.
- If the parking brake is not fully released when the vehicle is moving, after reaching a certain speed, the chime sounds and a message is displayed in the Driver Information Centre (DIC).

Antilock Brake System (ABS) warning light

- The (ABS) warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light:

- Does not flash or stays on when the ignition key is turned on
- Remains on while driving

  Carefully stop the vehicle and turn off the engine.
- If both the (ABS) and the (!) warning lights illuminate, there is a problem with both the ABS and the regular brakes.

  Contact a Holden Dealer immediately.

Note

- The vehicle's brakes will still operate but without the assistance of the ABS.
- See Antilock Brake System (ABS) on page 166.

Descent Control System (DCS) light

- illuminates green when the DCS is selected.
- flashes to indicate that the DCS is activated, reducing the vehicle's speed. This occurs at speeds below approximately 30 km/h.
- illuminates after pressing the button at speeds below approximately 50 km/h, to indicate that the system is enabled.
- See Descent Control System (DCS) on page 170.

Electronic Stability Control (ESC) light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The light flashes while driving, to show that the ESC is actively helping the vehicle with road grip and stability.
- If the light illuminates or does not extinguish while driving, contact a Holden Dealer immediately.
- See Driver Information Centre (DIC) on page 76 and Electronic Stability Control (ESC) on page 169.

Electronic Stability Control (ESC) off light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the light does not illuminate, contact a Holden Dealer.
- illuminates when the ESC is deactivated.
- See Driver Information Centre (DIC) on page 76 and Electronic Stability Control (ESC) on page 169.

Traction Control System (TCS) light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The light flashes while driving, to show that the TCS is actively engaged.
- If the light illuminates or does not extinguish while driving, contact a Holden Dealer immediately.
- See Electronic Stability Control (ESC) on page 169 and Traction Control System (TCS) on page 168.

Four-wheel drive system light

- The indicator light illuminates when the vehicle is operating in four-wheel drive mode (low or high).
- See Four-wheel drive on page 162.

Preheating system light

- When the ignition key is turned ON, illuminates and will stay illuminated until the engine is sufficiently warmed.
- The preheating system switches on only if the outside temperature is low.
- See Starting the engine on page 157.

Engine oil pressure light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light illuminates while driving:

- The oil pressure is dangerously low.

  Stop the vehicle as soon as possible and check the engine oil level.
- See Engine oil on page 192.
- Do not drive the vehicle with the light illuminated. Contact a Holden Dealer.

Caution
Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Low fuel light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- The light illuminates when the fuel tank is approaching empty.

  Add fuel as soon as possible.
- If the engine is run to empty, the fuel system must be bled. See Diesel fuel system bleeding on page 199.
- See Fuel types on page 178 and Fuel system messages on page 81.

Immobiliser light

- The warning light illuminates for a short time when the ignition is turned on to show that the light is working.
- If the light remains on, contact a Holden Dealer.
- See Immobiliser on page 23.

Tail lamp light

The indicator light illuminates when the tail lamps are on.

See Exterior lighting on page 88.

High beam light

The indicator light illuminates when headlamp high beam is on.

See Headlamp high/low beam on page 88.

Fog light

- illuminates on the instrument panel when the lamps are in use.
- See Front fog lamps on page 90.

Cruise control light

- illuminates on the instrument panel when the cruise control has been set.
- The light extinguishes when cruise control is turned off.
- See Cruise control on page 172.

Information displays

Driver Information Centre (DIC)

The DIC is located on the instrument panel.

It displays:

- Information about the vehicle.
- Warning messages if a system problem is detected.

See Vehicle messages on page 77.

Selecting functions

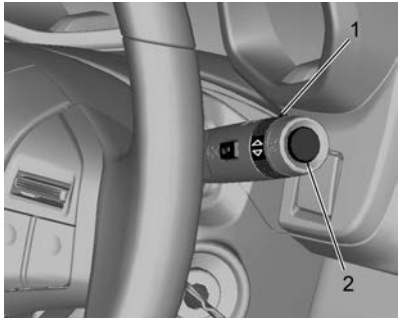

The menus and functions can be selected by using the switches on the lever.

1. Press **MENU** to switch between the following menus:
   - Vehicle information menu
   - Trip/fuel information menu
   - ECO fuel economy menu
2. Rotate the adjuster wheel (1) to scroll through the items within each menu.

3. Press **SET/CLR** (2) to select a function, to change a setting or to confirm a message.

See Trip computer on page 83 and Vehicle personalisation on page 85.

Vehicle messages

Messages are displayed on the Driver Information Centre (DIC) or may be audible as a warning chime.

- Not all messages are displayed on all vehicles.
- Some settings can be changed in the personalisation menu.

See Vehicle personalisation on page 85.

Note
Some of the following messages require immediate action to prevent vehicle or engine damage.

Battery voltage and charging messages

Battery Saver Active

- The message displays when the battery voltage is low.
- The battery saver system may disable some battery saving features.

  A message is displayed.
- Turn off unnecessary accessories to allow the battery to recharge.

Low Battery

- The message is displayed when the battery voltage is low.

Service Battery Charging System

- The message is displayed when there is a fault in the battery charging system.
- Contact a Holden Dealer.

Brake system messages

Brake Fluid Low

- The message is displayed when the brake fluid level is low.
- See Brake fluid on page 196.

Release Parking Brake

- The message is displayed when the parking brake is on.
- Release the parking brake while driving the vehicle.

Hill Start Assist is Active

- The message is displayed when Hill Start Assist (HSA) is active and is preventing rollback when driving off, while on an incline.
- See Hill Start Assist (HSA) on page 168.

Reduce Speed for Hill Descent Control

- The message is displayed when Descent Control System (DCS) is active and vehicle speed exceeds 30 km/h.
- See Descent Control System (DCS) on page 170.

Cruise control messages

Cruise Set to (...)

- The message displays when the cruise control is set and shows the speed it was set to.
- See Cruise control on page 172.

Door ajar messages

Door Open

- The message is displayed when one or more doors are open.
- Close the door completely.

Bonnet Open

- The message will display when the bonnet is open.
- Close the bonnet completely.

Rear Access Open

- The message will display when the tailgate is open.
- Close the tailgate completely.

Engine cooling system messages

Engine Overheated – Idle Engine

- The message displays and a continuous chime sounds if the engine cooling system reaches unsafe temperatures for operation.
- Stop the vehicle as soon as it is safe to do so. Allow the engine to idle for a few seconds then turn the engine off, to avoid severe damage.
- The message clears when the engine has cooled to a safe operating temperature.

Caution
Engine damage may result if the engine is turned off immediately. Idle for a few seconds, then turn off.

Engine oil messages

Change Engine Oil Soon

- The message displays when the engine oil needs to be changed. See Engine oil life system on page 230.

Oil Pressure Low – Stop Engine

- The message displays if the oil pressure is low.
- Stop the vehicle as soon as it is safe to do so and turn the engine off.
- Check the oil as soon as possible. See Engine oil on page 192.

Caution
Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Engine power message

Engine Power is Reduced

- The message displays when the vehicle's engine power is reduced.

Note

- Although the vehicle may still be drivable, the accelerator input available may be limited, resulting in reduced power.
- Have the problem repaired by a Holden Dealer as soon as possible.

Transmission messages

Service Transmission

- The message displays if there is a problem with the transmission.
- Contact a Holden Dealer.

Shift Denied

- The message displays when the transmission has not shifted to the selected gear, as the current vehicle speed will result in an engine speed outside the suitable range.
- See Manual mode on page 160.

Grade Braking Active

(Automatic transmission)

- The message displays when the grade braking feature has been activated while driving on downhill grades.
- The message will only appear the first time the feature activates in an ignition cycle.
- See Grade braking on page 160.

Transmission Hot – Idle Engine

- The message displays when immediate action by the driver is necessary to prevent transmission failure.
- Stop the vehicle as soon as it is safe to do so. Allow the engine to idle for a few seconds then turn the engine off.

Service 4WD

- The message is displayed when there is a problem with the four-wheel drive system.
- Contact a Holden Dealer.

4WD Shift in Progress

- The message displays while the four-wheel drive system is shifting.

For 4WD Low Shift to Neutral

- The message displays if a four-wheel drive shift into Four-Wheel Drive Low is requested and the vehicle speed is correct, but the transmission is not in N (neutral).

To Exit 4WD Low Shift to Neutral

- The message displays if a four-wheel drive shift out of Four-Wheel Drive Low is requested and the vehicle speed is correct, but the transmission is not in N (neutral).

For 4WD Low Slow to 5 km/h

- The message displays if a four-wheel drive shift into Four-Wheel Drive Low is requested but the vehicle speed is too high.

To Exit 4WD Low Slow to 5 km/h

- The message displays if a four-wheel drive shift out of Four-Wheel Drive Low is requested but the vehicle speed is too high.

Vehicle In 4WD Low

- The message displays if the vehicle is driven in Four-Wheel Drive Low for about 10 minutes above 72 km/h.

4WD OFF

- The message displays when the four-wheel drive system is temporarily disabled due to an overheated condition. The vehicle will run in two-wheel drive when this message is present. Once the four-wheel drive system cools down, the message turns off and the four-wheel drive system returns to normal operation.

Fuel system messages

Fuel Level Low

- The message displays when the fuel level is low and remains displayed until the fuel tank is filled above the low fuel level.

Water in Fuel – Contact Service

- The message displays when water is detected in the fuel.
- See Diesel fuel filter on page 198 or contact a Holden Dealer.

Lamp messages

Check Brake Lamps

- This message displays if a brake bulb needs to be replaced.

Check Left Front Indicator Lamp

- This message displays if the left front turn signal bulb needs to be replaced.

Check Right Front Indicator Lamp

- This message displays if the right front turn signal bulb needs to be replaced.

Check Left Rear Indicator Lamp

- This message displays if the left rear turn signal bulb needs to be replaced.

Check Right Rear Indicator Lamp

- This message displays if the right rear turn signal bulb needs to be replaced.

Ride control systems messages

Service ESP

- The message displays if there is a problem with the Electronic Stability Control and/or Traction Control system.
- Contact a Holden Dealer.

ESP OFF

- The message displays when the Electronic Stability Control system has been switched off manually by pressing OFF on the instrument panel.

Traction Control OFF

- The message displays when the Traction Control (TC) system has been switched off manually by pressing OFF on the instrument panel.

Traction Control ON

- The message displays when the Traction Control (TC) system has been switched on manually by pressing OFF on the instrument panel.

Key and Lock message

Replace battery in Remote Key

- The message displays when the battery in the Remote Keyless Entry (RKE) transmitter needs to be replaced.

Airbag system message

Service Airbag

- The message displays if there is a problem with the airbag system.
- Contact a Holden Dealer.

Vehicle speed message

Selected Speed Limit Exceeded

- The message is displayed when the vehicle speed is greater than the chosen warning speed.

Vehicle Reminder messages

Ice Possible Drive with Care

- The message is displayed when icy conditions are possible.

Parking Assist Off

- This message displays when the Park Assist (PA) system has been turned off due to a fault.
- See Park Assist (PA) on page 174.

Service Parking Assist

- This message displays if there is a problem with the PA system.
- Contact a Holden Dealer.

Anti-Theft Alarm System messages

Theft Attempted

- The message displays if a theft has been attempted.
- While the ignition is on, press **MENU** to clear the message. See Vehicle personalisation on page 85.
- See Vehicle security on page 22.

Service Theft Deterrent System

- The message displays if there is a problem with the vehicle security system.
- Contact a Holden Dealer.

Warning chimes

Warning chimes may be heard when starting the engine or while driving:

- If seat belt is not fastened. See Seat belts on page 40.
- If a certain speed is exceeded while the parking brake is applied. See Park brake on page 167.
- If a warning message is displayed.
- If the Park Assist (PA) detects an object.
- If the vehicle speed exceeds the adjusted speed value. See Speed warning on page 86.

Warning chimes may be heard when the vehicle is parked and/or a door is opened:

- Until the engine is started with the key. See Keys and locks on page 16.
- When the exterior lights are on while the engine is off. See Exterior lighting on page 88.

Trip computer

The trip computer:

- Is located in the Driver Information Centre (DIC).
- Provides information on range, average fuel consumption, driving time, fuel economy trends and top energy consumers.
- Some settings can be reset by pressing **SET/CLR.**

- Press **MENU** to select the Trip/ Fuel menu or the ECO fuel economy menu.

Trip/Fuel menu

Rotate the adjuster wheel to scroll through the following menu items:

- Digital Speedometer
- Trip
- Fuel Range
- Average Fuel Consumption
- Instantaneous Fuel Consumption
- Average Vehicle Speed

Digital speedometer

- The digital speedometer indicates the vehicle speed.

Trip

- The display shows the current distance travelled since the trip odometer was last reset.
- Reset by pressing and holding **SET/CLR** while the trip odometer is displayed.
- When the maximum value is reached (99999.9), the trip odometer will automatically set to zero.

Fuel range

The fuel range:

- Displays the approximate distance the vehicle can be driven without refuelling.
- Estimate is based on an average of the vehicle's fuel economy over the recent driving history and the amount of fuel remaining in the fuel tank.

When the fuel range estimate is less than 64 km:

- **Low Fuel Range** is displayed instead of the fuel range estimate
- illuminates
- A chime sounds
- A message is displayed

Note
The range is an estimate only and may vary based on driving style and variation in the fuel gauge reading.

See Low fuel light on page 75 and Driver Information Centre (DIC) on page 76.

Average fuel consumption

- The average fuel consumption is calculated on average fuel consumption, recorded since the last time the menu was reset.
- To reset, press and hold **SET/CLR**.

Instantaneous fuel consumption

- The instantaneous fuel consumption display shows the current fuel economy in litres per 100 kilometres (L/100 km). This number reflects only the fuel economy that the vehicle has right now and changes frequently as driving conditions change.

Average vehicle speed

- The average vehicle speed is calculated on the various vehicle speeds recorded since the last time the menu was reset.
- To reset, press and hold **SET/CLR**.

ECO fuel economy menu

Rotate the adjuster wheel to scroll through the following menu items:

- ECO index
- Fuel economy
- Economy trend

ECO index

- The ECO index displays the current fuel economy.
- Keep the bars within the box for best fuel economy.
- Selecting an alternative gear may be necessary.

Fuel economy

- The average fuel economy can be displayed over the past 100, 500 and 1,000 km.
- Press **SET/CLR** to select the distance.
- The best fuel economy score is displayed.

Economy trend

- The economy trend statistic display shows the fuel economy for the last 50 km.
- Each bar in the graph represents 5 km.

Vehicle personalisation

The settings can be personalised in the Driver Information Centre (DIC) and in the Vehicle settings menu in the Infotainment system.

Note

Depending on the vehicle variant, some of the following functions may not be available.

Settings in the DIC

1. Press **MENU** until **Vehicle Information Menu** is displayed.

2. Rotate the adjuster wheel to scroll through the following menu items:
   - Speed warning
   - Remaining oil life
   - Battery voltage
3. To close or to return to the previous page, press **MENU**.

Speed warning

The speed warning allows a warning signal to be set, at a chosen speed.

To set the speed warning:

1. Press **SET/CLR**.
2. Rotate the adjuster wheel to select **On**.
3. Press **SET/CLR**.
4. Rotate the adjuster wheel to select a speed.
5. Press **SET/CLR** to confirm.

Remaining oil life

- Displays the estimate of the oil's remaining useful life.
- If Remaining Oil Life 99% is displayed, that means 99% of the current oil life remains.
- When the remaining oil life is low, the Change Engine Oil Soon message will appear on the display. The oil should be changed as soon as possible. See Engine oil life system on page 230.
- The oil life display must be reset after each oil change. Be careful not to reset the oil life display at any other time. It cannot be reset accurately until the next oil change.

Battery voltage

- Displays the current battery voltage.

Settings in the Infotainment system

When the infotainment system is on:

- Press ⌂.
- Touch **settings**.

  The settings menu is displayed.
- Touch **vehicle settings**.

  The vehicle settings menu is displayed.
- To scroll through the list, touch ▼or ▲.
- To make a selection, touch a setting.
- To return to the previous screen, touch ⮌.

The following menus can be displayed:

- Comfort & convenience
- Lighting
- Power door locks
- Lock, unlock settings
- Rear camera option
- Vehicle factory settings

- **Comfort and convenience**

  Chime volume: Change the volume of the warning chime.

  Personalization by driver: This allows the selection of the personalisation settings that are specific to each key or otherwise will remain the same, no matter which key was used to enter and start the vehicle.

  Auto wipe in reverse gear: Activate or deactivate the rear wiper while in reverse gear.
- **Lighting**

  Exit lighting: Activate or deactivate the exit lighting and change the lighting duration.
- **Power door locks**

  Auto door lock: Activate or deactivate the auto door locking function, to occur after shifting out of P (park).
- **Lock, unlock settings**

  Remote unlock light feedback: Activate or deactivate the light feedback while unlocking.

  Remote lock light & horn feedback: Activate or deactivate the lights and/or horn feedback while locking.

  Remote door unlock: Change the configuration to unlock only the driver's door or all doors while unlocking.

  Relock remotely unlocked doors: Activate or deactivate door locking, when a door is unopened after unlocking.
- **Rear camera option**

  Guidelines: Select if guidelines to assist reversing are displayed.
- **Vehicle factory settings**

  All settings are restored to initial settings.

Lighting

Exterior lighting 88
Interior lighting 91
Lighting features 93

Exterior lighting

Exterior lamp control

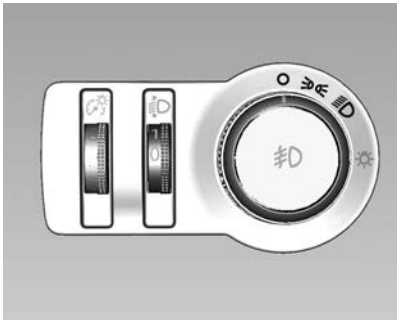

O (OFF): Rotate to turn all lamps and lights off.

(Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

(Headlamps): Turns on the headlamps and all park lamps.

Note
A chime sounds when, the ignition is turned off without removing the key, the driver's door is opened and the exterior lights are left on.

Headlamp high/low beam

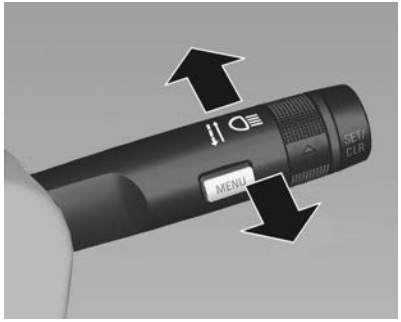

To activate high beam:

1. Turn the headlamps on.
2. Push the lever forwards.

   The high beam indicator light illuminates on the instrument panel.

To return to low beam:

1. Pull the lever rearwards.

⚠Warning

Always switch the headlamps to low beam when vehicles are approaching or when following another vehicle.

To flash the high beam lamps:

- Pull the lever towards the rear of the vehicle and release.
- The lamps stay on for as long as the lever is held.

Headlamp range adjustment

Adjust the headlamp range according to the vehicle load, to ensure illumination of the road ahead.

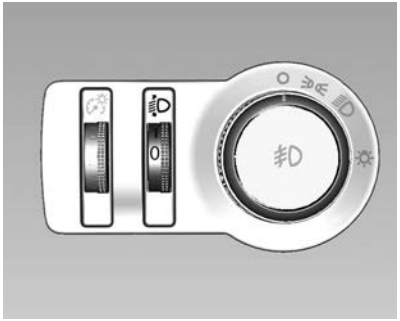

Rotate to the recommended position:

0: Front seats occupied

1: Five forward seats occupied

2: All seats occupied

3: One or more seats occupied and load compartment laden

Hazard warning flashers

- Press ⚠ to turn the hazard warning flasher on or off, when the ignition is in any position.

  All turn signals flash continuously.
- Use the hazard warning flasher if the vehicle becomes a traffic hazard, day or night.

Note

Using hazard warning flashers while the vehicle is moving, is illegal in some States and Countries.

Turn and lane change signals

- Push the lever in the direction the steering wheel is turned.
- To signal a lane change, push the lever part way in the direction of the turn.

  The turn signals will flash three times (six times when a trailer is connected).
- To cancel a lane change function, push the lever in either direction.
- A green arrow on the instrument panel flashes when the lamps are in operation.

Front fog lamps

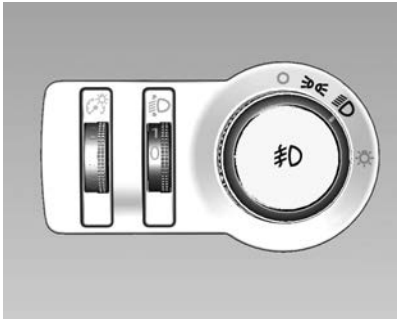

The front fog lamps provide extra illumination to the sides of the road and improve visibility in fog or snow.

To switch the front fog lamps on:

1. Rotate the lamp control to ≡D.
2. Press ≠D.

   ≠D illuminates on the instrument panel.

Reversing lamps

The reversing lamps illuminate when the ignition is on and reverse gear is engaged.

Misted lamp covers

Caution
Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Interior lighting

Instrument panel illumination

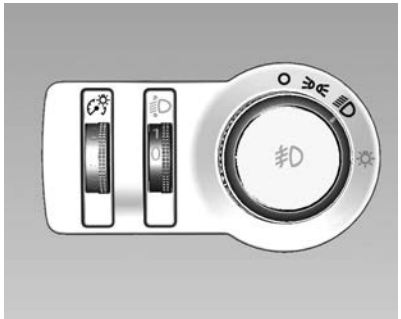

To adjust the instrument lighting brightness:

1. Rotate .
2. Hold until the required brightness is reached.

Interior lamps

Courtesy lamp

- Press .

  The light automatically switches on when a door is opened and turns off after doors are closed.

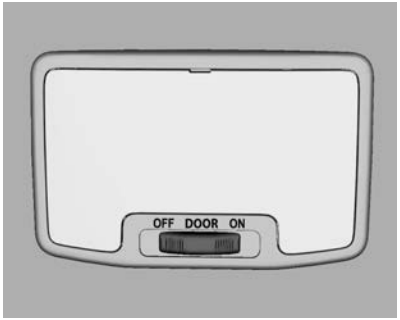

Slide the switch:

OFF: Remains off when doors are opened or closed.

DOOR: Automatically switches on when a door is opened and turns off after doors are closed.

ON: Remains on when doors are opened or closed.

Note
To prevent the battery from discharging, turn the lamp off when the engine is not running.

⚠Warning
Do not leave the courtesy lamp on while driving in the dark.

Load compartment lighting

The lamps illuminate when a door or the tailgate is opened.

Reading lamps

The reading lamps are located between the sun visors.

1. Press the light area to turn a lamp on.

   The passenger or driver front lamp illuminates.
2. Press again to turn the lamp off.

Note
The reading lamps do not illuminate when a door is opened.

Sun visor lamps

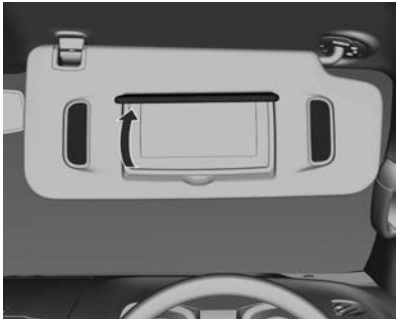

The lamps illuminate when the vanity mirror cover is opened.

Lighting features

Entry lighting

Entry lighting provides additional security when returning to the vehicle at night.

- Press on the key.

  Interior lights illuminate for a short time.
- The lighting switches off when the ignition is turned to the ACC position.
- Additionally, some interior lights and switches will illuminate when the driver's door is opened.

  See Ignition positions on page 156.

Exit lighting

Headlamps illuminate the way after leaving the vehicle.

1. Switch the ignition off.
2. Remove the ignition key.
3. Open the driver's door.
4. Pull the turn signal lever rearwards.
5. Close the driver's door.

Note

- To set the duration of the exit lighting, see Vehicle personalisation on page 85.
- The exit lighting is activated for the set time after the driver's door is closed.

Battery power protection

To prevent discharge of the battery when the ignition is switched off, some interior lights are switched off automatically after some time.

If you turn off the ignition with the exterior lights on, they will immediately turn off. The exterior lights will remain on if you turn them on when the ignition is off.

Infotainment system

Introduction 94
Operation 96
Radio 101
Audio players 106
Bluetooth® music 121
Personalisation 123
Time and date setting 124
Bluetooth® phone 128

Introduction

General information

Do the following before driving:

- Read the infotainment system section to become familiar with the functions.
- Set up the audio by presetting favourite stations, setting the tone and adjusting the speaker settings.

About the system

⚠Warning

When driving the vehicle, be sure to keep the volume of the unit set low enough to hear sounds from outside the vehicle (e.g. road and traffic conditions).

Caution

Do not place beverages close to the audio system.

Do not strike or allow anything to impact the audio system.

Damage to the system mechanisms could occur.

Overview

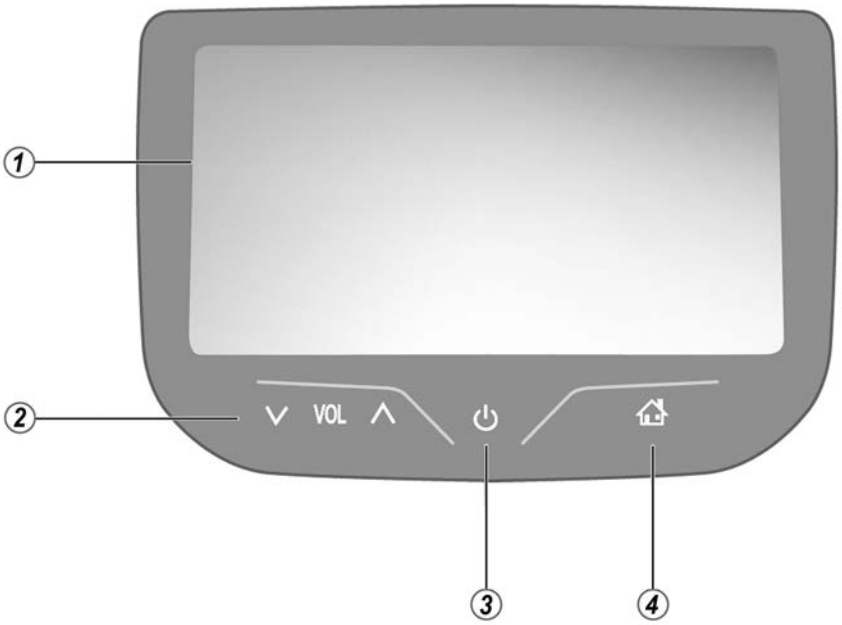

1. Information display
2. Volume buttons
3. Power button
4. Home button

Steering wheel remote controls

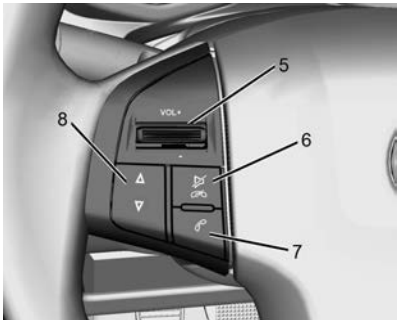

5. Volume switch:

   Press upwards to increase the volume.

   Press downwards to decrease the volume.

6. Call end button:

   Press to end a call.

   Mute:

   Press to silence the vehicle speakers. Press again to turn the sound on.

7. Call button:

   Press to answer a call, or enter the phone mode.

8. Selection button:

   Change between radio presets.

   Change between next or previous tracks.

Operation

Power on/off

- To turn the infotainment system on, press and hold ⏻ (3).

  The previous mode will be displayed.

- To turn the infotainment system off, press and hold ⏻ (3).

Time, date and temperature are displayed.

Note
The temperature is only displayed when the ignition is turned on.

Automatic on/off

When the ignition key is in the ACC or ON position, the infotainment system turns on automatically.

When the ignition key is in the OFF position when a door is opened, the infotainment system switches off automatically.

Note
While the ignition is off, if the infotainment system is turned on by pressing and holding ⏻ (3), it will automatically turn off 10 minutes from the last operation.

Volume control

- To adjust the volume, press ∨ or ∧ (2).

The sound volume is indicated on the display.

- Alternatively, press **+** or **-** on the steering wheel remote controls.
- When turning the infotainment system on, the volume level will be set to its previous selection (when it is less than the maximum starting volume). Refer to Max startup volume on page 127.
- If the volume level is louder than maximum starting volume level when the infotainment system is turned on, the level is adjusted automatically to the maximum starting volume level.

Mute

- To mute the sound, press ∨ or ∧ (2) then touch 🔇.
- To turn mute off, touch ∨ or ∧ (2).

- Alternatively, press 🔇 on the steering wheel remote controls to turn mute on or off.

Auto volume control

The volume of the infotainment system adjusts depending on the vehicle's speed.

As the vehicle's speed increases, the volume of the infotainment system also increases to compensate for the driving noise.

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **radio settings**.

   auto volume is displayed.

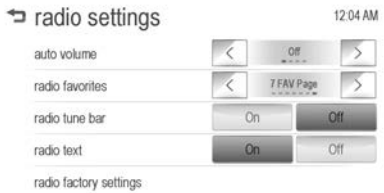

4. Touch < or > to select Off, Low, Medium or High.

Using the HOME menu

1. Press ⌂ (4).

2. Select from the following menu.

- Touch **audio** to select FM/AM, USB storage device, iPod®, Bluetooth® music or auxiliary sound.
- Touch **picture & movie** to view a picture, movie or auxiliary video.
- Touch **phone** to activate phone features (if connected).
- Touch **smartphone link** to activate an application through a connected smartphone.
- Touch **settings** to enter the system setup menu.

Selecting function

Audio

1. Press ⌂ (4).
2. Touch **audio**.

3. Touch **Source ▼**.

   Touch **AM** to select AM radio.

   Touch **FM** to select FM radio.

   Touch **USB** to select USB.

   Touch **AUX** to select an auxiliary source.

   Touch **Bluetooth** to play Bluetooth® music.

   Touch **iPod** to select iPod® or iPhone®.

4. Touch ⮌ to return to the HOME menu.

Note

If a USB, iPod®, Bluetooth® or other auxiliary device is not connected to the infotainment system, the function is greyed-out/not listed and is not available.

See Radio on page 101.

See Audio players on page 106.

Picture and movie

1. Press ⌂ (4).
2. Touch **picture & movie**.

3. Touch **Source ▼**.

   Touch **USB (picture)** to view picture files from a USB storage device.

   Touch **USB (movie)** to view movie files from a USB storage device.

   Touch **AUX (movie)** to view movie files from an auxiliary video (AUX) device.

4. Touch ⮌ to return to the HOME menu.

Note

- If a USB storage device containing picture or movie files, or an AUX device is not connected to the infotainment system, the function is greyed-out and is not available.
- Movies are not available while the vehicle is in motion.

See Picture system on page 113.

Phone

1. Connect a Bluetooth® phone to the infotainment system.
2. Press ⌂ (4).
3. Touch **phone**.

4. Touch ⮌ to return to the HOME menu.

Note

See Pairing and connecting a Bluetooth® device on page 128.

Smartphone link

1. Install the smartphone application on the smartphone.
2. Connect the smartphone through the USB port or Bluetooth®.
   - iPhone®: USB connection.
   - Android phone: Bluetooth® wireless technology.
3. Press ⌂ (4).
4. Touch **smartphone link**.

5. Touch ⮌ to return to the HOME menu.

See Smartphone link on page 137.

Settings

1. Press ⌂ (4).
2. Touch **settings**.

See Personalisation on page 123.

Radio

AM-FM radio

1. Press ⌂ (4).
2. Touch **audio**.

3. Touch **Source ▼**.
4. Touch **AM** or **FM**.

   The last station is displayed.
5. Touch ⮌ to return to the HOME menu.

Automatic station search

To automatically search for available radio stations with clear reception:

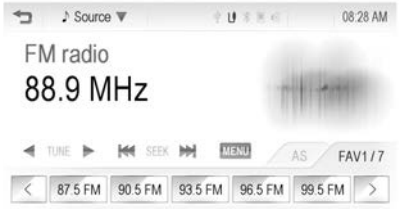

- Touch ⏮ or ⏭.
- Touch and drag left or right of the radio station.
- Press and hold △ or ▽ on the steering wheel remote controls.

Manual station search

1. Touch ◄ or ► repeatedly.

   Note
   The radio tune bar must be turned off.

Using the preset buttons

Saving a preset

1. Select **FM** or **AM**.
2. Tune to a radio station.

3. Touch < or > to select a favourite preset page.
4. Touch and hold any of the preset buttons to save.

Note

- Up to seven favourite pages can be saved and each page can store up to five radio stations.
- To change a preset, tune to another radio station and, touch and hold the button to save.

Listening using a preset

To select a favourite preset page:

1. Touch < or > repeatedly.
2. Touch a preset button.

Autostore

Radio stations with the best reception quality can be stored automatically:

1. Select **FM** or **AM**.
2. Touch **AS**.
3. Touch and hold **AS** to update the FM/AM autostore stations.

To listen to an AS station:

1. Select FM or AM.
2. Touch **AS**.
3. Touch < or > to select an autostore page.
4. Touch a preset button.

Note

If AS is pressed when there are no stored radio stations, the FM/AM autostore will be updated.

Viewing station information

1. Touch the radio station.

The available radio station information, including frequency, is displayed.

Using the FM/AM radio menu

1. Select **FM** or **AM**.
2. Touch **MENU**.

3. Touch a menu item to make a selection or to view more details.
4. Touch ⮌ to return to the previous menu.

Favourite list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **favorite list**.

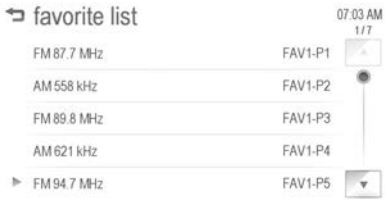

4. Touch ▲ or ▼ to scroll through the list.
5. Touch a radio station to make a selection.

FM/AM station list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **FM station list** or **AM station list**.

4. Touch ▲ or ▼ to scroll through the list.
5. Touch a radio station to make a selection.

Update the FM/AM station list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **update FM station list** or **update AM station list**.

The station list is updated.

4. Press **Cancel** to stop saving changes.

Tone settings

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **tone settings**.

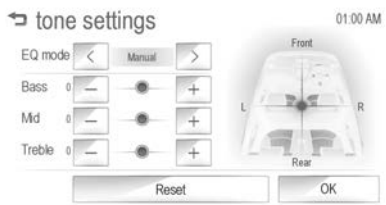

- EQ (equaliser): Touch < or > to select or turn off the sound style (Manual ⇆ Pop ⇆ Rock ⇆ Country ⇆ Classical ⇆ Talk).
- Touch **-/+** to adjust the sound style manually.
- Bass: Adjust the bass level from -12 to +12.
- Mid (midrange): Adjust the midrange level from -12 to +12.
- Treble: Adjust the treble level from -12 to +12.
- Fader: Adjust the front/rear speaker balance by touching and dragging the dot in the vehicle interior image.
- Balance: Adjust the left/right speaker balance by touching and dragging the dot in the vehicle interior image.
- Reset: Restore the settings back to the default settings.

4. Press **OK** to store.

Antenna

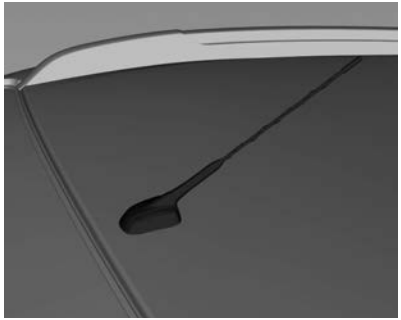

Caution
Remove the antenna mast by rotating anticlockwise before entering an area with a low ceiling or an automatic car wash. Damage may occur to the antenna or the roof panel.

Audio players

Audio/picture/movie/ auxiliary device system

Cautions when using MP3/WMA/OGG/WAV files

- This product can play music files with .mp3, .wma, .ogg, .wav file name extensions.
- While this product can play files with 8kbps ~ 320kbps bit rate, files with a bit rate above 128kbps will result in higher quality sound.
- ID3 Tag information (version 1.0, 1.1, 2.2, 2.3 or 2.4) for MP3 files such as the album name and the artist.

Cautions when using a USB storage device, iPod® or iPhone®

- Operation cannot be guaranteed if the HDD, USB mass storage device, CF or SD memory card is connected using a USB adaptor.
- Avoid static electricity when connecting or disconnecting the USB. Avoid connecting and disconnecting repeatedly over a short time.
- Operation is not guaranteed if the connecting terminal of the USB device is not metal.

Caution
In rare cases, a USB stick (thumb drive) may not be recognised by the system or may cause a malfunction.

- Avoid touching the USB connecting terminals with any objects or fingers.

- The USB storage device can only be recognised when it is formatted in FAT16/32, exFAT file system.
- Depending on the type and capacity of the USB device and the type of stored files, the time it takes to recognise the files may differ.
- Do not disconnect the USB storage device while it is being played. This may damage the product or affect the performance of the USB device.
- Disconnect the USB device when the vehicle is turned off. If the ignition is turned on while the USB storage device is connected, the device may become damaged or may not operate normally in some cases.
- A USB device can only be connected for the purpose of playing music, movies, viewing photo files or upgrading.

Caution

The USB port should not be used to charge USB accessory equipment as the heat generation using the USB terminal may cause performance issues or damage to the product.

- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This product can support USB storage devices that contain 2,500 music files, 2,500 photo files, 250 movie files, 2,500 folders and 10 stages of folder structure.

  Normal usage cannot be guaranteed for storage devices that exceed this limit.
- Some iPod® or iPhone® models may not support all functionality of the infotainment system.
- An iPod® or an iPhone® can play all music files supported.

  Music file lists display up to 2,500 files on the screen in alphabetical order.
- Only connect an iPod® or iPhone® to the USB port with connection cables supported by iPod® and iPhone® products.
- When an iPod® or iPhone® is connected to the USB port using an iPod®/iPhone® cable, Bluetooth® music is not supported.
- To play a movie file, connect an iPod® or iPhone® to the AUX input by using an AUX cable for an iPod®/iPhone®.

  When an iPod® or iPhone® is connected to the USB port, movie files will not play.
- Playing order, method and information, displayed on the infotainment system may differ from information displayed on the iPod® or iPhone®.

Connecting a USB device

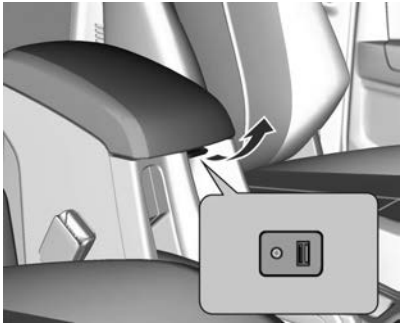

The USB/AUX socket is located inside the storage compartment.

1. Open the cover.
2. Connect the USB to the USB port.

Audio system

Music files contained on a USB storage device, iPod® or iPhone® can be played on the infotainment system.

USB port

Connect a USB storage device containing music files to the USB port. See Connecting a USB device on page 108.

Note

- Once reading of the USB storage device is complete, it will play automatically.
- If a non-readable USB storage device is connected, an error message will be displayed and the previously used mode or FM radio will play.

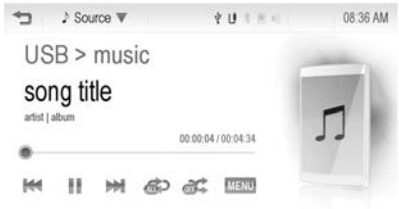

If the USB storage device is already connected to the infotainment system:

1. Press ⌂ (4).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **USB**.

Ending USB music playback

1. Touch **Source ▼**.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the USB storage device.

Pause

- Touch **II** during play.
- Touch ► to resume play.

Playing the next track

- Touch ⏭ to play the next track.

Playing the previous track

- Touch ⏮ within 5 seconds of play.

Returning to the beginning of the current track

- Touch ⏮ after 5 seconds of play.

Scanning forward or backward

- Touch and hold ⏭ or ⏮ during play.
- Release the button to resume play at normal speed.

Playing tracks repeatedly

- Touch during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing tracks randomly

- Touch during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Viewing information on a playing track

- Touch the title during play.

- Available information displayed may include the title, artist, album, file name and folder name.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as □.

Using the USB music menu

1. Touch **MENU** during play.

   The number of songs in each play mode is displayed.
2. Touch the desired play mode.

Tone settings

1. Touch **MENU** during play.
2. Touch ▲ or ▼ to scroll through the list.
3. Touch **tone settings**.

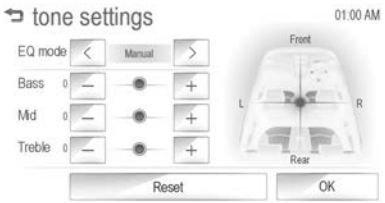

For further information, see Tone settings on page 105.

iPod®/iPhone® player

Connect an iPod® or iPhone® containing music files to the USB port. See Connecting a USB device on page 108.

Note

- Once reading of the iPod® or iPhone® is complete, it will play automatically.
- If a non-readable iPod® or iPhone® is connected, an error message will be displayed and the previously used mode or FM radio will play.

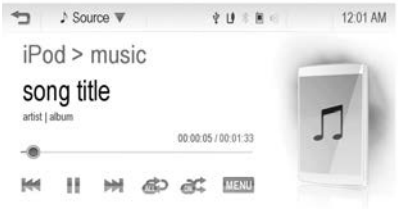

If the iPod® or iPhone® is already connected:

1. Press ⌂ (4).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **iPod** to play from the iPod® or iPhone®.

Ending iPod®/iPhone® playback

1. Touch **Source ▼**.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the iPod®/iPhone® device.

Pause

- Touch **II** during play.
- Touch ► to resume play.

Playing the next track

- Touch ⏭ to play the next track.

Playing the previous track

- Touch ⏮ within 2 seconds of the start of the track.

Returning to the beginning of the current track

- Touch ⏮ after 2 seconds of the start of the track.

Scanning forward or backward

- Touch and hold ⏭ or ⏮ during play.
- Release the button to resume play at normal speed.

Playing tracks repeatedly

- Touch during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing tracks randomly

- Touch during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Viewing information on a playing track

- Touch the title during play.

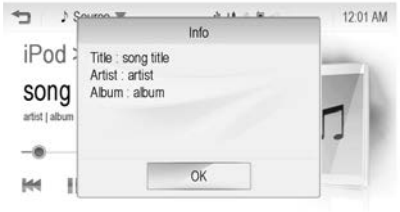

- Available information displayed may include the title, artist and album.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as □.

Using the iPod® music menu

1. Touch **MENU** during play.

   The number of songs in each play mode is displayed.
2. Touch the desired play mode.

Tone settings

1. Touch **MENU** during play.
2. Touch ▲ or ▼ to scroll through the list.
3. Touch **tone settings**.

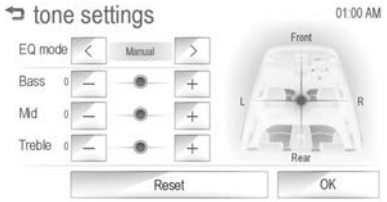

For further information, see Tone settings on page 105.

Picture system

Picture files stored on a USB storage device can be viewed on the infotainment system screen.

Cautions when using picture files

- File size:

  JPG: within 64 to 5,000 pixels (width), within 64 to 5,000 pixels (height).

  BMP, PNG, GIF: within 64 to 1,024 pixels (width), within 64 to 1,024 pixels (height).
- This product can view picture files with: .jpg, .bmp, .png, .gif file extensions (animated GIF not supported).
- Some files may not be viewed due to file format or the condition of the file.

Viewing a picture

Connect a USB storage device containing picture files to the USB port. See Connecting a USB device on page 108.

1. Press ⌂ (4).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (picture)**.

The picture is displayed.

5. Touch the screen to hide/show the control bar.
6. Touch the screen again to return to the previous screen.

An alert may be displayed.

Viewing a slide show

1. Touch .
   The slide show begins.
2. Touch the screen to cancel the slide show.

Viewing a previous or next picture

1. Touch ◀ or ▶.

Rotating a picture

1. Touch or .

Enlarging a picture

1. Touch to enlarge the picture.

Using the USB picture menu

1. Touch **MENU**.

   The USB picture menu is displayed.
2. Touch to select.
   picture file list: Displays the list of available picture files.
   sort by title: Displays pictures in alphabetical order.
   sort by date: Displays pictures in date order.
   slide show time: Select the slide show interval.
   clock/temp display: To display the clock and temperature on the full screen, select On or Off.
   display settings: Adjust the brightness and contrast.
3. When complete, touch .

Movie system

Movie files stored on a USB storage device can be viewed on the infotainment system screen.

Cautions when using movie files

- Available resolution: within 720 x 576 (w x h) pixels
- Frame rate: less than 30 fps
- Playable movie file: .avi, .mpg, .mp4, .divx, .xvid, .wmv

  A movie file may not always be played depending on the Codec format.
- Playable subtitle format: .smi
- Playable Codec format: divx, xvid, mpeg-1, mpeg-4 (mpg4, mp42, mp43), wmv9 (wmv3)
- Playable audio format: MP3, AC3, AAC, WMA.
- Music files to which DRM (Digital Right Management) is applied cannot be played.

Playing a movie file

Connect a USB storage device containing movie files to the USB port. See Connecting a USB device on page 108.

1. Press ⌂ (4).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (movie)**.

   The movie begins to play.
5. Touch the screen to hide/show the control bar.
6. Touch the screen again to return to the previous screen.

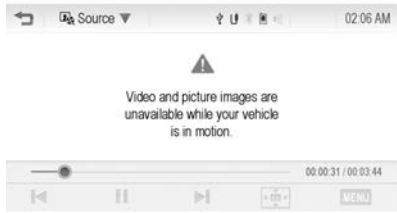

Note
Movies are not available while the vehicle is in motion.

Pause

- Touch **II** during play.
- Touch ► to resume play.

Playing the next movie

- Touch ▶| to play the next movie.

Playing the previous movie

- Touch |◄ within 5 seconds of the start of play.

Returning to the beginning of the current movie

- Touch |◄ after 5 seconds of play.

Scanning forward or backward

- Touch and hold ▶| or |◄ during play.
- Release the button to resume play at normal speed.

Viewing to full screen

1. Touch ⛶.
2. Touch the screen to return to the previous screen.

Using the USB movie menu

1. Touch **MENU**.

The USB movie menu is displayed.

2. Touch to select.

movie file list: Displays the list of available movie files.

clock/temp display: To display the clock and temperature on the full screen, select On or Off.

display settings: Adjust the brightness and contrast.

tone settings: Adjust the sound setup. See Tone settings on page 105.

3. When complete, touch ⮌.

Subtitle language

The movie may have subtitles.

1. Touch ◄.

Note

Subtitle language is available only if supported by the movie file.

2. Touch < or >.
3. Touch ►.

Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.
- Subtitle format: .smi. The subtitle file name should be same as the movie file name.

Audio language

The movie may have selectable audio languages.

1. Touch ◄.

Note

Audio language is available only if supported by the movie file.

2. Touch < or >.
3. Touch ►.

Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.

Auxiliary device system

Music and movie files stored on an auxiliary device can be played on the infotainment system.

Connecting an auxiliary device

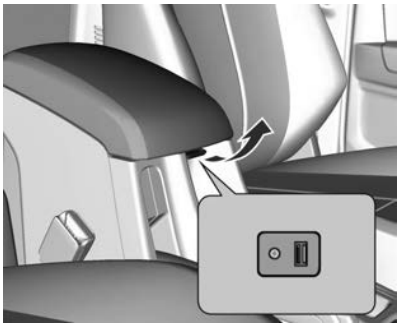

The USB/AUX socket is located inside the storage compartment.

1. Open the cover.
2. Connect to the AUX input using the appropriate cable.

Types of AUX cables

- 3-pole cable: AUX cable for audio.

- 4-pole cable: AUX cable for movies. AUX cable for iPod®/ iPhone®.

Playing from an auxiliary device

Connect the auxiliary device containing music files to the AUX input. See Connecting an auxiliary device on page 118.

- Once connected, it will play automatically.
- The auxiliary device is used to control the playback of the content stored or available.

If the auxiliary device is already connected:

1. Press ⌂ (4).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **AUX**.

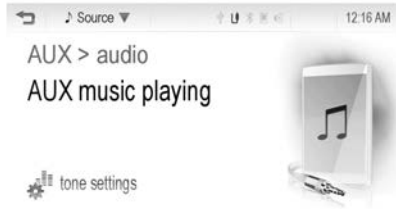

AUX music playing is displayed.

Tone settings

1. Touch **tone settings** during play.

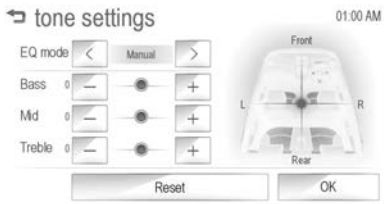

For further information, see Tone settings on page 105.

Playing a movie from an auxiliary device

Connect the auxiliary device containing movie files to the AUX input. See Connecting an auxiliary device on page 118.

1. Press ⌂ (4).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **AUX (movie)**.

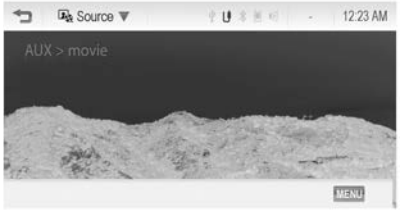

- The auxiliary device is used to control the content stored or available.

Note
When using an iPod® or iPhone®, connect to the AUX input using the AUX cable for an iPod®/iPhone® to play a movie file. See Types of AUX cables on page 118.

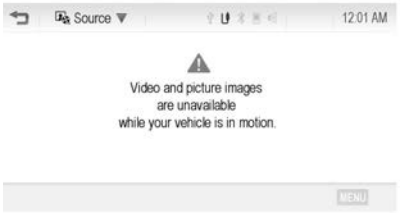

Note
Movies are not available while the vehicle is in motion.

Using the AUX movie menu

1. Touch **MENU**.

   The AUX menu is displayed.

2. Touch to select:

   tone settings: Adjust the sound setup. See Tone settings on page 105.

   clock/temp display: To display the clock and temperature on the full screen, select On or Off.

   display settings: Adjust the brightness and contrast.

3. When complete, touch ⮌.

Bluetooth® music

General information

Music may be played from a Bluetooth® device/Bluetooth® phone.

The Bluetooth® device must first be paired with the infotainment system. See Bluetooth® phone on page 128.

- Bluetooth® music may not be supported depending on the mobile phone or Bluetooth® device.
- Supported profiles: HFP, A2DP, AVRCP, PBAP
- The infotainment system should be connected to the Bluetooth® device as a stereo headset. Set the Bluetooth® device type on the phone.

  ♪ is displayed if successfully connected as a stereo headset.
- Music from the Bluetooth® device is delivered through the infotainment system.
- If the Bluetooth® device is disconnected while music is playing, playback is stopped.
- Bluetooth® streaming is not available when a Bluetooth® hands-free phone is in use.
- For Bluetooth® music to play, the music must be played at least once from the music player mode of the Bluetooth® device after connecting as a stereo headset.

  After being played at least once, the music player will automatically play upon entering play mode and will automatically stop when the music player mode ends.
- If the Bluetooth® device is not in the waiting screen mode, some devices may not automatically play in Bluetooth® music play mode.

- Do not change the track too quickly when playing Bluetooth® music. It takes some time to transmit data from the Bluetooth® device to the infotainment system.
- The Infotainment system transmits the order to play from the Bluetooth® device in the Bluetooth® music play mode. If this is done in a different mode, then the device transmits the order to stop. Depending on the Bluetooth® device's options, this order to play/stop may some take time to activate.
- Sometimes, sounds may be cut off during the Bluetooth® music playback.

Playing Bluetooth® music

1. Press ⌂ (4).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **Bluetooth**.

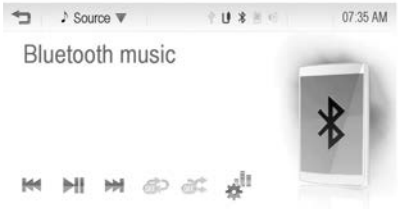

Bluetooth music is displayed.

Pause

- Touch ▶II during play.
- Touch ▶II to resume play.

Playing the next track

- Touch ⏭ to play the next track.

Playing the previous track

- Touch ⏮ within 2 seconds of the start of the track.

Returning to the beginning of the current track

- Touch ⏮ after 2 seconds of the start of the track.

Scanning forward or backward

- Touch and hold ⏮ or ⏭ during play.

Playing tracks repeatedly

- Touch during play:

  1: Plays the current track repeatedly.

  ALL: Plays all tracks repeatedly.

  OFF: Returns to normal play.

Playing tracks randomly

- Touch during play:

  ON: Plays all tracks randomly.

  OFF: Returns to normal play.

Note
Not all functions are supported by all Bluetooth® devices.

Tone settings

1. Press during play.

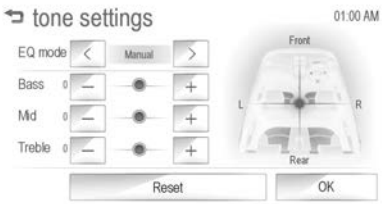

For further information, see Tone settings on page 105.

Personalisation

The infotainment system settings can be personalised.

1. Press (4).
2. Touch **settings**.

The settings menu is displayed.

3. Touch to select.

Time and date settings

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **time & date settings**.

The time & date settings menu is displayed.

4. Touch to select.

   set time format: Select 12 hr or 24 hr time display.

   set date format: Set the date display format:

   - YYYY/MM/DD: 2013/12/31
   - DD/MM/YYYY: 31/12/2013
   - MM/DD/YYYY: 12/31/2013

   set time and date: Manually set the current hours, minutes and year/month/date by touching ∧ or ∨.
5. Touch **OK**.
6. Touch ⮌ to return to the previous menu.

Radio settings

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **radio settings**.

The radio settings menu is displayed.

4. Touch to select.

   auto volume: The volume adjusts depending on the vehicle's speed. Select Off, Low, Medium or High.

radio favourites: Select the number of AM/FM favourites (FAV) pages to display.

radio tune bar: View the radio station tuning bar for selecting a radio station. Select On or Off.

radio text: Select On or Off to display radio station text when available.

radio factory settings: Restore the settings back to the default settings.

5. Touch ⮌ to return to the previous menu.

Connection settings

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.

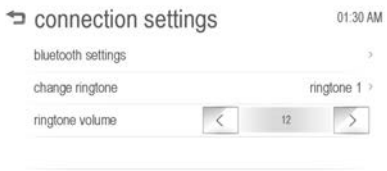

The connection settings menu is displayed.

4. Touch to select.

bluetooth settings: Select the bluetooth settings menu:

- **pair device**: Select a device and connect, separate or delete.
- **change PIN code**: Manually change or set a PIN code.
- **discoverable**: To initiate the Bluetooth® connection from a Bluetooth® device, select On or Off.
- **device info**: Check the device information.

change ringtone: Select a ringtone.

ringtone volume: Change the ringtone volume.

5. Touch ⮌ to return to the previous menu.

Vehicle settings

When the ignition is on and the vehicle is stationary, settings can be changed in the vehicle settings menu. See Vehicle personalisation on page 85.

Language settings

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **language**.

The language menu is displayed.

Note
English is the only supported language.

Text scroll

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch ▼.

The settings menu is displayed.

4. Touch **On** or **Off**.

   On: The text displayed on the audio screen is scrolled.

   Off: The text is scrolled once then displayed in a shortened form.
5. Touch ⮌ to return to the previous menu.

Touch beep volume

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch ▼.

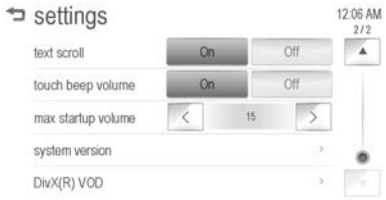

The settings menu is displayed.

4. Touch **On** or **Off**.

   On: A beep sounds when the screen is touched.

   Off: Cancels the beep sound.
5. Touch ⮌ to return to the previous menu.

Max startup volume

Adjust the maximum limit for the start-up volume.

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch ▼.

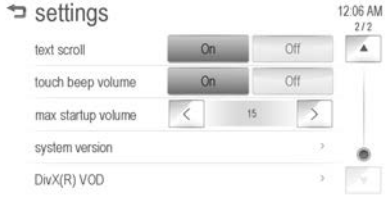

The settings menu is displayed.

4. Touch < or >.

   Select a volume between 9 ~ 21.
5. Touch ⮌ to return to the previous menu.

System version

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch ▼.
4. Touch **system version**.

The system version information is displayed.

5. Touch ⮌ to return to the previous menu.

DivX® VOD

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch ▼.

4. Touch **DivX® VOD**.

   For more information, see Trademarks and licence agreements on page 239.

Bluetooth® phone

General information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

Bluetooth® also allows streaming of music files from a device, if files are available. See Bluetooth® music on page 121.

⚠Warning

Do not use a mobile phone when driving.

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Pairing and connecting a Bluetooth® device

1. Turn the Bluetooth® device on. Refer to the Bluetooth® device's user guide.
2. Press ⌂ (4).
3. Touch **phone**.

4. Touch **Yes**.

5. Touch **Search Bluetooth Device**.

6. Touch the device to pair.

- If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment system screen.

- If SSP is not supported, input the PIN shown on the screen, into the Bluetooth® device.

7. When a Bluetooth® phone is successfully paired, the phone screen is displayed.

   If the connection fails, a failure message is displayed.

Note

- When a Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

  For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

  If the phone book is not downloaded automatically, it may not be supported by the phone or is required to be initiated manually from the phone.
- If a Bluetooth® device is already paired to the infotainment system, auto connection begins.

Pairing an additional device when a paired device is connected

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the device to pair from the pair device screen then go to step 9.

7. Touch **Search Bluetooth Device**.

8. Touch the device to pair on the searched list screen.

- If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment screen.

- If SSP is not supported, input the PIN shown on the screen, into the Bluetooth® device.

9. When pairing is successful, the device name is displayed on the pair device screen.

Checking the connected Bluetooth® device

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.

: Connected Bluetooth® device

BT: Bluetooth® music and handsfree enabled

: handsfree enabled

BT: Bluetooth® music enabled

Note
The infotainment system can register up to five Bluetooth® devices.

Disconnecting the Bluetooth® device

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the name of the device to disconnect.

7. Touch **Yes**.

Connecting the Bluetooth® device

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the device to be connected.

The device is connected.

Deleting the Bluetooth® device

1. Press ⌂ (4).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch **Del**.

7. Touch **Yes** to confirm.

Hands-free phone

Making a call by entering a phone number:

1. Enter the phone number using the keypad on the screen.
2. Touch ✆.

   Alternatively, press ✆ on the steering wheel remote controls.

Note
To change a digit, touch ←.
To delete all digits, touch and hold ←.

Switching a call to the mobile phone (private mode)

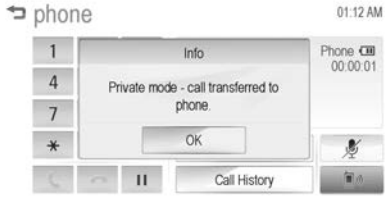

1. Touch 📱.
2. Touch **OK**.

To switch the call back to hands-free:

1. Touch 📱 again.

Switching the microphone on/off (mute)

1. Touch .

Re-dialling last number

1. Touch and hold .

   Alternatively, press on the steering wheel remote controls.

Note
Redialling is not possible when there is no call history.

Receiving calls

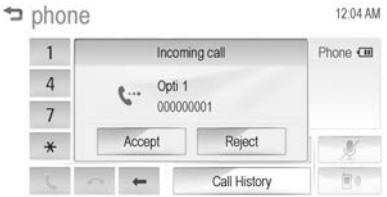

1. Touch **Accept**.
   Alternatively, press on the steering wheel remote controls
   Note
   Audio transmission will stop, the phone will ring and information will display on the screen.

To reject a call:

2. Touch **Reject**.

   Alternatively, press on the steering wheel remote controls.

Using the phone book menu

1. Touch **Phone Book**.

2. Touch ▲ or ▼ to scroll through the list.
3. Touch the entry to be dialled.

4. Touch the number to dial.

Searching for phone book entries

1. Touch **Phone Book**.

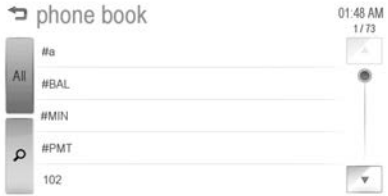

2. Touch .

3. Use the keypad to search by name.

   For further information, see Searching by name on page 136.

4. Touch the name to call.
5. Touch the number to dial.

Note
When the Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

If the phone book is not downloaded automatically, it may not be supported by the phone or is required to be initiated manually from the phone.

Searching by name

Example: searching the name, alex.

1. Touch **abc** to select the first character.

   Names which include a, b or c are displayed.
2. Touch **jkl** to select the second character.

   Names which also include j, k or l are displayed.
3. Touch **def** to select the third character.

   Names which also include d, e or f are displayed.
4. Touch **wxyz** to select the fourth character.

   Names which also include w, x, y or z are displayed.

   Note
   As more letters of the name are entered, the list of possible names reduces.
5. Touch **alex** to select.

Making a call from the call history

1. Touch **Call History.**

2. Touch (→, (× or (←.
   (→: Dialled call
   (×: Missed call
   (←: Received call
3. Touch the entry to be dialled.

Making a call with speed dial

- Touch and hold the speed dial number using the keypad on the phone screen.
- Only speed dial numbers already stored on the mobile phone can be used for speed dial calls.
- Up to 2-digit speed dial numbers are supported.
- For 2-digit speed dial numbers, touch the 1st digit then touch and hold the 2nd digit to make a call.

Note
Not all phones support this feature.

Smartphone link

Use smartphone link when a smartphone is connected to the infotainment system.

- When using an iPhone®, connect the iPhone® through the USB port to use applications.
- When using an Android phone, connect the Android phone to the infotainment system using Bluetooth® to use applications.

Connecting to applications

1. Install the application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the application on the smartphone.
4. Press ⌂ (4).
5. Touch **smartphone link**.
6. Touch the application icon.

   The application screen is displayed.

iPhone® error messages

If the infotainment system fails to activate the application on the iPhone®, an error message is displayed:

If required:

- Unlock the iPhone®.
- Close the other active application.
- Install the application on the iPhone®.

If the iOS version of the iPhone® is less than 4.0, an error message is displayed:

- Activate the application on the iPhone®, then press the required application menu on the infotainment system.

Android smartphone error messages

If the infotainment system fails to activate the application on the smartphone, connected with Bluetooth®, an error message is displayed.

1. Reset all settings related to the phone, then press the required application menu on the infotainment system.
2. Reconnect the smartphone to the infotainment system with Bluetooth®, then press the required application menu on the infotainment system.
3. When stopping the application on the smartphone, it may take some time to return to normal operation.

   Activate the application after approximately 10 to 20 seconds.

Displaying/hiding application icons

To display or hide application icons on the smartphone link menu:

1. Press ⌂ (4).
2. Touch **smartphone link**.

3. Touch **settings**.

The app settings menu is displayed.

4. Press an application icon to hide the application icon shown on the smartphone link menu.
5. Press an application icon to display the application icon hidden on the smartphone link menu. A check mark is shown.
6. Touch **OK**.

Note
If an application is activated on the smartphone link menu, is displayed on the HOME screen.

Stitcher™ Internet Radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Stitcher™

Listen to news, comedy, sports and radio talk shows in one app.

Choose from 5,000+ on demand podcasts and live AM/FM stations.

Note
Stitcher™ requires an active data connection to function.

1. Install the Stitcher™ application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the Stitcher™ application on the smartphone.

To use Stitcher™:

4. Press ⌂ (4).
5. Touch **smartphone link**.

6. Touch **Stitcher**.

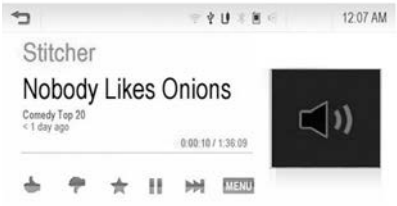

The Stitcher screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Stitcher menu is not displayed.

Thumbs up and thumbs down

Rate songs/content using thumbs up and thumbs down.

- Touch 👍 or 👎.

Saving the favourite station

- Press ★ to save the station as a favourite station.

Pause

1. Touch **II** during playback.
2. Touch ► to resume play.

Playing the next station

- Touch ⏭ to move to the next station.

Using the Stitcher menu

1. Touch **MENU** during play.

2. Touch ▲ or ▼ to scroll through the list.
3. Touch to select.

Pandora® Internet Radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Pandora®

Pandora® is an internet radio service that streams personalised radio stations based on artists, songs, genres and comedians.

Create stations using the Pandora® website or smartphone application, then use (thumbs up) or (thumbs down) to personalise stations. To set up an account or for more information, go to www.pandora.com.

Note Pandora® requires an active data connection to function.

1. Install the Pandora® application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

   iPhone: USB connection

   Android phone: Bluetooth® connection
3. Activate the Pandora® application.

To use Pandora®:

4. Press ⌂ (4).
5. Touch **smartphone link**.

6. Touch **Pandora**.

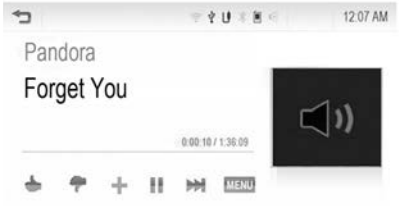

The Pandora screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Pandora menu is not displayed.

Bookmarks

Touch **+** while playing a song to bookmark either the artist or the song. Bookmarks are viewable on www.pandora.com.

Thumbs down

Touch 👎 to change to the next song and not play the song on this station again. This helps Pandora® choose which songs should not play on this station. This feature is only available on user created stations.

Thumbs up

Touch 👍 to help Pandora® choose which songs should play on this station.

Pause

1. Touch **II** during playback.
2. Touch ► to resume play.

Playing the next station

- Touch ⏭ to move to the next song.

Pandora® skip limit

Pandora® limits the number of skips allowed on their service. When the skip limit is reached, 👎 will not skip the currently playing track, but 👎 feedback will be recorded.

Pandora® advertisements

Pandora® may display advertisements. Artist name and track title will not be displayed and the skip track button is not available.

Climate control

Climate control systems 143
Air vents.....150
Maintenance 151

Climate control systems

Air conditioning system

⚠Danger

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.

Controls

- Heated rear window
- Fan speed
- Cooling
- Air distribution
- Temperature
- Air recirculation

Heated rear window

- Press .

The heated rear window:

- Operates when the ignition is turned on.
- Switches off automatically after a few minutes or by pressing again.
- LED illuminates.

Caution
Do not use sharp objects or abrasive window cleaners on the rear window. Do not scratch or damage the wires.

Fan speed

- Rotate the fan speed switch to the required speed.

Air distribution

- Select an air outlet by rotating the switch.

  Air is directed:

  : To the instrument panel vents

  : To the instrument panel vents and floor vents

  : To the floor vents

  : To the windscreen vents and floor vents

  : To the windscreen vents

Temperature

- Rotate the temperature switch:

  Red: warm

  Blue: cold

Cooling

The air conditioning system cools and dehumidifies (dries) the air when the outside temperature is a little above the freezing point, therefore condensation may form and drip from under the vehicle.

Note

If no cooling or drying is required, switch the cooling system off to save fuel.

1. Start the engine.
2. Rotate the temperature switch to cold air.
3. Rotate the fan speed switch to the required speed.
4. Press .

   The LED illuminates when the air conditioning is on.
5. Rotate the air distribution switch to the required setting.

To turn the air conditioning system off:

- Rotate the fan speed switch ✻ to **0** or press ⛭.
  The LED extinguishes when the air conditioning is off.

Air recirculation

- Slide the switch to ⛐.

⚠Warning

Driving with recirculation mode on for a prolonged period of time can make you sleepy. Periodically switch to outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

Rear air conditioning

The REAR A/C button is located below the climate control system.

- Press **REAR A/C**.
  The rear air conditioning controls are enabled.
- See Rear air conditioning system on page 150.

Maximum cooling

Use maximum cooling for quick cooling of the passenger compartment.

1. Turn the ignition on.
2. Briefly open the windows so that hot air can disperse quickly.
3. Slide the air recirculation switch to position ⛐.
4. Rotate the air distribution switch to ⛐.
5. Rotate the temperature switch to cold air.

6. Rotate the fan speed switch ✤ to maximum speed.
7. Press ☼
8. Open the air vents.

Electronic climate control system

⚠Danger

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.

- The electronic climate control system is fully operational when the engine is running.
- Do not cover the sensor on the instrument panel.

Controls

- The electronic climate control system operates in automatic mode when **AUTO** is pressed.

  All settings, except temperature are chosen automatically by the system.
- Select a temperature while in automatic mode.

Automatic mode

1. Press **AUTO**.
2. Open all air vents.

3. Select a temperature by rotating the central switch.

   Anticlockwise: cold

   Clockwise: warm

   Note
   If the minimum temperature is set, the electronic climate control system operates at maximum cooling.

Manual mode

Pressing any of the following buttons deactivates automatic operation.

To return to automatic mode:

- Press **AUTO**.

Fan speed

To increase or decrease the fan speed:

- Press **+** or **–**.

  The fan speed is shown on the display.

Air distribution and cooling

To select an air distribution outlet:

- Press △ or ▽.

  The setting is shown on the display.

  Air is directed:

  : To the instrument panel vents

  : To the instrument panel vents and floor vents

  : To the floor vents

  : To the windscreen vents and floor vents

To select cooling:

The air conditioning system cools and dehumidifies (dries) the air when the outside temperature is a little above the freezing point, therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

- Press ☼ to turn on and off.

  The LED illuminates when the air conditioning is on.

Demisting and defrosting windows

For windscreen demisting:

1. Press .

   Air distribution and fresh air are set automatically.

   The LED illuminates.

2. To return to the previous mode, press , or press **AUTO** to return to automatic mode.

For rear window demisting:

- Press .

  The LED illuminates when the rear window demister is on.

Caution

Do not use sharp objects or abrasive window cleaners on the rear window.

Do not scratch or damage the wires.

Air recirculation

- Press .

  The LED illuminates when air recirculation is on.

- To return to fresh air, press again.

⚠Warning

Driving with recirculation mode on for a prolonged period of time can make you sleepy. Periodically switch to outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

Rear air conditioning

- Press **REAR A/C**.

  The rear air conditioning controls are enabled.

  The front air conditioning system switches to manual mode.

- See Rear air conditioning system on page 150.

Rear air conditioning system

The rear air conditioning system operates in conjunction with the front passenger compartment air conditioning system.

Rear fan switch

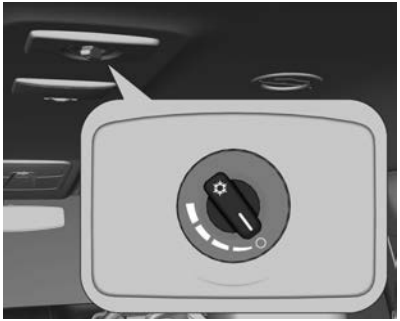

1. Turn on the air conditioning system.
2. Press **REAR A/C**.
3. Rotate the rear fan speed switch to the required speed.
   - Rotate anticlockwise to decrease air flow.
   - Rotate clockwise to increase air flow.

   Air flows to the rear passenger compartment via the overhead air vents.

Air vents

Adjustable air vents

- Direct air flow by tilting the vents.
- To close the vent, push the slat down.

- Direct air flow by tilting the vents.

⚠Warning

Do not attach objects to the vents. Damage or injury may occur.

Rear air vents

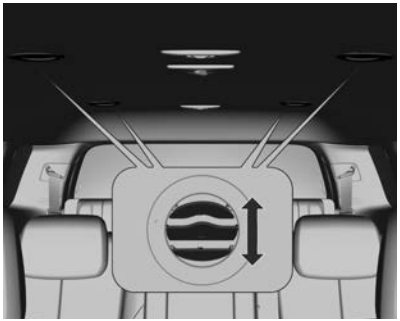

- Push the slat upwards to open or downwards to close.
- Direct air flow by tilting and rotating each vent.

Fixed air vents

Fixed air vents are located beneath the windscreen, front door windows and in the footwells.

Maintenance

Air intake

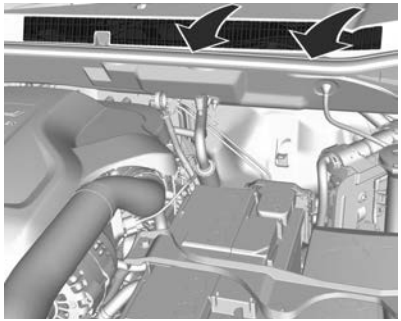

Outside air is drawn into the vehicle through the opening between the bonnet and the windscreen.

Keep the area clear of debris.

Pollen filter

The filter removes contaminants such as pollen and dust from the air entering the vehicle.

Maintenance of the pollen filter is required. Refer to the Service/ Warranty Booklet.

Air conditioning regular operation

To ensure efficient performance, switch the cooling on for a few minutes once a month, even in winter.

Driving and operating

Driving information.....153
Starting and operating 153
Automatic transmission 159
Drive systems.....162
Brakes 166
Ride control systems 168
Object detection systems 174
Fuel.....177
Towing 181
Conversions and add-ons.....185

Driving information

Before entering the vehicle

Check that windows, mirrors and lamps are clean.

Visually check tyre inflation. Check tyre pressures weekly.

Before driving off

1. Close and secure all doors.
2. Position the seat for comfortable driving.
3. Adjust rear view mirrors.
4. Fasten seat belts.
5. Check that warning indicators illuminate when turning the ignition on. See Warning lights, gauges and indicators on page 66.

Starting and operating

New vehicle running-in

Use the following precautions to improve performance:

- Do not make full throttle starts.
- Avoid downshifting to brake or slow the vehicle.
- Avoid hard stops except in emergencies. This will allow your brakes to bed in properly.
- Avoid hard stops except in emergencies to avoid premature wear and early replacement of brakes.
- Avoid heavy acceleration and prolonged high speed driving to avoid damage to the engine and to conserve fuel.
- Do not tow any other vehicle.

Driving diesel engine vehicles

Observe the following precautions to ensure maximum turbocharger service life.

- After starting the engine, let it run for approximately 1 to 2 minutes while idling (avoid acceleration or driving the vehicle).
- Do not stop the engine immediately after high load driving (such as high speed driving or driving up steep slopes). Let the engine run for approximately 1 to 2 minutes at idle speed to cool it down.
- After changing the engine oil and oil filter, start the engine and let it run for about 1 to 2 minutes while idling (avoid acceleration or driving the vehicle).
- Operate the engine above idle only after normal engine oil pressure has been established. Forcing the turbocharger to operate before the bearings are adequately lubricated creates unnecessary friction.
- Use only the specified engine oil and observe inspection and replacement intervals.
- At low outside temperatures or when the vehicle has not been used for a long period, normal engine oil pressure and flow is affected.

  Under these conditions the engine should be started and allowed to idle for a few minutes before operating at higher rpm.

Brakes

- Do not let the vehicle run down hills, or coast with the engine off, as the power assistance does not operate.
- Ensure that there are no obstructions which could limit brake pedal use.
- Continuous or heavy use of brakes will shorten the life of the brake pads.
- See Antilock Brake System (ABS) on page 166.

Off-road driving

Before driving off-road:

- Check the fuel level. See Fuel on page 177.
- Check spare tyre pressure. See Tyre pressure on page 237.
- Check fluids levels. See Engine compartment overview on page 191.

While driving off-road:

- Be alert to unexpected restrictions.
- Be aware of uncommon noises from the tyres and the engine.
- Always drive at a speed at which you are able to maintain control the vehicle.

⚠Warning

When driving off-road, sudden motions and manoeuvres could lead to loss of control of the steering and possible personal injuries. When driving on and off road, always wear a seat belt.

After driving off-road:

- Remove any debris from under the vehicle or bonnet. It may become a fire hazard.
- After driving through mud or sand, clean and check the brake linings.
- Check the body frame, steering, suspension, wheels, tyres, exhaust system, fuel lines and cooling system.

Note

Regular off-road driving requires more frequent maintenance.

Water crossing

Before crossing water:

- Switch off the air conditioning.
- Do not attempt to drive through water more than 600 mm deep.
- Never drive into fast running water. The force of the water can easily move the vehicle sideways, possibly into deeper water.
- Drive very slowly through deep water. Driving too fast may cause water to enter the engine and cause major damage.
- Immediately after driving through deep water, drive slowly and check the brake pedal force.

  If the brakes are wet, press firmly several times to dry them out quickly.
- If the vehicle is stationary in deep water for an extended time, water may have entered the engine, transmission, differentials and wheel bearings. Contact a Holden Dealer as soon as possible.

Hill and mountain roads

If the vehicle is driven frequently over hilly terrain, it must always be in good condition. The fluids, tyres and brake pads must be checked according to the maintenance schedule shown in the Service/ Warranty Booklet.

On a downhill road, avoid unnecessary use of the brakes. The vehicle speed can be slowed by shifting down a gear.

When driving downhill, always keep the engine running and a gear engaged. Do not drive with the engine turned off or by shifting into neutral gear.

Loose articles

Do not leave loose articles or luggage in the passenger compartment. Secure in the rear load area.

⚠Warning

Portable gas cylinders can leak, creating a risk of fire or explosion.

As a precaution, ensure adequate ventilation when carrying gas cylinders.

They must be restrained from rolling around and when possible, placed in the cargo area of the vehicle.

It is recommended that if gas cylinders are frequently transported that a purpose-built carrying compartment be used.

Ensure any transportation of gas cylinders complies with the applicable regulations.

Ignition positions

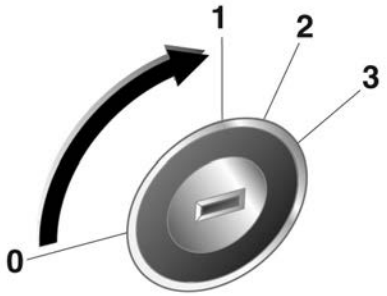

⚠Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) Diesel engine preheating. When the key is in this position, the engine is ready to start and all electrical systems are active.

3: (START) Turn the key to this position until the engine starts.

Caution
Do not leave the key in positions 1 or 2 for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

Starting the engine

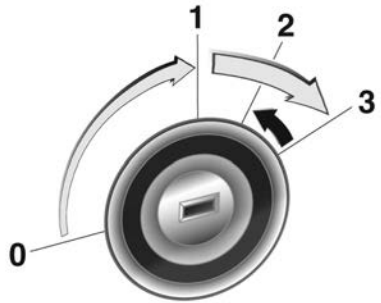

1. Apply the park brake.
2. Turn the key to position 1 while moving the steering wheel slightly to release the lock.

   Move the shift lever to **P** or **N**.

   Do not accelerate.
3. Turn the ignition key to position 2 until ⟒ extinguishes.
4. Turn the key to position 3 and release when the engine is running.

Retained Accessory Power (RAP)

The power outlets may be used after the engine is turned off.

Note

The power outlets will continue to operate for up to 10 minutes or until a door is opened.

See Power outlets on page 65.

Parking

1. Apply the park brake.
2. Select position **P**.
3. Shut all windows.
4. Turn the ignition off to lock the steering wheel.
5. Remove the key.
6. Press on the key to lock all doors. See Keys and locks on page 16.

⚠Warning

To avoid the possibility of injury, always apply the park brake before exiting the vehicle.

Be careful where you park or drive. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with the hot exhaust system.

Never leave the engine running in an area such as a closed garage or underground car park.

Engine exhaust

⚠Danger

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault repaired by a Holden Dealer.

Automatic transmission

The automatic transmission allows manual gear shifting (manual mode) or automatic gear shifting (automatic mode).

Transmission display

The selected gear or transmission mode is displayed in the Driver Information Centre (DIC).

Shift lever positions

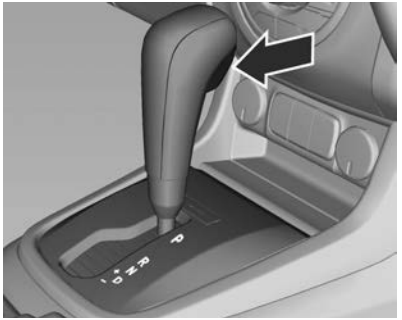

P: (park) In park position, the wheels are locked. Select **P** only when the vehicle is stationary and the park brake is applied.

R: (reverse) Place in reverse only when the vehicle is stationary.

N: (neutral)

D: (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.

+-: (manual) See Manual mode on page 160.

Note

- The shift lever is locked in position **P**. To move, switch the ignition on, apply the brake pedal and push the release button.
- To engage **P** or **R**, push the release button.
- Do not accelerate while engaging a gear.
- Never depress the accelerator pedal and brake pedal at the same time.
- When a gear is engaged, the vehicle slowly begins to creep when the brake is released.

Engine braking

To utilise the engine braking effect, select a lower gear when driving downhill.

⚠Warning

Do not downshift by two or more gear positions at one time.

Grade braking

Grade braking assists in maintaining desired vehicle speeds when driving on downhill grades, by using the engine and transmission to slow the vehicle.

The first time the feature activates for each ignition cycle, a DIC message will be displayed. See Transmission messages on page 80.

Parking

1. Press the brake pedal.
2. Select position **P**.
3. Pull the park brake lever up firmly.
4. Remove the ignition key.

   Note
   The ignition key can only be removed when the shift lever is in position **P**.

Manual mode

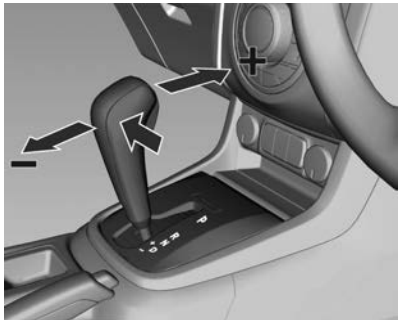

To enable manual mode, move the shift lever to position **D** then push the lever to the left.

- Push the lever forwards (+) once to shift up one gear.
- Pull the lever backwards (-) once to shift down one gear.

Note

- If a higher gear is selected when vehicle speed is too low, or a lower gear when vehicle speed is too high, the shift is not executed.

  Shift Denied is displayed on the DIC.
- If engine speed is too low, the transmission automatically shifts to a lower gear.
- No automatic shifting to a higher gear takes place at high engine speed.

Electronic driving programmes

Kickdown

If the accelerator pedal is pressed to the floor while in automatic mode, the transmission shifts to a lower gear, depending on the engine speed.

Fault

In the event of a fault, illuminates. The transmission no longer shifts automatically or manually because it is locked in a certain gear.

Contact a Holden Dealer.

Interruption of power supply

If the power supply is interrupted, the shift lever cannot be moved out of position **P** and the ignition key cannot be removed.

If the battery is discharged, start the vehicle using jump leads. See Jump starting on page 221.

If the battery is not the cause of the fault, release the shift lever and remove the ignition key from the ignition switch/lock.

Release shift lever

To shift out of **P**:

1. Apply the brake pedal.

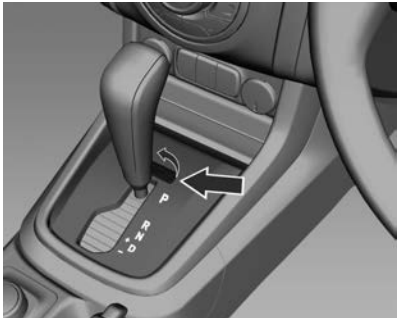

2. Open the cover.

   Note
   Use a small screwdriver to prise the cover off, at both ends.

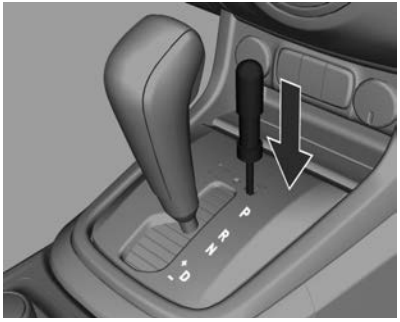

3. Insert a screwdriver into the slot until the shift lever is unlocked.
4. Move the shift lever to position **N**.
5. Remove the screwdriver.
6. Close the cover.
7. Have the vehicle repaired by a Holden Dealer as soon as possible.

Drive systems

Four-wheel drive

- Four-wheel drive sends the engine's driving power to all four wheels for extra traction.
- Use **2⬆** (Two-Wheel High) for normal driving on sealed roads.
- Do not use four-wheel drive for normal driving on dry pavement.

Note

- Driving on clean, dry roads in four-wheel drive for an extended period of time can cause premature wear on the vehicle's powertrain.
- Never use four-wheel drive when a different spare tyre size is installed on the vehicle. The vehicle could be damaged and the repairs may not be covered by the New Vehicle Voluntary Warranty.

Indicator lights:

- All lights illuminate on the shift control switch when the ignition is turned on.

  If the lights do not come on, contact a Holden Dealer.
- Illuminate on the shift control switch to indicate the current setting.
- Flash while shifting. The light will illuminate when the shift is completed.

  If the shift control switch does not shift, it will return to the last setting.

Transfer case shift control switch

The switch is located next to the park brake on the centre console.

Rotate the switch to shift into and out of four-wheel drive.

- **2⬆** (Two-Wheel High): Use for driving in most street and highway situations.

  The front axle is not engaged in two-wheel drive.
- **N** (Neutral): Use only when the vehicle is being towed.
- **4⬆** (Four-Wheel High): This setting engages the front axle to help drive the vehicle.

  Use Four-Wheel High when you need extra traction, such as on snowy or icy roads, or in most off-road situations.
- **4⬇** (Four-Wheel Low): This setting engages the front axle to provide extra traction.

  It sends maximum power to all four wheels.

  Use Four-Wheel Low if driving off-road in sand, mud or deep snow and while climbing or descending steep grades.

  Shifting into Four-Wheel Low will turn Electronic Stability Control (ESC) off.

  Note

  If traction is required to be turned off in **4⬇** (Four-Wheel Low), press Off for approximately 7 seconds. Traction Control Off is displayed on the DIC.

  See Electronic Stability Control (ESC) on page 169.

Note

- ESP Off is displayed on the DIC.
- OFF illuminates on the instrument panel.

Shifting from Two-Wheel High to Four-Wheel High

- Rotate the shift control switch from **2⬆** to **4⬆**.

  This can be done at any speed below 120 km/h.

  The front axle will lock automatically.

Shifting from Four-Wheel High to Two-Wheel High

- Rotate the shift control switch from **4⬆** to **2⬆**.

  This can be done at any speed.

  The front axle will unlock automatically.

Note
It is normal to hear and feel the vehicle's transfer case shift out of **4⬆**.

Shifting from Two-Wheel High or Four-Wheel High to Four-Wheel Low

The vehicle must be stationary or moving less than 5 km/h and the transmission in **N**.

The preferred method for shifting into **4⬇** is to have the vehicle moving 1.6 to 3.2 km/h.

1. Rotate the shift control switch to **4⬇**.
2. Wait for the **4⬇** indicator light to stop flashing and to illuminate before shifting the transmission into gear.

   If **4⬇** is selected when the vehicle is in gear and/or moving faster than 5 km/h, the **4⬇** indicator light will flash for 30 seconds but will not complete the shift.

   The light will return to the original setting.

Shifting from Four-Wheel Low to Two-Wheel High or Four-Wheel High

The vehicle must be stationary or moving less than 5 km/h and the transmission in **N**.

The preferred method for shifting out of **4⬇** is to have the vehicle moving 1.6 to 3.2 km/h.

1. Rotate the shift control switch to **2⬆** or **4⬆**.
2. Wait for the **2⬆** or **4⬆** indicator light to stop flashing and to illuminate before shifting the transmission into gear.

   If **2⬆** or **4⬆** is selected when the vehicle is in gear and/or moving faster than 5 km/h, the **2⬆** or **4⬆** indicator light will flash for 30 seconds but will not complete the shift.

   The light will return to the original setting.

Shifting to neutral

Use **N** (neutral) when towing the vehicle. See Towing the vehicle on page 224.

⚠Warning

Shifting the shift control switch to **N** can cause the vehicle to roll even if the transmission is in position **P** (park). Serious injuries could occur. Make sure the park brake is applied before placing the shift control switch to **N**. See Park brake on page 167.

1. Stop the vehicle.
2. Apply the park brake.
3. Start the vehicle.
4. Press the brake pedal.
5. Shift the transmission to **N**.
6. Rotate the shift control switch to **2⬆**.
7. Rotate the shift control switch clockwise past **4⬆** to **N**.

   Note
   N only displays when selected.
8. Hold the switch at **N** (approximately 20 seconds) until the red **N** indicator light illuminates, when the shift to **N** is complete.

   Note
   When releasing the shift control switch from **N**, the switch will rotate to the Four-Wheel Low **4⬇** setting. The shift control switch will remain in **N** with the red indicator light illuminated until a new setting is selected.
9. Press and hold the brake pedal.
10. Shift the transmission to **R** for 1 second.
11. Shift the transmission to **D** for 1 second.
12. Turn the ignition key to ACC (position 1).
13. Place the shift lever into **P**.
14. Turn the ignition key to LOCK/ OFF (position 0).

    Note
    This neutral setting is a Two-Wheel Drive neutral, so the front and rear outputs of the transfer case are disengaged as though in Two-Wheel High.

    With a disengaged front axle, there is no power to the front wheels, thus allowing towing with the front wheels off the ground.

Shifting out of neutral

After towing the vehicle, shift out of **N** (neutral) to drive.

1. Apply the park brake.
2. Press the brake pedal.
3. Start the engine or keep the engine off and turn the ignition key to ON (position 2).
4. Move the shift lever to **N**.
5. Rotate the shift control switch from **4⬇** to another setting.
6. Release the park brake.

Brakes

The brake system comprises two independent brake circuits.

If one brake circuit fails, the vehicle can still be braked using the other brake circuit. However, braking effect is achieved only when the brake pedal is pressed firmly. Considerably more force is needed for this.
The braking distance is extended. Contact a Holden Dealer.

When the engine is not running, such as when the vehicle is being towed and the brake pedal has been pressed once or twice, braking requires greater force.

Caution

Do not drive with your foot resting on the brake pedal. This will accelerate wear of the brake components and cause the brakes to become overheated.

Antilock Brake System (ABS)

The ABS:

- Continuously monitors the vehicle's braking system preventing the wheels from locking up.
- Allows maximum braking effort while full steering control is retained, even in the event of panic braking.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions.

Operation

ABS operation is noticeable by pulsing of the brake pedal and the noise of the regulation process.

The initial self-check may also be audible.

Keep the brake pedal fully pressed throughout the braking process, without pumping it. Pumping the brake pedal can reduce brake efficiency.

If the vehicle is travelling above 50 km/h and ABS braking occurs, the centrally mounted rear high level brake lamp will flash.

Caution

When the ignition is turned on, (ABS) is illuminated for a few seconds.

If (ABS) does not extinguish, or illuminates when driving, a malfunction has occurred.

Note The vehicle's brake system remains operational, but without ABS assistance. Have a Holden Dealer check the system as soon as possible.

See Brake system warning light on page 72.

Park brake

Applying the park brake:

1. Pull the lever straight up, without pressing the release button.

Releasing the park brake:

1. Pull the lever slightly upwards.
2. Press the release button and lower the lever all the way down.

To reduce the operating forces of the park brake, depress the foot brake at the same time.

⚠Warning

Never drive the vehicle with the park brake applied.

See Brake system warning light on page 72.

Brake assist

If the brake pedal is pressed quickly and forcefully, maximum brake force is automatically applied (full braking).

Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

Hill Start Assist (HSA)

The HSA system assists in preventing rollback when driving off, while on an incline.

1. Release the brake pedal.
2. Press the accelerator pedal.

   The brakes remain on for approximately 2 seconds.

Ride control systems

Traction Control System (TCS)

TCS improves driving stability when necessary, regardless of the type of road surface or tyre grip, by preventing the driving wheels from spinning.

As soon as the driving wheels start to spin, engine output is reduced and the wheels are braked individually. This considerably improves the driving stability of the vehicle on slippery road surfaces.

When four-wheel drive is active, TCS is operational on the rear wheels only.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving.

Adapt speed to road conditions.

Operation

The OFF switch is located in front of the shift lever.

In certain circumstances, it may be helpful to deactivate the TCS.

- Deactivate by pressing OFF for approximately 2 seconds.

  Traction Control Off is displayed on the DIC.

- TCS is reactivated by pressing OFF again, for approximately 2 seconds.

  Traction Control On is displayed on the DIC.
- When active flashes.
- TCS is also reactivated the next time the ignition is turned on.
- See Ride control systems messages on page 82.

Electronic Stability Control (ESC)

The ESC:

- Improves driving stability in any driving situation.
- Assists in maintaining vehicle stability when the vehicle's grip level is exceeded such as a sudden lane change, slippery or unexpected road conditions.
- Alters engine power and/or braking on specific wheels, improving the vehicle's steering control and power delivery, on wet or slippery roads, particularly on snow and ice.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions.

Operation

The OFF switch is located in front of the shift lever.

In certain circumstances, it may be helpful to deactivate the ESC.

- Deactivate by pressing OFF for approximately 7 seconds.

  OFF illuminates and ESP Off is displayed on the DIC.

- The ESC is reactivated by pressing OFF again for approximately 2 seconds.

  Both TCS and the ESC are reactivated and OFF extinguishes.

- When active illuminates.
- The ESC is also reactivated the next time the ignition is turned on.

  See Ride control systems messages on page 82.

Descent Control System (DCS)

- The DCS allows the vehicle to travel on a steep decline at speeds between approximately 7 km/h and 30 km/h without pressing the brake pedal.
- When the system is activated and while the vehicle is moving at speeds between approximately 7 km/h and 30 km/h, it will maintain the desired descent speed when the vehicle is on a steep slope.
- The desired descent speed within the active range can be varied by using the accelerator or brake pedals to set the speed.
- Noise or vibration from the brake system may be noticeable, when the system is in operation.

Caution

Use only when descending steep grades while driving off-road. Do not use when driving on normal road surfaces. Unnecessary use of the function, such as while driving on normal roads, may damage the brake system and the ESC function.

Activation

While travelling at speeds below 50 km/h:

- Press .

  illuminates green on the instrument panel.

  During operation, flashes.

Note

- Pressing the accelerator or brake pedals while DCS is activated, will adjust the desired descent speed.

  If pressed, DCS operation will stop until the accelerator or brake pedals are released.

  stops flashing.
- If the DCS is activated and the vehicle speed exceeds 30 km/h, extinguishes and the system remains in standby mode.

  When the vehicle speed drops below approximately 30 km/h, illuminates and DCS is activated.
- When in standby mode and the vehicle speed exceeds 50 km/h, DCS deactivates.
- The message Reduce Speed for Hill Descent Control may display when DCS is activated and vehicle speed exceeds 30 km/h.

Deactivation

While travelling at speeds below 50 km/h:

- Press .

  extinguishes.

System protection

When operated continuously for prolonged periods of time, temperatures may increase within the brake system:

- DCS may enter a protection mode, gradually releasing the brakes, and temporarily disabling DCS.
- will extinguish.
- Traction Control Off may display on the DIC.
- All other braking functions will continue to operate normally.
- Once the brakes are at normal temperatures, press at speeds below 50 km/h to reactivate DCS.

Cruise control

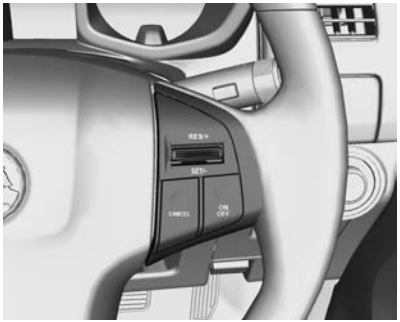

The cruise control:

- Maintains the vehicle's speed without pressure on the accelerator pedal.
- Will only operate at speeds above approximately 20 km/h.
- Controls are located on the steering wheel.
- For safety reasons, cruise control cannot be activated until the foot brake has been operated once.

⚠Warning

Do not use the cruise control when road or driving conditions require varying speeds. A consistent speed isn't practical in heavy, varying traffic or on winding, slippery or rough roads.

The cruise control does not apply the vehicle's brakes. Therefore the vehicle may gain speed when going down steep hills.

When climbing steep hills it is possible for the vehicle to lose speed. You may need to switch off the cruise control and use the accelerator pedal.

Setting cruise control

1. Press **ON OFF**.

   illuminates white.
2. Accelerate to the desired speed (above 20 km/h).
3. Push the switch down to **SET/-**.

   illuminates green.
4. Take your foot off the accelerator pedal.

Increasing set speed

- Push the switch up to **RES/+** and hold it or briefly push to **RES/+** repeatedly.

  The vehicle will accelerate.
- Alternatively accelerate to the desired speed and store by pushing the switch down to **SET/-**.

Note
Vehicle speed can be increased by depressing the accelerator pedal. When the accelerator pedal is released, the previously stored speed is resumed.

Decreasing set speed

1. Push the switch down to **SET/-** and hold it or briefly push to **SET/-** repeatedly.

   The vehicle will decelerate.
2. Release the switch at the desired speed.

Deactivation

- Press **CANCEL**.

  illuminates white.
- Alternatively, do one of the following:
  - Reduce vehicle speed below approximately 20 km/h.
  - Press the brake pedal.
  - TCS or the ESC operates.

Resume stored speed

When the cruise control is on and speed is above 20 km/h:

- Push the switch up to **RES/+**.

  The most recently set speed will automatically resume.

  illuminates green.

Switching off

- Press **ON OFF**.

  extinguishes.

  The stored speed is deleted.

Note
Switching the ignition off also deletes the stored speed.

Object detection systems

Park Assist (PA)

The PA system is able to detect and indicate objects at the rear of the vehicle when reversing.

The PA consists of four sensors on the rear bumper, a control unit and a speaker in the vehicle's interior.

⚠Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The PA is only an aid and is neither intended to, nor able to take over any responsibility.

The park sensors may not be able to detect all objects under every condition e.g. objects too close to the vehicle, objects above or below the sensors, or objects with a surface that absorbs ultrasonic waves. Additionally, some ambient conditions like ultrasonic waves or heavy rain can cause disruptive reflections from an object's surface. Such objects may not be detected.

Always manoeuvre the vehicle slowly to allow yourself sufficient time to react. The warning tones will sound only while the vehicle's speed is below 10 km/h.

Activation

The PA is activated automatically when all of the following occur:

- The ignition is turned on.
- Reverse gear is selected.
- The vehicle speed is below 10 km/h.

Alarm tones

- Alarm tones sound when an object is detected.
- The interval between the alarm tones becomes shorter as the vehicle gets closer to an object.
- When the distance is less than 30 cm, the alarm tones sound continuously.

Deactivation

The PA is deactivated automatically when any of the following occur:

- The vehicle speed is above 10 km/h.
- Reverse gear is deselected.
- A fault occurs in the system.

Fault

A fault in the system is indicated by:

- One alarm tone followed shortly after by an almost continuous alarm tone.
- One alarm tone followed by separate alarm tones similar to when the vehicle gets closer to an object.
- Two alarm tones.
- Parking Assist Off may be displayed on the DIC.

1. Move the vehicle with care.
2. Check and clean the sensors.
3. If the problem persists, contact a Holden Dealer.

Notes on operation

- If the sensors receive other ultrasonic signals e.g. metallic sounds or exhaust brake noise from heavy commercial vehicles, the system may not work properly.
- The system may not activate if the sensors are frozen or covered with dirt.
- Clean dirty sensors with a soft sponge and clean water.
- Do not push or scratch the surface of the sensors.
- Do not hit or direct high pressure water directly at the sensors as they may be damaged.
- The system may not recognise sharp objects, thick winter clothes or other materials which absorb ultrasonic waves.

Rear Vision Camera (RVC)

⚠Warning

Never rely solely on the reverse camera when reversing the vehicle.

There is a blind spot that can not be sensed by the rear view camera.

The reverse camera is not intended to replace the driver's judgement or attention toward the rear of the vehicle when reversing.

Before entering the vehicle, always check that the area around the vehicle is clear of obstacles and people.

Always perform head checks and use the vehicle's mirrors when reversing.

If the vehicle sustains any damage in the area of the reverse camera, the camera may become misaligned. Contact a Holden Dealer.

Always keep the camera lens free from dirt, snow or ice. Only use mild soap and water with a soft cloth to clean the lens.

The camera

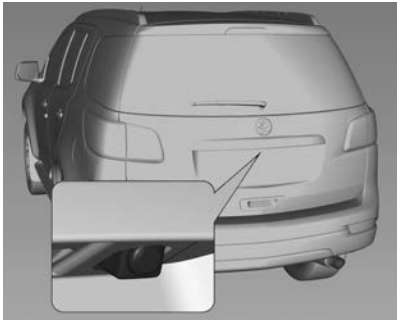

The camera is located on the rear tailgate.

The RVC cannot display objects:

- Close to the corners of the bumper
- Forward of the camera
- Higher than the camera

RVC display

The camera display appears on the infotainment system display, when reverse gear is selected.

The area directly behind the vehicle is displayed in real time.

Note

- The distance of objects seen on the screen differs from the actual distance.
- The area displayed on the screen may vary according to vehicle orientation or road conditions.
- Objects of different heights will appear to be different distances from the vehicle.
- The display brightness automatically adjusts to suit ambient lighting conditions.
- Guidelines to assist reversing can be displayed on the display. See Rear camera option under Vehicle personalisation on page 87.

Operating the RVC

To activate:

1. Turn the ignition key to **ON**.
2. Select reverse gear.

   The camera and display automatically activates.

Note

When the shift lever is moved to another position, the RVC deactivates.

Cleaning

The lens requires regular cleaning to ensure optimum performance.

Use only a soft cloth, mild soap and water.

⚠Warning

Do not use abrasive cleaners or scouring pads as they could scratch the lens, impairing the systems performance.

Fuel

⚠Danger

EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can produce carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

Gases could be inhaled if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- Each time the vehicle is serviced.
- Whenever a change is noticed in the sound of the exhaust system.
- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

Take the vehicle to a Holden Dealer if you think the vehicle needs inspecting for any of the above reasons.

Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Turn the fan on using any setting that brings outside air into the vehicle. Do not run the engine in an enclosed area (such as the garage) any longer than is needed to move the vehicle.

⚠Danger

Always switch off the engine and any mobile phones when refuelling.

Do not smoke or allow open flames or sparks near the vehicle when refuelling.

If fuel fumes are smelt while driving, the cause should be identified and corrected without delay by a Holden Dealer.

Static electricity can ignite fuel vapour. Only use pumps, hoses and containers that are properly grounded when filling up with fuel.

To avoid injury to you and to others, read and follow all instructions on the petrol station pump.

⚠Warning

USE OF FUEL CONTAINING ETHANOL

Under no circumstances should you use diesel fuel containing ethanol.

Use of such fuels may result in engine malfunction, starting and operating difficulties and materials degradation.

These adverse effects could result in permanent damage to your vehicle and personal injury.

Fuel types

Diesel engines must be operated only on commercially available diesel fuel meeting the requirements of Euro standard EN590.

The use of bio-diesel containing up to 5 % fatty acid methyl ester (“FAME”) also known as “B5” is also permitted provided that the FAME meets the Euro Standard EN14214, and the resultant B5 blend meets Euro Standard EN590.

Do not use marine diesel oils or heating oils.

The flow and filterability of diesel fuel are temperature-dependent. When temperatures are low, use diesel fuel with guaranteed winter properties.

Caution

Use only bio-diesel blends containing up to a maximum of 5 % FAME that meets Euro standard EN590.

Purchasing fuel from a reputable fuel retailer may reduce the risk of purchasing fuel with more than 5 % FAME or fuel which contains abnormal fuel properties.

Use of any other bio-diesel that does not have the certification referred to above, or has a FAME content exceeding 5 %, may cause serious damage to your vehicle (including engine failure).

Damage attributable to the use of non certified bio-diesel is not covered by your New Vehicle Voluntary Warranty. In no event will Holden be responsible or bear any liability for any damage or loss that may arise in connection with the use of any fuel that does not meet this specification.

Refuelling

Always fill the fuel tank at the intermediate or fast fill rate. Do not add any more fuel after the fuel filler first clicks off or fuel blows back. This allows room for the fuel to expand inside the tank.

Wipe off any overflowing fuel immediately from the vehicle. Replace the fuel cap and close the fuel opening then spray or splash with water.

Tank capacity

See Capacities on page 236.

Fuel filler door

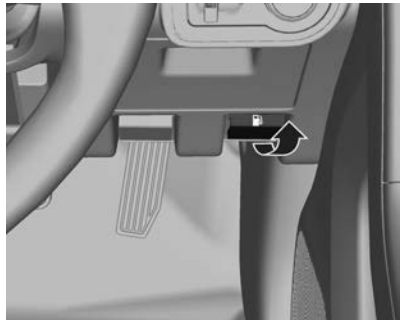

1. Pull the release lever.

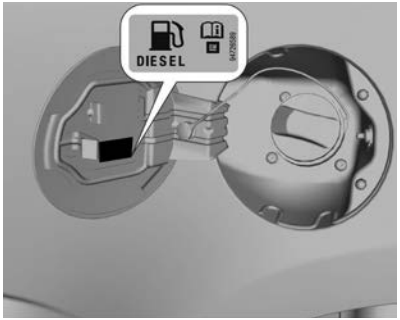

The fuel filler door is located at the rear side of the vehicle, on the left.

2. Slowly remove the cap.
3. Place the fuel filler cap in the fuel filler door.
4. After refuelling, replace the cap.
5. Wipe off any overflowing fuel immediately.
6. Close the fuel filler door.

Caution

Before entering a car wash, ensure the fuel filler door is closed to avoid damage.

Do not close the fuel filler door when the vehicle is locked.

Towing

Trailer towing

The word trailer is used throughout this section and includes all types of towed vehicles, such as caravans, boat trailers or any other special purpose trailer.

Maximum towing capacities (kg) – braked trailer

	2.8L Diesel
Maximum ball load (kg)	300
Maximum towing capacity	3,000

Note

- Exceeding these values could affect the New Vehicle Voluntary Warranty.
- The maximum unbraked towing capacity for all vehicles is 750 kg.

Towing

Handling, durability and economy may be affected by towing a trailer.

For mandatory towing equipment, see Towing and loading equipment on page 183.

A Holden Dealer will assist with supply and installation of towing equipment.

Overloading

Never exceed the loads given for the towing equipment fitted to the vehicle.

All mandatory equipment must be fitted, otherwise you may affect the New Vehicle Voluntary Warranty, to the extent that Holden considers the overloading or missing equipment to have affected the specifications or quality of the vehicle. See Towing and loading equipment on page 183.

⚠Warning

Holden towing equipment is recommended where it is available. Where it is not available, no recommendation is made as to the make of equipment which should be used. Holden will not accept liability for defects occurring in towing equipment not marketed by Holden or for defects in the vehicle arising from the use of such equipment or for loss or injury caused by use of such equipment. The use of such equipment may affect your New Vehicle Voluntary Warranty, to the extent that Holden considers the non-recommended equipment affects the specifications or quality of your Holden vehicle. It is inadvisable to mix and match different brands of towing equipment, as equipment is usually designed as an integrated package.

Trailer recommendations

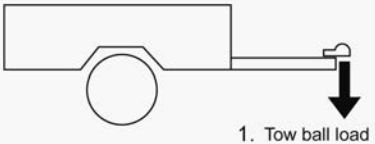

A trailer hitched to a vehicle places a weight on the tow bar. This weight is called the tow bar ball weight or tow ball load (1).

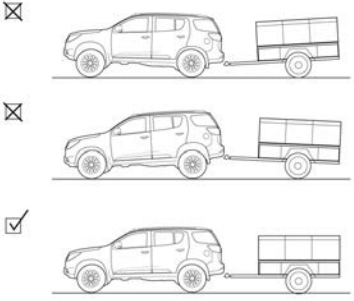

- For single axle trailers, the tow ball load should be 10% of the loaded trailer weight. For heavy trailers with more than one axle, the tow ball load should be 5 % - 10 % of the loaded trailer weight.
- Ensure the tow ball load does not exceed 10% of the loaded trailer weight. Refer to Towing and loading equipment on page 183.
- Adjust by moving items forwards or backwards within the trailer, to change the balance.
- Check the tow ball load before coupling the trailer to the towing vehicle.
- Axle loads must not be exceeded when the tow ball load is included. See Axle loads on page 236.
- If maximum axle loads are exceeded, weight should be removed from the rear of the vehicle.
- If the load balance cannot be corrected, use a load distribution hitch.

Towing and loading equipment

Tow load	Mandatory equipment
Up to 750 kg	Holden tow bar
	Holden trailer wiring harness
	Load distribution hitch if the vehicle attitude is compromised or the maximum ball load is exceeded*
Between 750 kg and 3,000 kg	Holden tow bar
	Holden trailer wiring harness
	Brakes on the trailer
	Load distribution hitch if the vehicle attitude is compromised or the maximum ball load is exceeded*

*Alternatively, redistribute the trailer load.

Load distribution hitch

- A load distribution hitch transfers load to the vehicles front wheels aiding steering and brake performance.
- Do not exceed the maximum towing capacities specified. See Maximum towing capacities on page 181.
- Do not exceed the total front or rear axle loads specified. See Axle loads on page 236.

Towing precautions

- When heavily loading the vehicle or when towing, inflate tyres to the maximum recommended pressure. See Tyre placard on page 213.
- Tighten the tow ball retaining nut to 140 Nm (Newton metres) and check the torque frequently.
- Vehicles handle differently when towing. Take a couple of short distance trips with the trailer before taking a long trip.
- Have the vehicle and trailer correctly maintained and serviced, with particular attention given to the brakes, tyres, suspension, wheel bearings, towing coupling and lighting.
- Use an extended-arm mirror on both sides of the vehicle if necessary.
- If the vehicle has headlamp range adjustment, headlamps may need re-aiming after the loaded trailer has been hitched.
- Use a lower gear and the brakes when descending steep hills.
- Ensure that the tow bar does not obscure the rear number plate. Remove the tow bar tongue when not required for towing.
- The M10 anti-rattle bolt and nut, should be removed when towing to prevent damage to the bolt or tow bar tongue.

Trailer brakes

- Trailer brakes are mandatory on trailers with a trailer mass of more than 750 kg.
- Consult the appropriate regulatory body in your State or Territory for the legal requirements of trailer brakes.

Running-in when towing

It is recommended that a new vehicle be driven for at least 1,500 km before towing.

If towing is necessary before this, do not exceed 80 km/h. This also applies if the vehicle is fitted with a new or reconditioned engine, transmission or rear axle.

Off road loading and towing

To reduce the risk of damage to the vehicle (and trailer) and to improve safety when operating off-road, reduce the vehicle speed and minimise the load being carried or towed.

Vehicle maintenance

More frequent vehicle maintenance is required when using the vehicle to tow. Refer to the Service/Warranty Booklet in the vehicle’s glove box.

Trailer Sway Control (TCS)

If the system detects trailer sway movements, engine power is reduced and the vehicle/trailer combination is selectively braked until the trailer sway ceases. While the system is working, keep steering as still as possible.

TSC is a function of the Electronic Stability Control (ESC) system and may be disabled by turning the Traction Control System (TCS) or ESC off. See Ride control systems on page 168.

Conversions and add-ons

Fitting driving lamps

If driving lamps are to be fitted, it is critical that the Holden approved installation be used. The Holden driving lamps are available from a Holden Dealer and have been compatibility tested with the vehicles design, including the cooling system.

Do not fit any accessory over the upper or lower air intakes at the front of the vehicle, as this may affect engine cooling.

Fitting roo/nudge bars

If a roo/nudge bar is to be fitted, it is critical that the Holden approved roo/nudge bar be used. Other types must not be fitted.

The Holden roo/nudge bar is available from a Holden Dealer and has been compatibility tested with the vehicle's design, including the Holden airbag system.

⚠Warning

Fitting other types of roo/nudge bars may affect crash performance, airbag performance and engine cooling.

Roo/nudge bars:

- Should not be fitted to vehicles operating in urban areas, as they increase the risk of injury to a pedestrian in the event of a collision.
- Are only recommended for country/outback areas, where additional protection from straying animals is required.

Snorkel intake

It is necessary to reverse the snorkel intake:

- When driving in snowy conditions.
- Where there are other heavy contaminants such as excessive dust or insect swarms.
- To prevent snow or other contaminants from entering the snorkel and engine air intake.

1. Loosen the two screws.
2. Remove the snorkel intake.
3. Rotate the snorkel intake 180º and refit securing the two screws.
4. Once conditions have stopped, refit the snorkel intake to its original position.

Vehicle care

General information 187
Vehicle checks 189
Bulb replacement 199
Electrical system 208
Vehicle tools 212
Wheels and tyres 213
Jump starting 221
Appearance care 226

General information

Where specified, use only Holden genuine parts and accessories.

Emission information

The emission control systems are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, CO is toxic when it becomes highly concentrated in the air.

Emission control system

Major emission control systems that the vehicle may have are:

1. Evaporative emission control system. This system is designed to prevent the escape of fuel vapour from the fuel system and recycle the vapours through the normal combustion process.
2. Crankcase emission control system. This system is designed to prevent blow-by gases from escaping into the atmosphere and recycle them through the combustion process.
3. Exhaust emission control system. The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of fuel and idle speed. In addition vehicles have a closed loop mixture control system.

It is recommended that service and repair to fuel or emission systems be carried out by an authorised Holden Dealer.

Owner responsibility

The engine, engine control system and exhaust system of the vehicle must NOT be modified in any way.

⚠Warning

Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules. It is also illegal to drive a vehicle modified in this way.

Maintenance requirements

Have the vehicle serviced at the frequency shown in the Maintenance schedule, in the Service/Warranty Booklet.

It is recommended that servicing be carried out by an authorised Holden Dealer who will maintain the vehicle's emission control system as per the Service/Warranty Booklet.

Vehicle storage

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain the washer fluid reservoir.
- Check coolant and corrosion protection.
- Adjust the tyre pressure to the value specified for a full load.
- Park the vehicle in a dry, well ventilated place.
- Open the bonnet, close all doors and lock the vehicle.

  Disconnect the clamp from the negative terminal of the vehicle battery.

  Close the bonnet.

Before returning the vehicle to the road:

- Connect the clamp to the negative terminal of the vehicle battery.

  Check the power windows operation.
- Check the tyre pressures.
- Fill the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.

Vehicle checks

Doing your own service work

⚠Warning

Do not touch engine compartment components when the ignition is on.

Bonnet

Opening

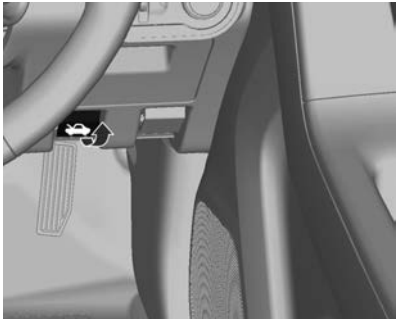

1. Pull the release lever rearwards and upwards.

2. Push the safety catch towards the driver side and open the bonnet.

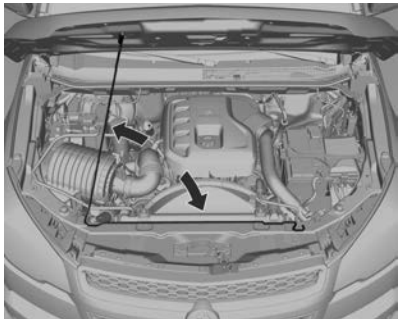

3. Pull the support rod up, away from the holder and secure.

Closing

⚠Warning

To avoid injury and/or damage to the vehicle, check each time, before the bonnet is closed, that the contact area is unobstructed.

1. Place the support rod into the holder.
2. Lower the bonnet to approximately 30 cm and allow it to drop into the catch.
3. Check that the bonnet is engaged.
4. If it is not engaged, open the bonnet and repeat Steps 2 and 3.

   Note
   Do not push on the bonnet to close.

⚠Warning

If while driving you notice that the bonnet has not been properly closed, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

Engine compartment overview

2.8 L diesel

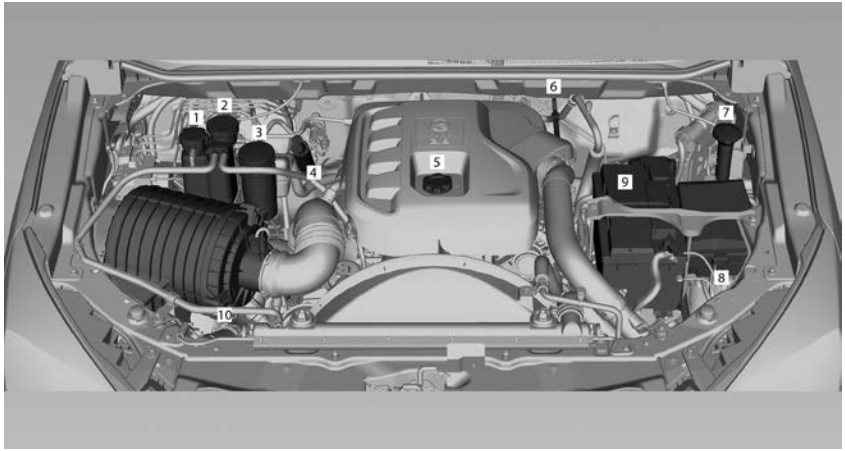

1. Coolant reservoir, see page 194
2. Brake fluid reservoir, see page 196
3. Power steering fluid reservoir, see page 195
4. Automatic transmission fluid dipstick, see page 193
5. Engine oil filler cap, see page 192
6. Dipstick for engine oil, see page 192
7. Washer fluid reservoir, see page 196
8. Engine compartment fuse box, see page 210
9. Battery, see page 197
10. Engine air filter, see page 193

Engine oil

Checking oil level

- Check the engine oil level regularly and before a long journey.
- Maintain the correct level.
- The engine must be at operating temperature and the ignition turned off for at least 10 minutes.

1. Park the vehicle on a level surface.

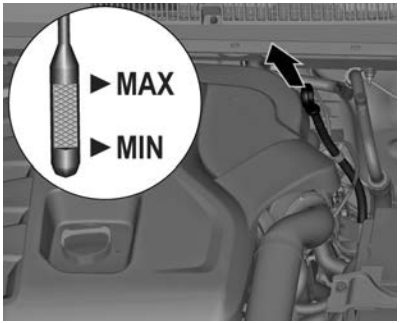

2. Remove the dipstick and wipe clean.
3. Insert the dipstick to the stop on the handle.
4. Remove and read the engine oil level.

   The level should be at the MAX mark. Add oil if the level is at the **MIN** mark.
5. Insert the dipstick to the stop on the handle.

Note

The engine oil level must not exceed the **MAX** mark on the dipstick.

For correct engine oil specification, see Recommended fluids, lubricants and parts on page 231.

Adding engine oil

See Capacities on 236.

The engine oil filler cap is located on the top of the engine.

1. Rotate the engine oil filler cap anticlockwise and remove.
2. Add enough oil to reach below the **MAX** mark on the dipstick.
3. Check the level on the dipstick and add further oil if necessary.

   The engine oil must not exceed the **MAX** mark on the dipstick.

Caution

Overfilled engine oil must be drained or suctioned out.

4. Replace the engine oil filler cap tightly.

⚠Danger

Engine oil is an irritant and if ingested, can cause illness or death.

Keep out of reach of children.

Avoid repeated or prolonged contact with skin.

Wash exposed areas with soap and water or hand cleaner.

Be careful when draining the engine oil as it may be hot.

Automatic transmission fluid

1. Park the vehicle on a level surface.
2. Place the shift lever in position **P**.
3. Keep the engine running.

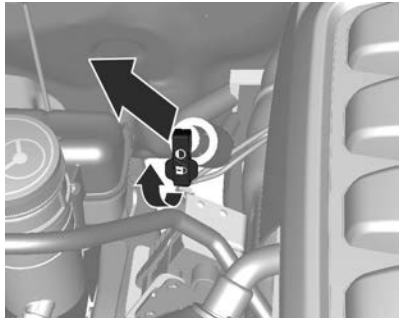

4. Unlock the dipstick, remove and wipe clean.
5. Insert the dipstick to the stop on the handle.
6. Remove and read the automatic transmission fluid level.

   Add automatic transmission fluid if the level is at the **MIN** mark.
7. Insert the dipstick to the stop on the handle.
8. Lock the cap by pushing the lever downwards.

Note
The automatic transmission fluid level must not exceed the **MAX** mark on the dipstick.

For correct automatic transmission fluid specification, see Recommended fluids, lubricants and parts on page 231.

Engine air filter

The engine air filter will be checked when the vehicle is serviced. Refer to the Service/Warranty Booklet.

Engine coolant

Engine coolant level

Check the coolant level at least once a week.

Checking coolant level

⚠Warning

Do not remove the coolant reservoir cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

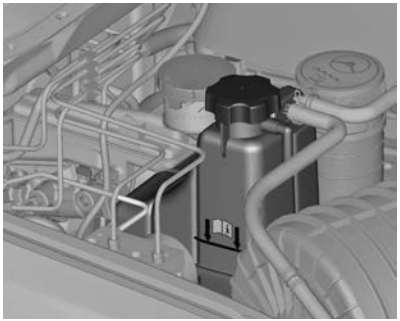

If the cooling system is cold, the coolant level should be above the line on the coolant reservoir.

Adding coolant

Caution

If the coolant level is too low, engine damage may occur.

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

Note

Use only approved coolant. See Recommended fluids, lubricants and parts on page 231.

1. Turn the ignition off.
2. Remove the coolant reservoir cap.
3. Add the required amount of coolant.
4. Replace the cap securely.

   If the coolant requires regular topping up, contact a Holden Dealer.

⚠Warning

Avoid repeated or prolonged contact with coolant.

Wash off with soap and water.

Keep out of reach of children.

If the coolant level is low, there may be a leak in the cooling system:

1. Look for leaks at the radiator hoses and connections, heater hoses and connections, radiator and water pump.

   Take care when checking these areas as they may still be hot.
2. If a major leak or other problems are found, do not run the engine until all problems have been repaired. Contact a Holden Dealer.
3. If no problems are found, refill the coolant reservoir. See Adding coolant on page 194.

⚠Warning

Do not remove the coolant reservoir cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

Power steering fluid

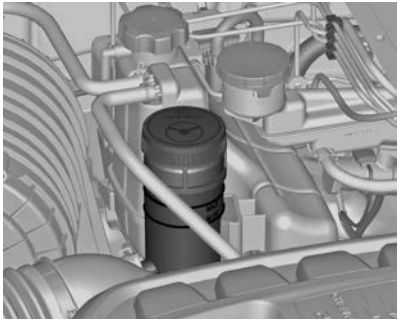

The power steering fluid level must be between the **MIN** and the **MAX** marks.

Adding power steering fluid

1. Turn the ignition off.

Caution

Extremely small amounts of contamination can cause steering system damage and cause it to not work properly.

Do not allow contaminants to contact the fluid side of the reservoir cap/dipstick or to enter the reservoir.

2. Rotate the power steering fluid reservoir cap anticlockwise and remove.
3. Add the required amount of power steering fluid.

   Do not overfill the reservoir.
4. Replace the power steering fluid reservoir cap by rotating clockwise to secure.

Caution

Do not operate the vehicle without the required amount of power steering fluid. Damage to the power steering system may occur.

For correct power steering fluid specification, see Recommended fluids, lubricants and parts on page 231.

Washer fluid

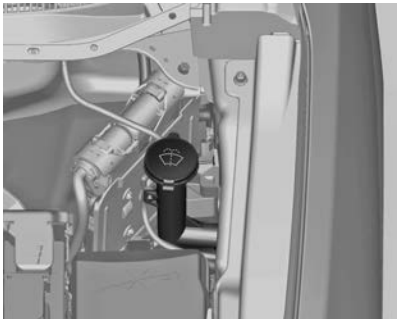

Check the fluid level weekly.

Adding washer fluid

1. Lift the front of the cap up.

   Use the correct amount of washer fluid additive. Refer to a Holden Dealer.

   Do not use ordinary soap or detergent as they froth up and damage the wiper rubbers.
2. Secure the cap.

Brake fluid

⚠Warning

Brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

Caution

Avoid contact with eyes and skin. Wash any affected area immediately.

Checking brake fluid level

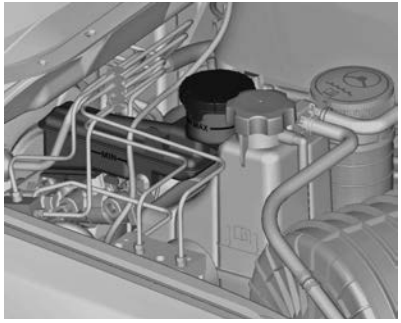

The level should be between the **MIN** and **MAX** marks.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

Adding brake fluid

See Recommended fluids, lubricants and parts on page 231.

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate the brake fluid reservoir cap anticlockwise and remove.
4. Top up with the recommended brake fluid.

⚠Warning

Using brake fluid other than GM recommended brake fluid may cause corrosion to components of the braking system and reduced braking performance.

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap by rotating clockwise and clean up any spilt fluid.

If the brake fluid requires regular topping up, contact a Holden Dealer immediately.

Caution

Do not dispose of used brake fluid with household waste.

Use the local, authorised waste management facility.

Battery

⚠Warning

Batteries emit an explosive gas mixture which may be ignited. Therefore, you should keep sparks and flames away from the battery at all times. Never smoke near a battery.

Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with plenty of water. In case of eye contact, flush with plenty of water and contact a doctor immediately. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.

Keep batteries out of the reach of children.

Take care with all metal objects and tools including items you may wear (for example jewellery, rings and metal watch bands) near battery terminals.

The vehicle battery is maintenance free, provided that it has sufficient charging time and that electrical systems are not left on for prolonged periods of time.

Battery replacement

For battery location, see Engine compartment overview on page 191.

For replacement, refer to a Holden Dealer or authorised repairer.

Caution
Do not dispose of batteries with household waste. Use the local, authorised waste management facility.

Battery disconnection

The battery may discharge if the vehicle is not used for approximately four weeks.

To disconnect the battery:

1. Turn the ignition off.
2. Disconnect the clamp from the negative terminal of the vehicle battery.

   Ensure the ignition is turned off before reconnecting the vehicle battery.

For emergency starting when the battery is flat, see Jump starting on page 221.

Diesel fuel filter

When the water level in fuel filter is excessive, **Water in Fuel – Contact Service** illuminates on the instrument panel.

Caution
The engine and fuel system may be seriously damaged if the vehicle is driven while **Water in Fuel – Contact Service i**s illuminated. Contact a Holden Dealer immediately to have the fuel filter drained.

Note
The fuel filter will be drained when the vehicle is serviced. Refer to the Service/Warranty Booklet.

Diesel fuel system bleeding

The system requires bleeding if the vehicle has run out of fuel.

Note

A minimum of 5 litres of diesel fuel must be in the tank for the bleeding operation to work correctly.

1. Turn the ignition on for 15 seconds, and then off.
2. Repeat Step 1 three times.
3. Start the engine for a maximum of 40 seconds.
4. Repeat Steps 1 to 3 after 5 seconds.

   If the engine does not start, contact a Holden Dealer.

Wiper blade replacement

Regularly check the condition of the wiper blades.

- Replace hard, brittle or cracked blades or those that smear dirt on the windscreen.
- If the blades are not wiping properly, clean both the blades and the windscreen. See Exterior care on page 226.

Bulb replacement

Contact a trained service technician if unsure about the bulb replacement process.

When replacing bulbs:

- Turn the ignition off and remove the key.
- Turn off related switches.
- Fit bulbs of the specified wattage only.
- Do not touch bulbs or reflectors with bare hands.
- Clean stained bulbs with methylated spirits.

Bulbs to be changed by a Holden Dealer

- Turn signal lamps on the exterior mirrors
- Courtesy lamp
- Reading lamps
- Instrument panel lamps
- LED rear lamps
- Centre high-mounted brake lamp
- Fog lamps

Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Headlamps

Low and high beam (Type A)

Replace headlamp bulbs from within the engine compartment.

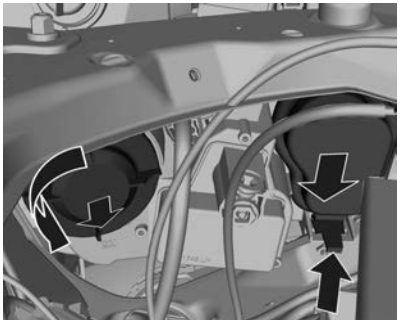

To remove the bulb covers:

- Rotate the outboard protective cover anticlockwise to open.
- Pull the inboard lower clip outwards to open the inboard protective cover.

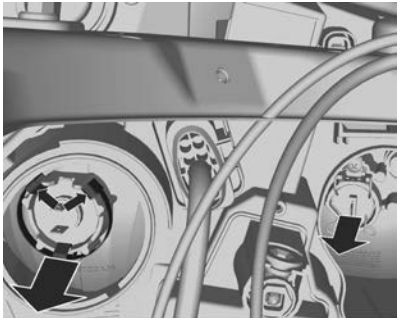

To replace the low beam bulb:

1. Disconnect the electrical connector.
2. Push the two upper tabs outwards.
3. Remove the bulb from the reflector housing, lifting upwards.
4. Replace the bulb.
5. Push the two upper tabs inwards to secure the bulb.
6. Refit the electrical connector and cover.
7. Check the lamp operation.

To replace the high beam bulb:

1. Disconnect the electrical connector.
2. Press the spring clips outwards to disengage.
3. Remove the bulb from the reflector housing.
4. Replace the bulb.
5. Press the spring clips inwards to secure the bulb.
6. Refit the electrical connector and cover.
7. Check the lamp operation.

Low and high beam (Type B)

Replace headlamp bulbs from within the engine compartment.

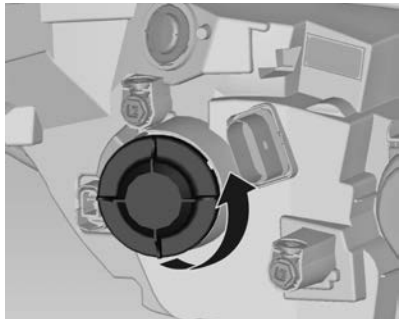

1. Rotate the protective covers anticlockwise to open.

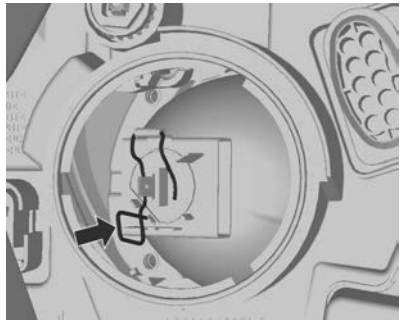

2. Disconnect the electrical connector.
3. Press the spring clip to disengage.
4. Swivel the spring clip to the right.

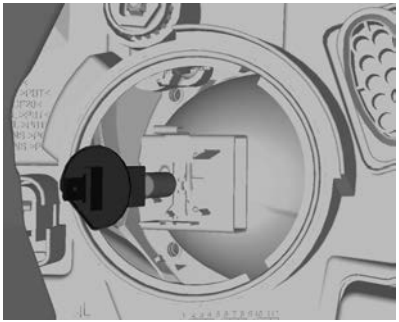

5. Remove the bulb from the reflector housing.
6. Fit the new bulb by engaging the lugs in the recesses on the reflector.
7. Engage the spring clip.
8. Reconnect the electrical connector.
9. Place the headlamp protective cover in position and close.
10. Check lamp operation.

Parking lamps

Replace front parking lamp bulbs from within the engine compartment.

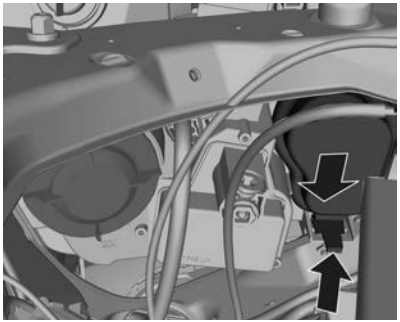

To remove the bulb cover:

- Pull the inboard lower clip outwards to open the inboard protective cover.

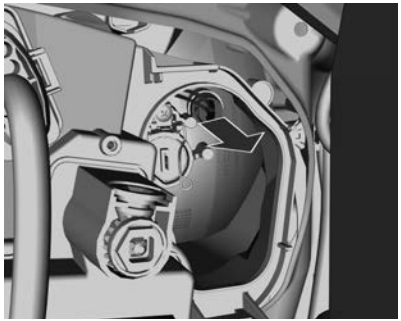

1. Remove the parking lamp bulb holder from the reflector.
2. Detach the plug connector from the bulb.

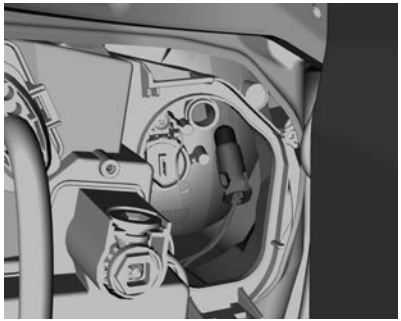

3. Remove the bulb from the socket.
4. Replace the bulb.
5. Plug the connector onto the bulb.
6. Insert the holder into the reflector.
7. Place the headlamp protective cover in position and close.
8. Check the lamp operation.

Front turn signal lamps

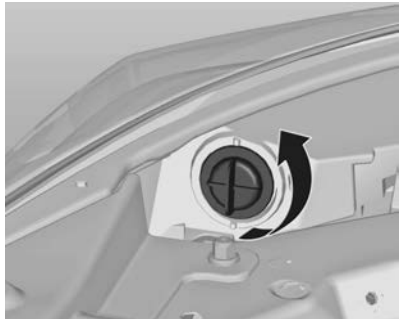

1. Rotate the bulb holder anticlockwise to disengage.

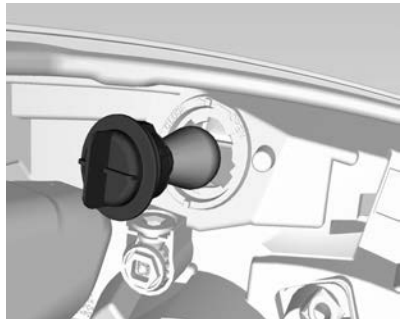

2. Push the bulb into the socket slightly and rotate anticlockwise, to remove.
3. Insert a new bulb.
4. Replace the bulb holder and rotate clockwise to engage.
5. Check lamp operation.

Tail lamps

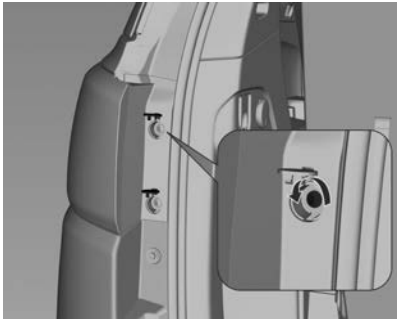

1. Open the covers.
2. Remove the two screws.

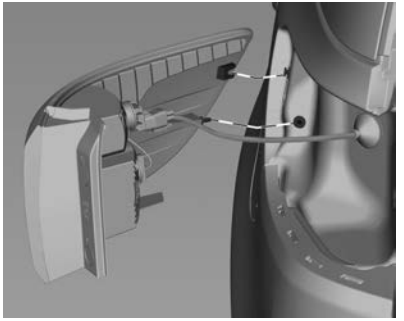

3. Remove the tail lamp assembly by pulling straight out.
4. Remove the electrical connector.

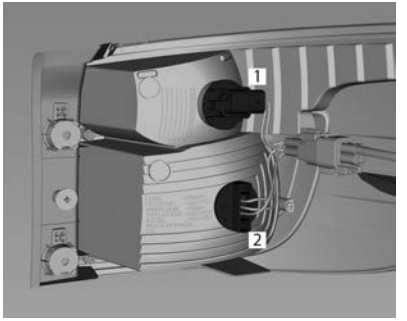

- Turn signal lamp (1)
- Tail lamp/brake lamp (2)

Note
LED tail lamps should be changed by a Holden Dealer.

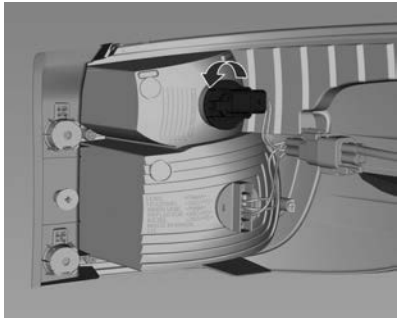

5. Rotate the bulb holder anticlockwise.

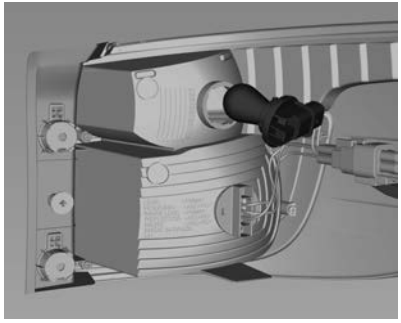

6. To remove the bulb, push the bulb into the socket slightly and rotate anticlockwise.
7. Replace the bulb.
8. Insert the bulb into the bulb holder.
9. Insert the bulb holder into the tail lamp assembly.
10. Connect the electrical connector.
11. Install the tail lamp assembly into the body and tighten the screws.
12. Close the covers.
13. Check lamp operation.

Tailgate tail lamps

1. Open the tailgate.

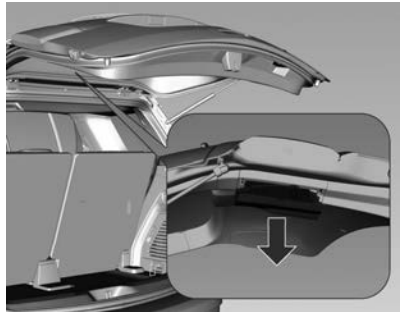

2. Remove the cover.

3. Rotate the bulb holder anticlockwise and remove.

4. Push the bulb into the socket slightly and rotate anticlockwise, to remove.
5. Replace the bulb.
6. Insert the bulb holder into the tailgate tail lamp.
7. Replace the cover.
8. Check lamp operation.

Reverse lamp

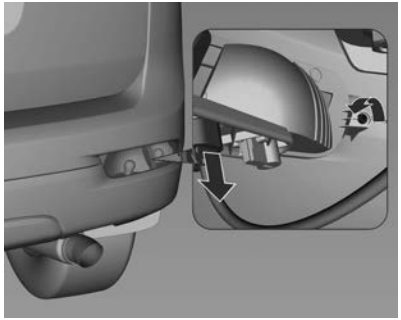

1. From behind the rear bumper, unscrew the screw to remove reverse lamp assembly.
2. Disconnect the electrical connector.

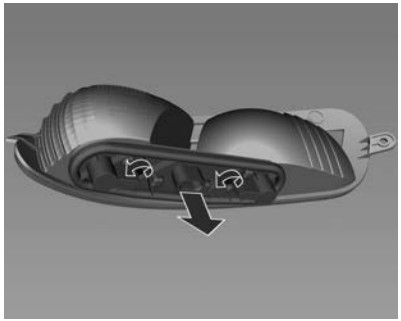

3. Unscrew both screws to remove the bulb holder.

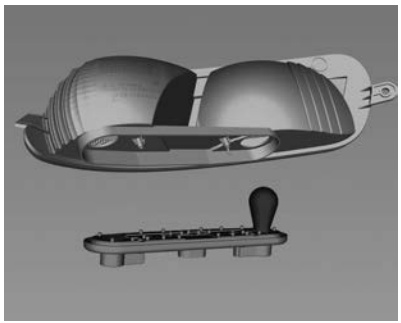

4. Replace the bulb.
5. Install the bulb holder and tighten the screws.
6. Install the reverse lamp assembly and tighten the screw.
7. Connect the electrical connector.
8. Check lamp operation.

Number plate lamp

1. Insert a screwdriver on the left side of the bulb housing.
2. Press to the side and release the spring.
3. Remove the bulb housing by pulling downwards, taking care not to pull on the cable.
4. Disconnect the electrical connector.
5. Rotate the bulb holder anticlockwise to disengage.
6. Remove the bulb from the holder and replace the bulb.

7. Insert the bulb holder into the bulb housing by rotating clockwise.
8. Connect the electrical connector.
9. Insert the bulb housing into the tailgate.
10. Check lamp operation.

Electrical system

Fuses and relays

Fuse boxes are located:

- In the engine compartment
- In a storage compartment on the driver side

There is a primary fuse holder connected to the positive battery post.

⚠Warning

Turn off the ignition (LOCK position) and any electrical equipment before changing a fuse.

- Replace blown fuses promptly.
- A blown fuse can be recognised by its melted wire.
- Do not replace the fuse until the cause of the fault has been remedied.
- Some functions are protected by several fuses.

⚠Warning

When replacing a fuse be sure to use a fuse of the specified amperage.

Never install a wire or similar as it could damage electrical components and cause a fire.

Any improper alterations to the electrical system may cause a fire hazard and engine damage. To maintain your own safety and that of the vehicle, have any work involving the electrical system or the replacement of high current fuses or relays carried out by a Holden Dealer.

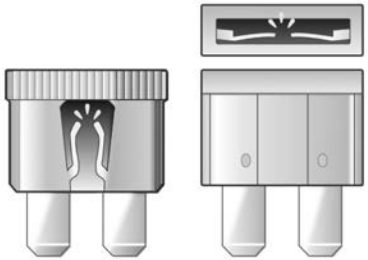

Fuse extractor

A fuse extractor can be located in the fuse box in the engine compartment.

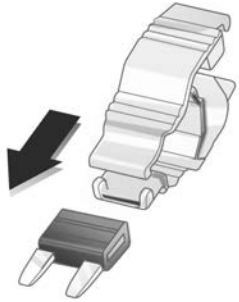

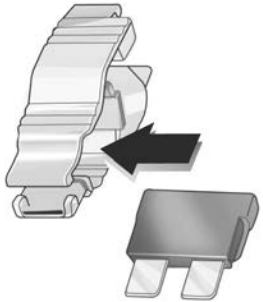

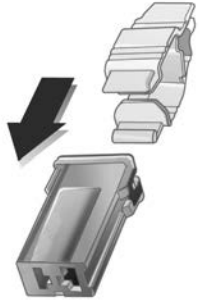

Place the fuse extractor on the top or side of the fuse to extract the fuse.

Engine compartment fuse box

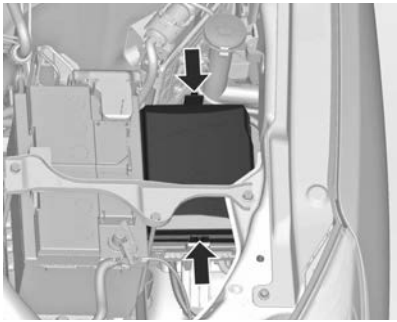

The fuse box is located on the passenger side of the engine compartment.

To disengage the cover:

- Lift upwards and remove.

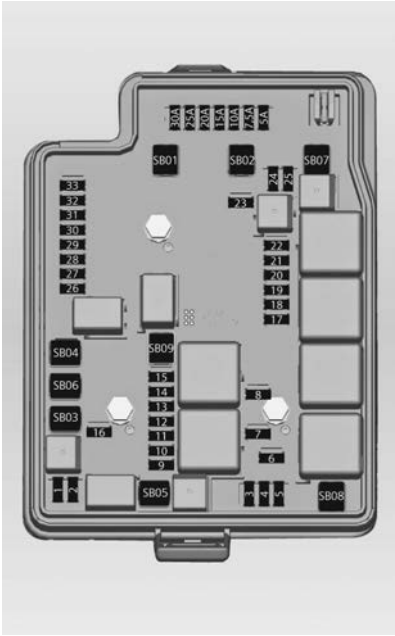

The vehicle may not be equipped with all of the fuses, relays and features shown.

Fuses

1	COMPRESSOR A/C CLUTCH	(10A)
2	BODY CONTROL MODULE BATT6	(15A)
3	SPARE	(15A)
4	REAR LATCH	(10A)
5	HORN	(15A)
6	FRONT FOG LAMP	(15A)
7	HIGH BEAM LH	(10A)
8	HIGH BEAM RH	(10A)
9	SPARE	(10A)
10	ENGINE_3	(15A)
11	ENGINE CONTROL MODULE1	(20A)
12	ENGINE_1	(10A)
13	ENGINE_2	(10A)
14	ENGINE_4	(15A)
15	PWT	(15A)
16	TCM	(15A)
17	TRANSFER CASE MODULE AND LAMP LEVELLING	(10A)
18	CLUSTER - A/C - SDM	(10A)
19	FUEL PUMP	(20A)
20	SPARE	(5A)
21	REAR WINDOW HEATER	(30A)

22 OUTSIDE REARVIEW MIRROR..... (15A)
23 VISCOUS HEATER..... (15A)
24 REAR WIPER..... (20A)
25 FRT/REAR WASHER..... (10A)
26 REAR PARK ASSIST ..... (10A)
27 BODY CONTROL MODULE RVC ..... (5A)
28 DRL/COLD START..... (7.5A)
29 ABS MODULE ESC1 ..... (30A)
30 CONTENT THEFT RELAY ... (10A)
31 BODY CONTROL MODULE BATT7..... (15A)
32 ENGINE CONTROL MODULE..... (15A)
33 COMMON ENABLE ..... (10A)

SB01 ABS MODULE PUMP ..... (50A)
SB02 TRANSFER CASE CONTROL MODULE (4X4).. (30A)
SB03 GLOW PLUG MODULE (DIESEL)..... (60A)
SB04 SPARE ..... (20A)
SB05 STARTER MOTOR SOLENOID..... (30A)
SB06 FRONT WIPER ..... (30A)
SB07 FUEL HEATER..... (30A)
SB08 -
SB09 SPARE ..... (30A)

Instrument panel fuse box

The fuse box is in a storage compartment on the driver side of the instrument panel.

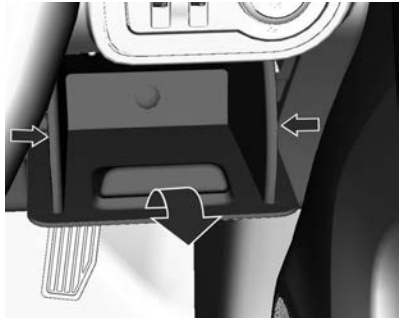

1. Press the sides of the storage compartment inwards.

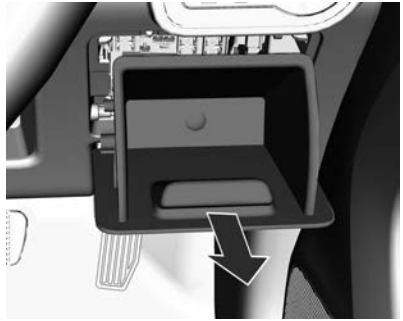

2. Lift the storage compartment until it audibly disengages.
3. Remove by pulling rearwards.
4. Reinstall in the reverse order.

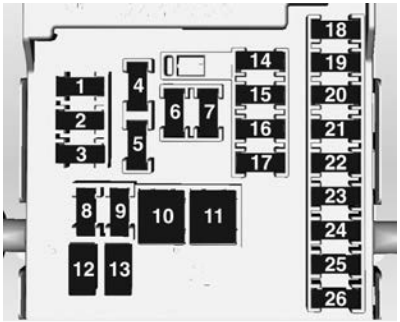

The vehicle may not be equipped with all of the fuses, relays and features shown.

Fuses

1 HVAC AUTO ..... (10A)
2 BODY CONTROL MODULE (6)..... (30A)
3 BODY CONTROL MODULE (5)..... (15A)
4 CIGAR LIGHT AND POWER OUTLET..... (20A)
5 CLOCK SPRING ..... (2A)
6 POWER WINDOW ..... (30A)
7 POWER OUTLET..... (20A)
8 BODY CONTROL MODULE (2)..... (15A)
9 BODY CONTROL MODULE (4)..... (15A)
10 BODY CONTROL MODULE (8)..... (30A)
11 RAP & ACCESSORY 12V .... (40A)
12 -
13 -
14 DATA LINK CONNECTOR (DLC)..... (7.5A)
15 SENSING AND DIAGNOSTIC MODULE (SDM)..... (10A)
16 INSTRUMENT PANEL CLUSTER (IPC) ..... (10A)
17 RADIO ..... (20A)
18 HVAC BLOWER ..... (30A)
19 OUTSIDE REARVIEW MIRRORS ..... (5A)
20 -
21 HVAC CONTROL HEAD ..... (10A)
22 IGNITION SWITCH .....(2 A)
23 BODY CONTROL MODULE (5)..... (15A)
24 BODY CONTROL MODULE (3)..... (15A)
25 POWER WINDOW SWITCH ..... (20A)
26 POWER SEAT..... (25A)

Vehicle tools

Tools

The jack and tools are located behind a cover on the driver side of the load compartment. See Tyre changing on page 216.

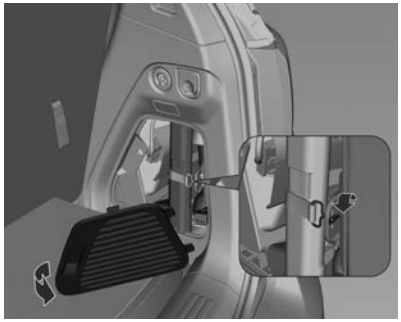

1. Lift lever to unlatch.
2. Remove the cover
3. Unhook the strap.
4. Remove the jack.
5. Remove the tools.

Wheels and tyres

Tyre and rim condition

- To avoid tyre and rim damage and possible tyre blowout, do not drive over sharp edges.
- Drive over edges slowly and at right angles, if possible.
- When parking, ensure the tyres are not pressed against the edge of the kerb.
- Check the tyres regularly for damage, stones, punctures, cuts, cracks, bulges etc. Check the rims for damage. Contact a Holden Dealer, if in doubt.

Tyre pressure

Keep the tyres at the recommended pressures to avoid increased fuel consumption, uneven and premature tyre wear.

- Tyre pressure should be checked when cold as tyre pressure will increase as the tyres warm up.
- Check the air pressure of tyres (including the spare) weekly, to ensure occupant safety, as well as reducing fuel consumption and increasing the life of the tyres.
- Replace any valve dust caps or extensions.

Tyre placard

The correct pressures for tyres are shown on the tyre placard in the driver's door frame and in the tyre pressure table. See Tyre pressure on page 237.

Always inflate the spare tyre to the pressure specified for maximum load.

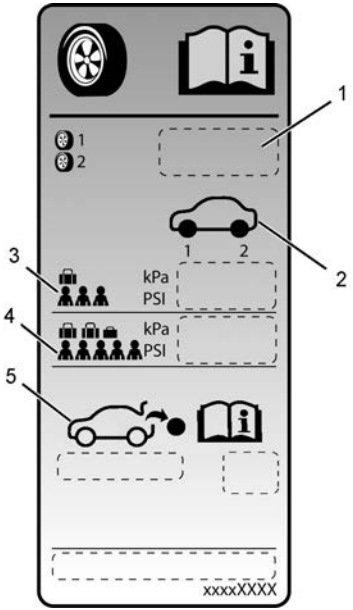

1. Tyre specifications
2. Tyre positions
3. Normal load (up to three people)
4. Full load
5. Spare tyre information

Tread depth

Check tread depth at regular intervals.

- Replace the tyres when:

  They are worn to the point where the tread wear indicators (TWI) appear.
- If there is more wear on the front tyres than on the rear, swap the front and rear wheels.

  Ensure that the direction of rotation of the wheels is the same as previous.
- Tyres age, even if they are not used. Replacement of tyres every six years is recommended.

⚠Warning

Do not attempt to drive on a flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Tyres which have been repaired or retreaded are not capable of being driven safely at high speeds. Therefore, their use is not recommended.

Buying new tyres

Refer to the tyre placard on the vehicle for tyre size and load rating.

Using a different size or type of tyre may affect:

- Ride
- Handling
- Speedometer accuracy
- Vehicle ground clearance
- Tyre clearance
- Snow chain clearance

⚠Warning

Do not use different sizes or types of tyres and wheels than those originally fitted to the vehicle. Safety and performance of the vehicle may be affected. It may also affect handling and lead to serious injury.

When replacing tyres, install all four tyres and wheels of the same size, type, tread, brand and load-carrying capacity.

Wheel covers

Use wheel covers and tyres that are factory approved for the vehicle and which comply with all of the relevant wheel and tyre combination requirements.

⚠Warning

Use of incorrect tyres or wheel covers may result in damage to the vehicle and personal injury.

Tyre chains

- Tyre chains should be fitted only on the rear wheels.
- Remove large hub caps and valve extensions that contact parts of the chain.

⚠Warning

Tyre chains may only be used at speeds up to 50 km/h. Tyre chains should only be used for short distances if the roads are not snow covered. The hard road surface causes rapid wear and the chain may break. Tyre chain links should not be thicker than 13 mm and the clasp should be well away from the bodywork. Thicker chains may damage the vehicle body.

- Check the tyre placard for correct tyre pressures. See Tyre placard on page 213.
- Whenever tyre chains are fitted, switch off the ESC. See Electronic Stability Control (ESC) on page 169.
- If driving in snowy conditions with a snorkel, see Snorkel intake on page 186.

Tyre changing

⚠Warning

All passengers must be out of the vehicle when it is being jacked.

Do not jack a vehicle with a trailer attached. Remove the trailer first.

Only jack the vehicle on hard, level surfaces.

Ensure moving parts of the jack are adequately lubricated before use.

Use the jack only at the designated lifting points. Use in other locations may result in the vehicle falling off the jack, or damage to the vehicle.

Do not start or run the engine while the vehicle is supported by the jack.

Use the jack only for lifting the vehicle when changing wheels.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

Vehicles with alloy wheels may have a steel spare wheel. Drive carefully and do not exceed 80 km/h if the tyre size or tread pattern of the spare tyre is different to the other tyres on the vehicle. Although the spare tyre was fully inflated when the vehicle was new, it can lose air over time. Check the inflation pressure regularly.

After installing the spare tyre on the vehicle, stop as soon as possible to check the inflation pressure is correct. Have the flat tyre repaired or replaced and installed back on the vehicle as soon as possible.

1. Park on a hard, level surface, in a safe location.
2. Apply the park brake firmly.
3. Place the shift lever in position **P**.
4. Switch the hazard warning flashers on.
5. Turn off the engine and remove the key.
6. Chock the wheel diagonally opposite the flat tyre with a suitable solid object.

   Note
   Do not change more than one wheel at one time.
7. Remove the tools. See Vehicle tools on page 212.

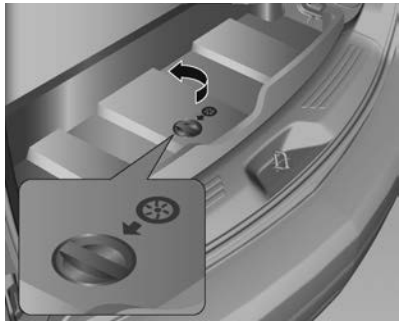

8. Rotate the spare wheel winch access cap anticlockwise to remove. Lift the carpet flap to access the winch slot.
9. Assemble the wheel wrench, jack handle extensions and the jack handle using a screwdriver.
10. Insert the chiselled end of the jack handle through the hole and into the slot.

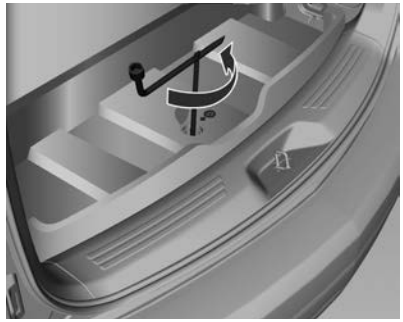

11. Rotate the wheel wrench anticlockwise to lower the spare tyre to the ground.
12. Continue to rotate the wheel wrench until the spare tyre can be pulled out from under the vehicle.

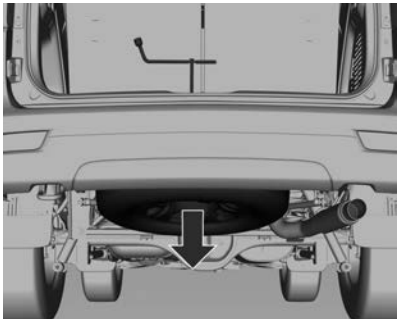

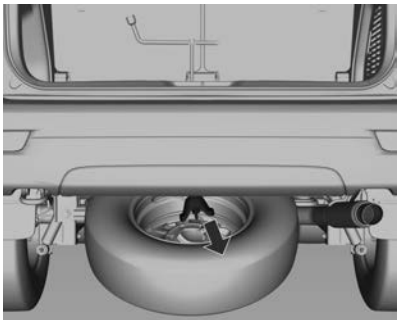

13. Tilt the retainer and slide it up the cable so it can be pulled up through the wheel opening.

14. Place the spare tyre near the flat tyre.

Wheel nut removal

15. Remove the centre cap by placing the chisel end of the wheel wrench into one of the slots on the cap and gently prise the cap out.

Note
To protect the wheel, place a soft cloth between the wheel wrench and the wheel.

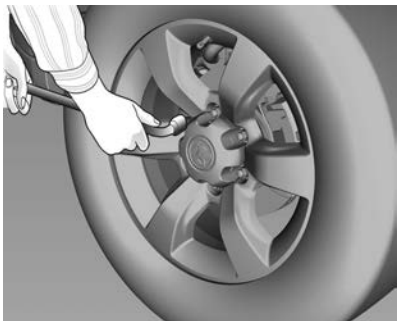

16. Turn the wheel wrench anticlockwise to loosen all the wheel nuts.

Note
Do not remove the wheel nuts at this stage.

Jacking procedure

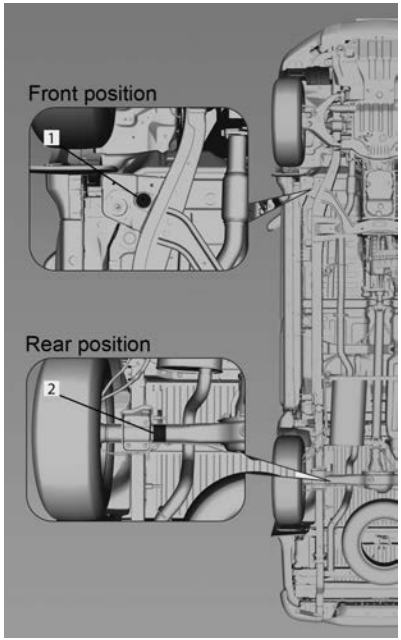

Front position:

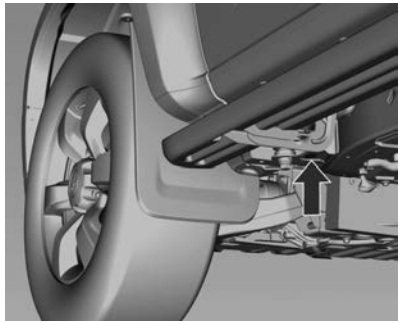

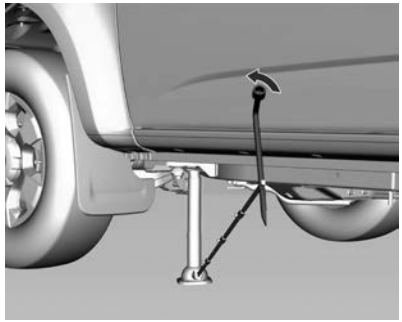

If the flat tyre is on the front of the vehicle, position the jack to the rear of the front tyre in the cut out on the frame (1).

Rear position:

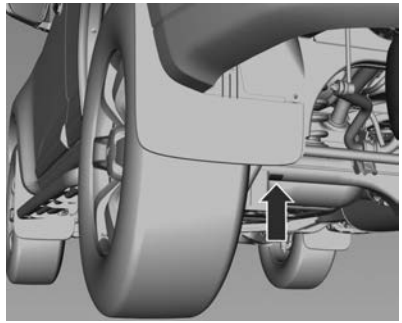

If the flat tyre is on the rear, position the jack under the rear axle and get as close as possible to the shock absorber (2).

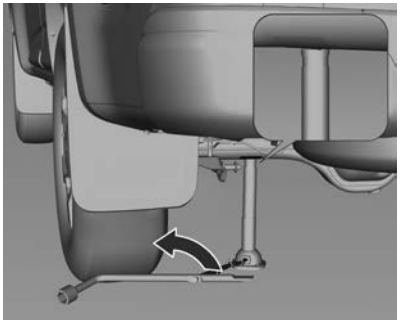

When positioning the jack under the rear axle housing, confirm that the slot on the upper side of the jack fits on the axle.

17. Set the jack to the necessary height before positioning it directly below the jacking point in a manner that prevents it from slipping.

⚠Warning

Failure to position the jack as described could cause the vehicle to slip off the jack.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

18. Attach the jack handle and with the jack correctly aligned.
19. Rotate the handle until the wheel is clear of the ground.
20. Remove the wheel nuts.
21. Exchange the wheel on the vehicle with the spare wheel.
22. Remove any rust or dirt from the wheel nuts and studs, mounting surfaces and spare wheel.

⚠Danger

Never use oil or grease on bolts or nuts as the nuts may come loose. The vehicle wheel could fall off and may lead to serious injury or death.

23. Put the wheel nuts back on with the rounded end of the nuts towards the wheel.
24. Tighten each wheel nut by hand, then use the wheel wrench to tighten the nuts until the wheel is held against the hub.
25. Lower the vehicle by reversing the jacking procedure.
26. Remove the jack from under the vehicle.

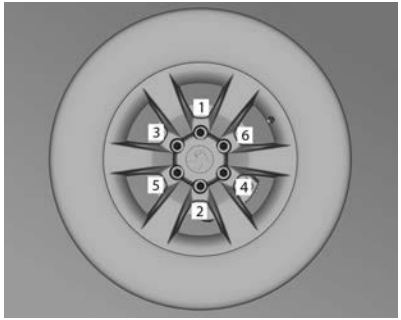

27. With the wheel on the ground, use the wheel wrench to tighten the wheel nuts in a crosswise sequence.

⚠Warning

As soon as possible after changing a wheel, have the wheel nuts tightened with a torque wrench to 118 Nm (Newton metres). Wheel nuts must be tightened evenly to the correct torque, as wheel nuts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

28. Stow the replaced wheel, by reversing Steps 8 to 13.
29. Stow the tools in the storage compartment. See Vehicle tools page 212.
30. Have the flat tyre renewed or repaired.

When reinstalling the repaired wheel:

1. Install the centre cap.
2. Place the cap on the wheel and tap it into place until it is flush with the wheel.

Jump starting

Read the following warnings and procedure in full before attempting to jump start the vehicle.

If you are still unsure about jump starting, Holden strongly recommends for your safety and that of the vehicle that you seek the assistance of a suitably trained service technician.

⚠Warning

Do not push start or tow start the vehicle. Therefore, if the battery is flat, jump start, but do not push start the vehicle.

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, adhere to the following when working near a battery:

- Do not attempt jump starting directly from the battery in the engine compartment.
- Do not let the jumper lead clamps touch each other or other metal parts.
- Do not allow the jumper leads to contact any rotating engine components.
- Do not use open flames or sparks near the battery.
- Do not smoke near the battery.
- Never use a quick charger to start the engine.
- The battery must be removed from the vehicle for recharging.
- Wear eye protection such as safety glasses and avoid leaning over the battery.
- Battery acid is corrosive. If it gets on your skin, wash with plenty of water immediately. If it gets in your eyes you should not only flush with lots of water, but should also seek medical help. Battery acid also damages paint and fabrics. To minimise damage, wash it off immediately.
- Remove rings, metal watch bands and other metal jewellery before working around the battery.
- If a permanently connected hands free telephone kit is fitted to the vehicle, remove the fuse for the telephone kit before jump starting. Remember to replace the fuse afterwards.

- A discharged battery can freeze at temperatures of 0°C.

  Defrost the frozen battery before connecting jumper leads.
- Use a booster battery with the same voltage (12 volts). Its capacity (Ah) must not be much less than that of the discharged battery.
- Use jumper leads with insulated terminals and a cross section of at least 25 mm^2.
- Do not disconnect the discharged battery from the vehicle.
- Switch off all unnecessary electrical devices.

- Do not allow the terminals of one lead to touch those of the other lead.
- The vehicles must not come into contact with each other during the jump starting process.

Jump starting procedure

1. Position the two vehicles so that they are not touching.
2. Apply the park brakes.
3. Place the shift lever in position **P**.
4. Turn the ignition off.
5. Turn off all lamps and accessories in both vehicles, except the hazard warning flashers or any lights needed for the work area.

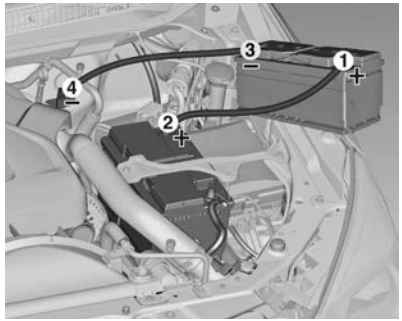

6. Connect one end of the RED lead to the positive terminal of the booster battery (1).
7. Connect the other end of the RED lead to the positive terminal of the discharged battery (2).
8. Connect the BLACK lead to the negative terminal of the booster battery (3).
9. Connect the other end of the black lead to a vehicle grounding point, such as the engine block or an engine mounting bolt (4).

   Connect as far away from the discharged battery as possible (at least 60 cm).

   Note
   Route the leads so that they cannot catch on rotating parts within the engine compartment.
10. Start the engine of the vehicle providing the jump start and allow to idle for at least 5 minutes.
11. Start the engine of the vehicle with the flat battery.

    Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
12. Allow both engines to idle for approximately 3 minutes with the leads connected.

13. Switch on the headlamps and the heated rear window of the vehicle that received the jump start.
14. Leave the engines running while removing the BLACK negative jumper lead first, followed by the RED positive jumper lead.

Note
While removing each clamp, do not touch any other metal while the other end remains attached.

Towing

Towing the vehicle

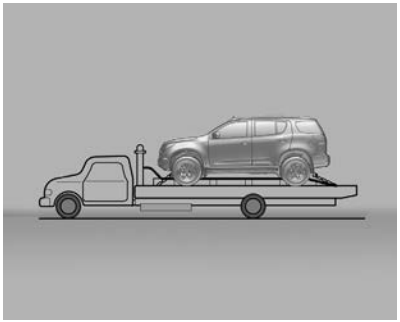

A flat-bed tow truck is the best method of towing the vehicle to avoid damage.

⚠Warning

No passenger should remain in the vehicle being towed.

Proper lifting or towing equipment is necessary when lifting or towing the vehicle to prevent damage. State and local laws must be followed.

In an emergency, the vehicle may be towed on all four wheels for short distances only, using the front towing eyes.

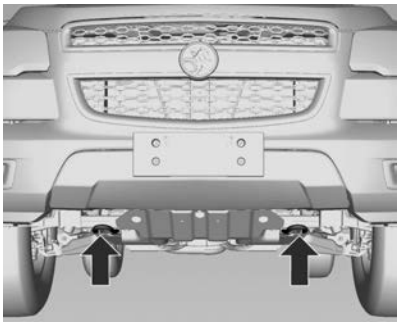

Caution

No load applied to an individual front towing eye shall exceed 1,500 kg (static or dynamic).

Emergency towing procedure

Tow only on hard-surfaced roads for a short distance and at low speeds:

1. Fit the towing equipment to the front towing eyes.

   Do not attach towing equipment to the bumpers or brackets, suspension or cross members.
2. Turn the ignition key to **ON** to enable the steering lock, windscreen wipers and turn signals operation.
3. Place the shift lever in position **N**.
4. Release the park brake.

   Note

   If the vehicle's battery is flat and the vehicle requires towing, see Interruption of power supply on page 161.

Notes

- A driver must be in the vehicle to steer and operate the brakes.
- Drive slowly when towing.
- Power assist for brakes and power steering are not available when the engine is turned off. The brakes and steering still function, but require greater effort.
- To prevent exhaust fumes entering the towed vehicle, close the windows and press .
- Vehicles with damaged transmissions must not be towed.
- The wheels, axles, drive train, steering and brakes must be in good condition.
- Only the driver should be inside a towed vehicle.

Towing another vehicle

In an emergency, another vehicle may be towed using the rear towing eye. State and local laws must be followed.

Caution
No load applied to a rear towing eye shall exceed 1,375 kg (static or dynamic).

Vehicle recovery

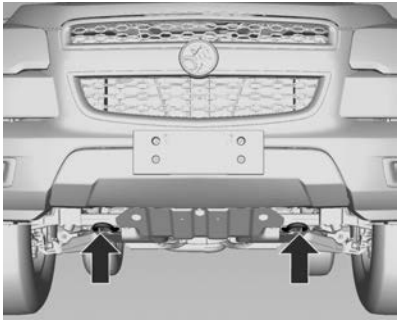

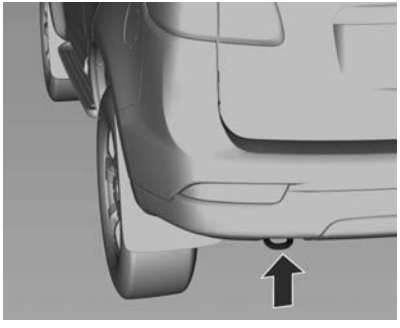

The vehicle may be recovered using the front or rear towing eyes.

Attach a tow rope or other suitably rated system to the towing eyes.

Ensure all equipment is in good condition and is being used correctly.

Caution

The front towing eyes are rated to 1,500 kg each and the rear towing eye to 1,375 kg. Any load (static or dynamic) applied to these locations must not exceed the rated capacity of each point.

Care should be taken not to damage the bumper fascia or other vehicle components with the tow rope or recovery system, during recovery.

Appearance care

Exterior care

Washing

The paintwork of the vehicle is exposed to environmental influences. Wash and wax regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage. Failure to do so may result in permanent damage, particularly in hot weather conditions.

Road bloom is a gradual build up of road and environmental grime. This should be removed with a paint cleaner once a year, in addition to normal washing.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. Never use an automatic wash that requires anything touching the paint (other than water). The wipers must be switched off. Remove the antenna and external accessories.

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Have the door hinges of all doors greased by a Holden Dealer.

Caution

Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and chamois off the vehicle. Rinse chamois frequently. Use separate chamois for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

⚠Warning

Take care when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Exterior lamps

Headlamp and other lamp covers are made of plastic. Do not use any abrasive, solvent based cleaners or caustic agents and do not dry-clean them.

Air intakes

Clear debris from the air intakes, between the bonnet and windscreen and below the front bumper, when washing the vehicle.

Polishing and waxing

Wax the vehicle regularly (at the latest when water no longer beads).

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

Windows and windscreen wiper blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

- Never use abrasive cleaners to clean glass.
- Refer to a Holden Dealer for windscreen washer additive.
- Old wiper blades can cause windscreen scratching. Regularly inspect and replace them.

Caution
Do not operate the wiper blades by hand as this damages the wiper drive mechanism.

When cleaning the rear window, make sure the heating element inside is not damaged.

Clean smearing wiper blades with a soft cloth and window cleaner.

Wheels and tyres

Do not use high-pressure jet cleaners.

- Remove oil and grease with soap and water or detergent.
- Do not use petrol to clean tyres.
- Use a good quality tyre and bumper shine if required.
- A good quality wheel cleaner can be used for cleaning alloy wheels.
- Do not use abrasive cleaners.

Paintwork damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by your Holden Dealer.

Caution
Do not spill coolant on the vehicle's exterior surfaces as it can damage the paint work. If you do, wash it off immediately.

Underbody

Substances can cause rust under the vehicle.

- Hose the underbody with clean water whenever the vehicle is washed.
- Where the vehicle is exposed to heavy concentrations of corrosive materials, inspect and wash the complete underbody at least once each year, preferably after winter exposure.

Interior care

⚠Warning

Many cleaning products are toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Ensure that the vehicle is well ventilated while using any cleaners and always follow the cleaning product manufacturer's recommendations. Water based cleaners, rather than solvent based cleaners, are recommended.

Steam cleaning of seats is not recommended.

Interior and upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with a mild, non-abrasive soap and lukewarm water.

After washing, thoroughly, sponge the solution out of the belts.

Caution

Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.

Plastic and rubber parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

Floor mats

Ensure that floor mats, when fitted, are securely fastened.

Service and maintenance

General information 230
Recommended fluids, lubricants and parts 231

General information

Service information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

See your Service/Warranty Booklet for the service schedules and for more information.

Engine oil life system

The vehicle has a computer system that lets you know when to change the engine oil and filter.

The frequency of the oil change depends on driving patterns, engine RPM and engine temperature.

When the system has calculated that oil life has been diminished, Change engine oil soon will appear in the Driver Information Centre (DIC).

When Change engine oil soon is displayed, have the engine oil and filter changed as soon as possible, within the next 1,000 km.

It is possible that, if you are driving under the best conditions, the oil life system may not indicate that an oil change is necessary for a longer period than that shown in the Maintenance schedule. However, the engine oil and filter must be changed in accordance with the Maintenance schedule outlined in the Service/ Warranty Booklet.

Recommended fluids, lubricants and parts

Engine type	2.8 L diesel
Engine oil specification	SAE 5W-30; dexos (dexos™ 2)
Coolant specification	50% clean fresh water and 50% Dexcool® anti-freeze coolant, conforming to specification number GM6277M
Automatic transmission fluid	Dexron® VI
Transfer case fluid (four-wheel drive)	Dexron® VI
Differential oil	Synthetic Hypoid 75W/90 GL5
Brake fluid	DOT 4 Hydraulic brake fluid, conforming to specification number GMW3356
Power steering fluid	Dexron® VI
Battery	12 volts, 90 amp hours

Technical data

Vehicle identification 232
Vehicle data 234

Vehicle identification

Vehicle identification number (VIN)

The Vehicle Identification Number (VIN) is located on the chassis rail on the driver side.

The VIN is also located on the instrument panel visible through the windscreen.

Identification label

An identification label is located on the front driver's door frame.

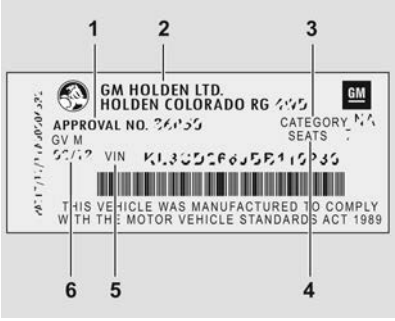

1: Approval number
2: Manufacturer
3: Category
4: Number of seats
5: Vehicle identification number
6: Compliance date

Engine number

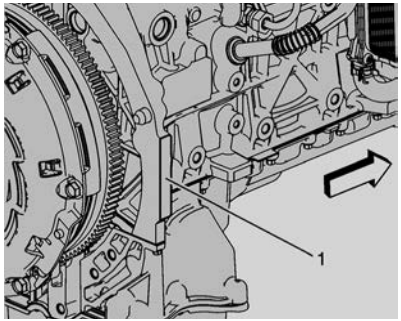

⇨: Front of vehicle

The engine serial number (1) is located on the right side at the rear of the engine block.

Vehicle data

Engine data

Engine type	2.8 L L4 Turbo Diesel
Number of cylinders	4
Engine	2776 cc
Engine power	Please refer to holden.com.au
Engine torque	Please refer to holden.com.au
Diesel fuel	Meeting Euro Standard EN590

Vehicle weight

Overloading is a safety hazard and could also shorten the life of the vehicle.

Maximum vehicle carrying capacity

	Carrying capacity (occupants, accessories and luggage) (kg)
LT	650
LTZ	615

Example loading guide

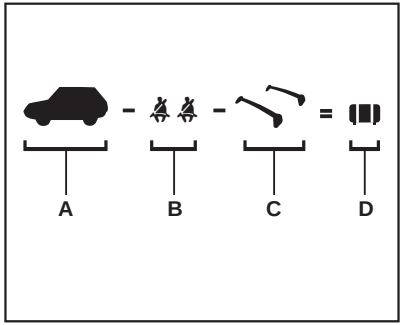

Example 1:

A. Vehicle carrying capacity (example 650 kg)
B. Subtract occupant weight (example 2 x 80 kg = 160 kg)
C. Subtract mass of fitted accessories (see the following table) (example 82 kg)
D. Available luggage capacity (650 – 160 – 82 = 408 kg*)

*Subject to axle loads not being exceeded. See Axle loads on page 236.

Example 2:

A. Vehicle carrying capacity (example 650 kg)
B. Subtract occupant weight (example 5 x 80 kg = 400 kg)
C. Subtract mass of fitted accessories (see table below) (example 40 kg)
D. Available luggage capacity (650 – 400 – 40 = 210 kg*)

*Subject to axle loads not being exceeded. See Axle loads on page 236.

Accessory mass examples

Towbar	31 kg
Bull bar	51 kg
Nudge bar	6 kg
Cargo barrier	12 kg
Snorkel	3 kg

Axle loads

Maximum front and rear axle loads

Do not exceed the maximum axle loads, including the weight of any options, towball download when towing, or accessories fitted to the vehicle. Weigh at a weighbridge if unsure.

	Front axle load (kg)	Rear axle load (kg)
All models	1450	1600

Dimensions (mm)

	Length	Width (incl. mirrors)	Height (incl. roof rail)	Front and rear track	Front overhang	Wheel base
LT	4878	2132	1834	1570	948	2845
LTZ	4878	2132	1847	1570	948	2845

The above figures are based on the design dimensions.
Note Length of cab chassis is determined by tray or body fitted.

Capacities

Engine type	2.8 L L4 Turbo Diesel
Refill engine oil including filter (approximately)	5.7 L
Coolant (approximately)	9.0 L
Fuel tank	76.0 L

Tyre pressure

Tyre size	Wheel size and profile	Recommended pressure									
		Normal load				Maximum load				Spare	
		Front		Rear		Front		Rear		-	
		kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
245/70 R16 111S	16x6.5J	240	35	240	35	240	35	280	40	280	40
265/60 R18 110T	18x7.5J	240	35	240	35	240	35	280	40	-	-

Customer information

Customer satisfaction procedure 238
Customer assistance offices..... 238

Customer satisfaction procedure

We want you to be happy with your new vehicle, together with the people you deal with while you have the vehicle.

Normally, any problems with the sales, operation, servicing, parts/accessories or the validity of original equipment supplied with your vehicle will be handled by your Holden Dealer Sales and Service Department.

We realise however that, with the best intentions, misunderstandings sometimes occur.

Therefore, we suggest you discuss any concern with one of the Holden Dealer management people.

If you have not received satisfaction from the Sales Manager or Service Manager, go to the General Manager or to the Dealer Principal.

By now you should have satisfaction. If not, the Holden Customer Assistance office is at your disposal.

Customer assistance offices

Australia

The Holden Customer Assistance representatives can be telephoned from anywhere within Australia for only the cost of a local call.

The contact number is:

1800 033 349

Naturally, telephoning is the quickest and the best way to contact. However, if you prefer to write the address is:

The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne 3001

Your letter should clearly outline your concern or query and include:

- Your name and address
- Telephone numbers, both private and business
- Servicing dealer's name and address
- Vehicle model
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the Service/ Warranty Booklet in your vehicle's glove box
- Date of purchase
- Current odometer reading

Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of the Service/Warranty Booklet in your vehicle's glove box.

Before you write however, remember that the telephone is the quicker and more efficient means of communication.

New Zealand

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand.

Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glove box wallet.

New Zealand Assistance can be reached on:

0800 HOLDEN (**0800 465 336**)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Assistance.

If you prefer to write the address is:

The Manager
Holden Customer Assistance Centre
PO Box 11195
Ellerslie
Auckland 1542

Trademarks and licence agreements

About DivX® video

DivX® is a digital video format created by DivX®, LLC, a subsidiary of Rovi Corporation.

This is an official DivX Certified® device that plays DivX® video. Visit divx.com for more information and software tools to convert your files into DivX® videos.

About DivX® video-on demand

The DivX Certified® device must be registered in order to play purchased DivX® Video-on-Demand (VOD) movies. See DivX® VOD on page 128.

To obtain a registration code, locate the DivX® VOD section in the device setup menu. Go to vod.divx.com for more information on how to complete your registration.

A

Accessories
- Power outlet 65
- Retained Accessory Power (RAP) 157

Active safety systems
- Antilock Brake System (ABS)..... 166
- Electronic Stability Control (ESC) 169

Airbags 43
- Airbag fault warning 71
- Airbags and child restraints..... 47
- SRS warning light..... 71

Air conditioning..... 143
- Rear compartment ..145, 149, 150

Air filter 193
Air pressure, tyres 213, 237
Air vents..... 150
Alarm system..... 22
Alternator warning light..... 72
Anchorage points, child restraints..... 50, 51
Anti-freeze specification 231
Antilock Brake System (ABS).... 166
Armrest storage..... 57
Assistance 238
Assist grips 28
Audio controls..... 95
Automatic transmission 13, 159
- Fluid 193, 231
- Manual mode 160
- Messages..... 80

Auxiliary devices.....118
Axle loads..... 182, 236

B

Battery 197, 231
- Disconnection..... 198
- Jump starting..... 221
- Replacement..... 198

Battery power protection..... 93
Bluetooth® music 121
Bluetooth® phone..... 128
Bonnet 189
Brakes 154, 166
- ABS 166
- ABS warning light..... 73
- Brake fluid 196, 231

Brakes continued
- Park brake..... 167
- Warnings 78

Bulb replacement..... 199
Bull bars..... 185

C

Camera (rear vision)..... 175
Capacities, fluid 236
Caravan, towing..... 181
Carbon monoxide, warning..... 177
Car key 16
Central locking..... 4, 16
Central locking system 18
Changing a flat tyre 216
Child restraints..... 47
- Anchorage points 50
- Anchor points 51
- Seat belt locking feature..... 48
- Types of restraint..... 47

Child safety locks..... 20
Child safety switch..... 27

Cleaning 226
Camera 177
Exterior 226
Interior 229
Climate control 13, 143
Clock 124
Console 55
Coolant
Capacities 236
Engine coolant 194
Message 79
Specification 231
Temperature gauge 68
Cover
Load compartment 58
Cruise control 172
Cup holders 55

D

Dashboard layout 9
Demisting windows 148
Descent Control System (DCS) 170
Diesel 154, 178
Fuel filter 198
Fuel system bleeding 199
Differential oil 231
Dimensions 236
Dimmer, instrument lighting 91
Dipping headlamps 10, 88
Dipstick
Engine oil 192
Display information 66, 76
DivX® 128, 239
Door ajar light 78
Doors 19
Child safety locks 20
Key 16
Locking and unlocking 18, 19
Lock snibs 19
Driving 153
Parking 158
Running-in 153
Safety 153
Starting the engine 157
Driving lamps 185
Driving precautions 153

E

Electrical system 208
Electric mirrors 24
Electric seat 33
Electric windows 26
Electronic Stability Control (ESC) 169
Warnings 82
Emergencies
Bulb replacement 199
Changing a flat tyre 216
Customer assistance 238
Engine overheating 194
Flat battery 221
Flat tyre 216
Fuse replacement 208
Towing the vehicle 224
Emissions 187

Engine
Adding oil 192
Air filter 193
Compartment 191
Cooling system 194
Number location 233
Oil life system 230
Overheating 194
Specifications 234
Starting 14, 157
Temperature warning 79
Warnings 79
Engine oil 192
Capacities 236
Dipstick 192
Specification 231
Ethanol 178
Exhaust fumes, warning 177
Exit lighting 93
Exterior lighting 10, 88
Exterior mirrors 7, 24

F
Fan, climate control 144
Flat battery 221
Flat tyre
Changing a flat tyre 216
Fluid levels
Automatic transmission 193
Brake 196
Coolant 194
Engine oil 192
Power steering 195
Windscreen washer fluid 196
Fog lamps 90
Four-wheel drive 162
Front seats 31
Fuel 177
Ethanol 178
Fuel cap 179
Fuel types 178
Fumes warning 178
Gauge 67
Precautions 177
Refuelling 179
Tank capacity 236
Warnings 81
Fuses and relays 208

G
Gas cylinders 156
Gauges 66
Engine temperature 68
Fuel 67
Information displays 66
Odometer 66
Speedometer 66
Tachometer 67
Glove box 55

H
Hand brake 167
Hands-free phone 133
Hazard warning 11, 89
Headlamps 88
Headlamp range adjustment 89
High beam indicator light 75
Operation 88
Head restraints 6, 29
Heated rear window 27, 144
Heating and ventilation 143, 146
High beam 10, 75, 88

Hill Start Assist (HSA)..... 168
Horn.....11, 62

I
Identification label..... 232
Identification number 232
Ignition switch/lock..... 156
Immobiliser 23
Indicators/warning lights..... 66
Infant and child restraints 49
Inflation, tyres 213, 237
Infocard..... 17
Information displays..... 66, 76
Infotainment system 94
Audio players 106
Auxiliary devices 118
Bluetooth® music 121
Bluetooth® phone 128
Controls..... 95
iPod® 110
Movie system 115
Operation 96
Personalisation..... 123
Picture system.....113
Radio..... 101
Infotainment system continued
Smartphone link 137
Time/date settings..... 124
USB port..... 108
Instrument panel..... 9, 69, 91
Interior lighting 91
Interior mirrors 25
iPod®.....110

J
Jack 216
Storage..... 212
Jump starting 221

K
Keys
Code number 17
Ignition key 4, 16
Infocard for keys..... 17

L
Lamp messages 81
Lighting..... 88
Battery power protection 93
Bulb replacement 199
Courtesy lamp..... 91
Lighting continued
Dimmer..... 91
Driving lamps 185
Entry lighting 93
Exit lighting..... 93
Exterior..... 10, 88
Fog lamps 90
Hazard lamps.....11, 89
Headlamp range adjustment.... 89
Headlamps..... 88
High/low beam 10, 88
Interior lamps 91
Lamp control 88
Reading lamps..... 92
Reversing lamps 90
Turn signals.....11, 90
Load compartment cover..... 58
Load compartment lamps..... 92
Loading capacity..... 234, 236
Loading the vehicle..... 60, 234

Locks
Bonnet lock 189
Child safety locks 20
Door locks 19
Ignition switch/lock 14, 156
Locking and unlocking..... 16

M
Maintenance 188
Manual door locks 19
Mirrors 7, 24
Exterior..... 24
Interior 25
Movie system.....115

N
New vehicle running-in 153
Nudge bars 185
Number location (engine) 233

O
Odometer..... 66
Oil
Adding oil 192
Checking oil level 192
Differential oil 231
Oil continued
Dipstick..... 192
Message..... 79
Overheating 194
Message..... 79

P
Park Assist (PA)..... 174
Park brake 167
Park brake warning 72
Parking 15, 158
Personalisation 123
Personalisation settings..... 85
Phone 128
Picture system 113
Polishing 227
Pollen filter..... 152
Power mirrors 24
Power outlets..... 65
Power seat..... 33
Power steering fluid 195, 231
Power windows..... 26
Puncture 212
Push/tow start warnings 221

R
Radio 101
Reading lamps..... 92
Rear air conditioning.. 145, 149, 150
Rear seats 34
Rear view mirror 25
Rear Vision Camera (RVC) 175
Rear window demister..... 27, 144
Rear window wiper/washer..... 64
Refuelling..... 179
Relays..... 208
Remote control 18
Restraints 29
Child restraints 47
Infant restraints 49
Retained Accessory Power (RAP)..... 157
Ride control systems 168
Roo bars 185
Roof rack loads..... 60
Running-in a new vehicle 153

S
Seat belts 7, 40
Force limiters 40
Height adjustment 42
Locking (child restraints) 48
Seat belt warning 70
Tensioners 40
Seats 29
Adjustment 4, 31
Child restraints 47
Front seats 31
Head restraints 6, 29
Rear seats 34
Security
Alarm 22
Card/numbers 17
Key code 17
Servicing 230
Snorkel intake 186
Snow chains 215
Specifications 231, 234
Axle loads 236
Capacities 236
Dimensions 236
Engine 234
Loading 234
Towing capacity 181
Tyre pressure 237
Speedometer 66
Stability control 169
Messages 82
Starting 153
Flat battery 221
Normal 14, 157
Steering 8, 61
Power steering fluid 195, 231
Tilt 8, 61
Steering wheel controls 61
Audio 96
Cruise control 172
Storage compartments 53
Sunglasses holder 56
Sun visor lamps 92
Sun visors 28
Supplemental Restraint System (SRS) 44

T
Tachometer 67
Tailgate lock 21
Tank capacity 236
Technical data 232
Telephone 128
Temperature gauge 68
Tilt steering 61
Time and date settings 124
Tools 212
Towing 181, 224
Another vehicle 225
Caravan/trailer 181
Equipment 183
Loading 181
Precautions 184
Vehicle recovery 226
Traction Control System (TCS) 168
Trademarks and licence agreements 239
Trailer towing 181

Transfer case 163, 231
Transmission
  Automatic 13, 159
  Fluid 231
Trip computer 83
Turn signals 11, 90
Tyres
  Chains 215
  Changing 216
  Placard 213
  Pressure 213, 237
  Replacement 214
  Rotation 214
  Tread depth 214

U
USB port 108

V
Vanity mirror 28
Vehicle care 187
Vehicle checks 189
Vehicle data 234
Vehicle Identification Number (VIN) 232
Vehicle loading 234
Vehicle personalisation 85
Vehicle storage 188
Vehicle weight 234
Vents 150

W
Warning lights 66
Washing the vehicle 226
Water crossing 155
Weight (vehicle) 234
Wheels and tyres 213
Windows 26
  Safety function 27
Windscreen demister 144, 148
Windscreen washer fluid 196
Wiper blades 228
  Replacement 199
Wipers and washers 12, 62